



VALENCIA & PROFESSIONAL SERIES SHOWER DOOR HANDLE

INSTALLATION GUIDE

Unpack handle, and check if any components are missing.

Handle rail (x1)


Standoff (x2)

Washer PVC 12.5 mm (x4)

Washer flat (x4)


Washer PVC 21 mm (x4)

Door knob (x2)

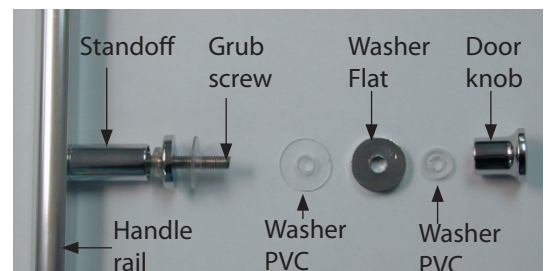


Remove handle knob and washers of both grub screws as shown picture on the right.


From the outside of the door, position the handle through the holes in the glass.

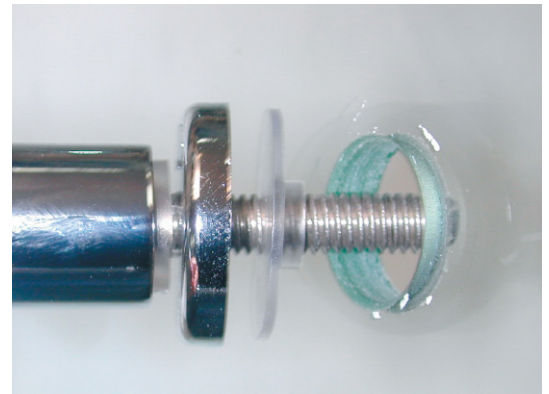

Ensure the hole in the glass is well covered by the PVC and the flat washers.

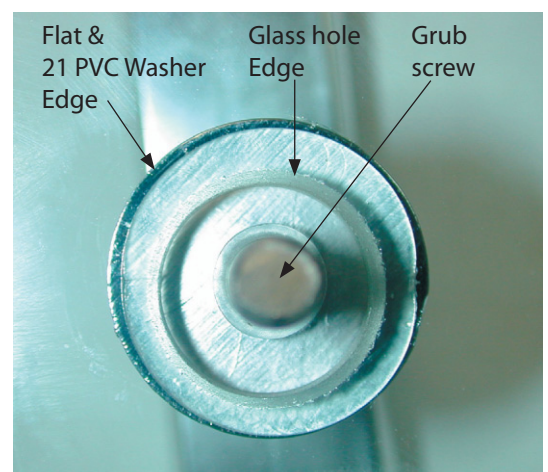

Slide Washer PVC 21 mm, then Flat washer followed by the washer PVC 12.5 mm, onto each grub screw.

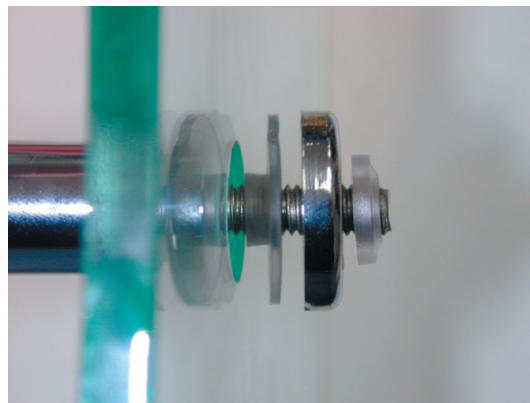

Fit both door knobs and tighten to secure handle in place..



CLEANING INSTRUCTIONS

Wipe clean using non abrasive soap and damp cloth.
Use a soft cloth to wipe dry.

Do not use harsh chemicals and cleaners that are not recommended to use on anodized aluminium surfaces.
Always read the label instructions on any cleaner carefully before applying it to the surface.