



A Ensure that this back edge does not interfere with the toilet cistern.

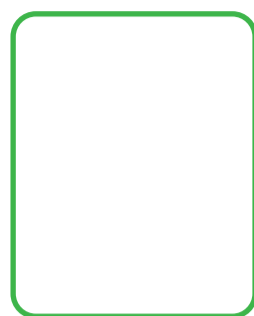



1/2" Water Inlet
(underneath)



B The centre of seat fixing holes on the toilet pan shall be within these two cut-outs.

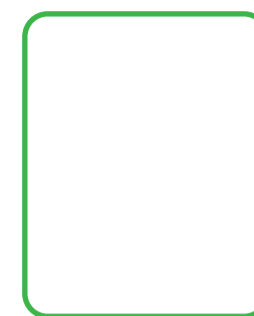


240V Power Cord
(underneath)

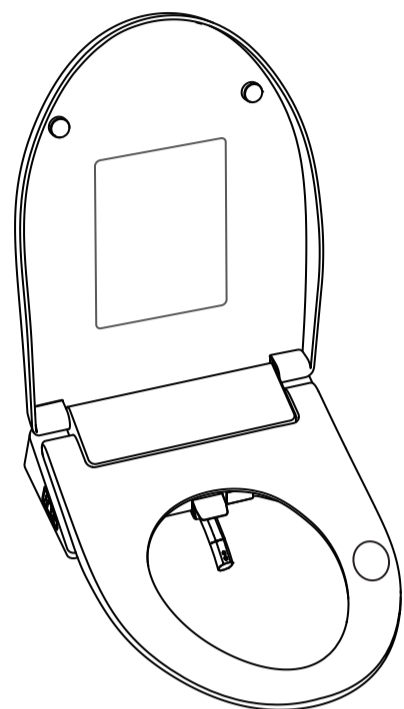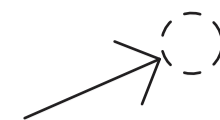

PRE-PURCHASE INSTALLATION TEMPLATE

ENGLEFIELD D SHAPE BIDET SEAT:38549A-0

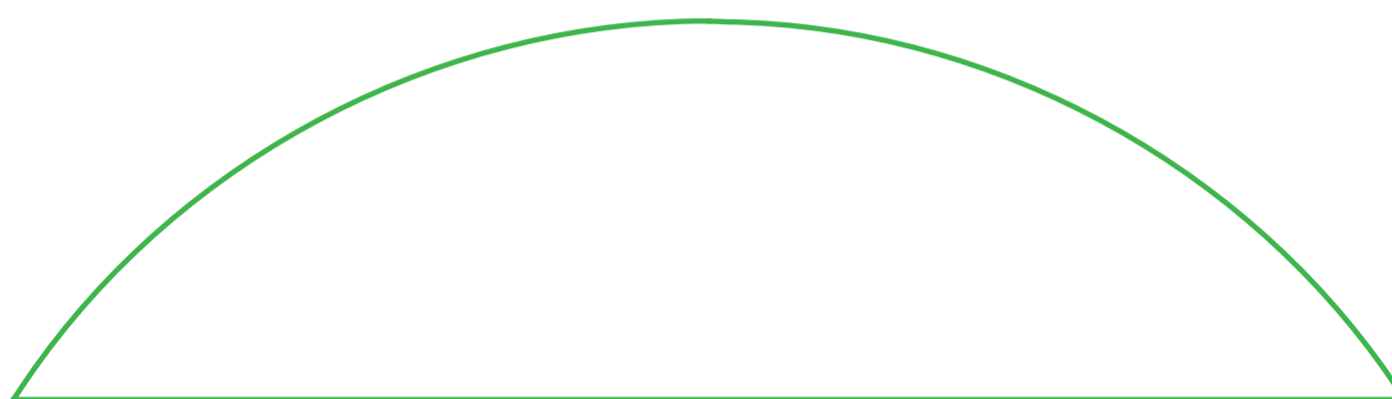

DISCLAIMER


For hygiene reasons Kohler NZ cannot accept product returned due to non-compatible install.

This template is to help confirm the suitability of the Englefield D-Shape Bidet Seat prior to committing to a purchase.

If conditions **A**, **B**, **C** and **D** are all met simultaneously, the Englefield D-Shape Bidet Seat should be a matching fit.



TOILET COMPATIBILITY GUIDE

TEMPLATE INSTRUCTIOS

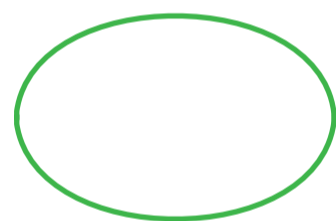



C

This is where the bumpers are located on the underside of the bidet seat. All four must be positioned over the rim of the pan.

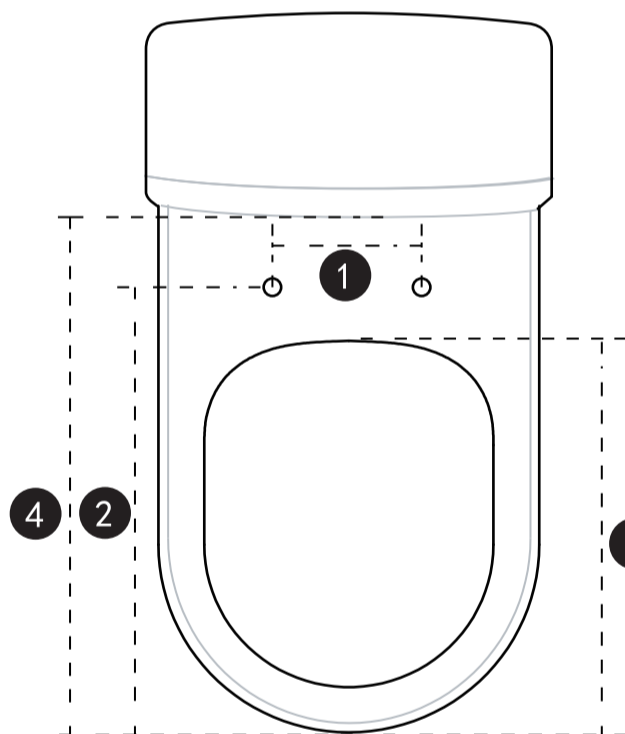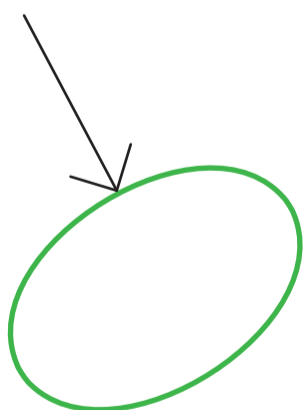

- 1** Distance between seat mounting holes: 135-165mm
- 2** Distance between the seat mounting holes and the front of toilet pan: 430-470mm
- 3** Distance from the inner circle of toilet pan to the front of toilet pan: >375mm
- 4** Distance from the toilet cistern to the front of toilet pan: >505mm

1. Carefully remove the existing seat from the toilet pan.
2. Place the template on the pan, this face up, ensuring that the back edge of the outline **A** is away from the toilet cistern.
3. Locate the seat fixing holes inside the cut-outs **B**.
4. Reposition the template so the bumpers **C** are mostly covering the rim of the pan & the front edge of the template **D** is over hanging the rim by 0~10mm.
5. Take note of the power and water inlet locations:
 - Supplied water inlet hose is 0.5m in length.
 - Supplied power cord is 1.5m in length.

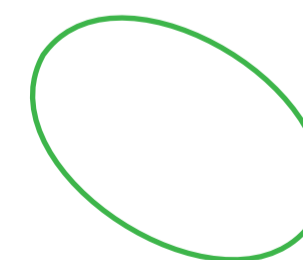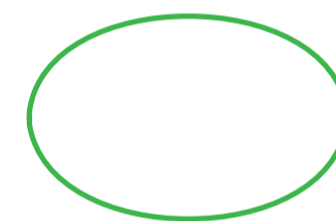

1673898-A07-A

D These edges should, ideally, not overhang the pan rim by more than 10mm.