

SPARE PARTS LIST

**Sorrento bracket - double post**
1259737

For use with:

- Double towel rail
- Single towel rail
- Glass shelf


**Sorrento bracket - single post**
1262464

For use with:

- Robe hook
- Hand towel ring
- Toilet roll holder

**Grub screw - M5 x 12mm**
1262221

For use with all Sorrento accessories

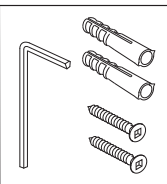**Sorrento fixing kit**
1259738

Included components:

- 2 x #2 square drive screws
- 2 x wall plugs
- 1 x 2.5mm hex key

CONTACT AND WARRANTY INFORMATION

NEW ZEALAND
KOHLER NZ LTD

Free Ph: 0800 100 382
Free Fax: 0800 664 488
www.Englefield.co.nz

AUSTRALIA
KOHLER CO.

Free Ph: 1 800 ENGLEFIELD
(1 800 364 533)
www.Englefield.com

For warranty information, please visit our website.

INSTALLATION
INSTRUCTIONS

ACCESSORIES

SORRENTO™ Accessory Range

BEFORE YOU BEGIN

Before proceeding with the installation, please read these instructions carefully to familiarise yourself with the required tools and materials, and to ensure proper care and installation of the accessory.

Prior to installation, inspect the accessory to ensure that no damage has occurred in transit. If damage has occurred, or a visible defect exists, do not proceed with installation, and advise your supplier immediately.

Please keep these instructions for future reference.







CAUTION


1. Do not install where the product might be used as a grab or support bar.
2. Prior to drilling into walls, check there are no hidden electrical wires, cables or water supply pipes with the aid of an electronic detector.
3. These accessories are designed to be mounted to a wall and it is strongly recommended that the product is installed on a stud, noggin or to concrete.
4. When mounting to a stud or noggin we recommend using an electronic stud finder to locate studs before installation.
5. Wear safety glasses when drilling.

If you are building a bathroom from scratch, giving your bathroom a makeover or just replacing an old tap, Englefield can provide a solution for you.

TOOLS & MATERIALS REQUIRED - (Not supplied)

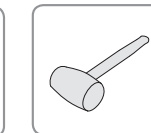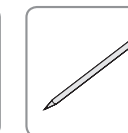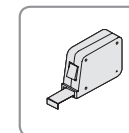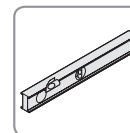


Stud finder

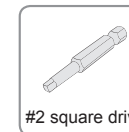

#2 square drive



2mm drill bit

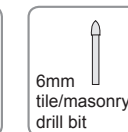6mm
tile/masonry
drill bit

1. LOCATING AND MARKING

Select an appropriate location to install the accessory.



It is strongly advised to install the product on a solid base, and the use of an electronic stud finder is recommended for stud/nog installation. (Fig. 1)

NOTE: Refer to assembled accessory for bracket alignment and orientation.

• For accessories with one bracket

Use a level to ensure the bracket is positioned horizontally and that it is correctly oriented with tapered holes facing you (Fig. 2). Mark the location of the holes with a sharpened pencil.

• For accessories with two brackets

A hole location template is provided (Fig. 3). Select a location to place the template. Use a level to ensure that the template is horizontal. Ensure it is pressed flat and fix the template to the wall.




Fig. 1

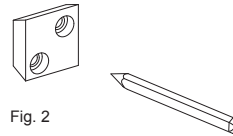


Fig. 2




Fig. 3

2. BRACKET INSTALLATION

NOTE: When drilling holes make sure to do so as accurately as possible.

Stud or a nog installation (Fig. 4)

- Pre-drill 2mm diameter pilot holes at the marked locations. When using the installation template, drill directly through the template on the marked locations, then remove the template.
- Align the bracket/s so that it is correctly oriented and secure the bracket in place with the supplied screws using a #2 square drive.
- Ensure that the screws are firmly fastened.

Ceramic tile or concrete installation (Fig. 5)

- Drill 6mm diameter holes at the marked locations using a tungsten carbide tipped drill bit for tiles, or a masonry bit for concrete.
- Gently tap the supplied toggles into the holes using a mallet until they are fully inserted.
- Orient the bracket correctly over the wall plugs and ensure the bracket is flush with the wall.
- Secure the bracket firmly in place with the supplied screws using a #2 square drive.

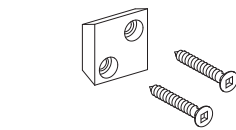


Fig. 4



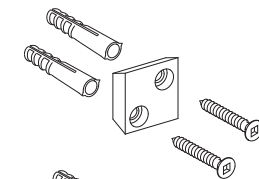


Fig. 5

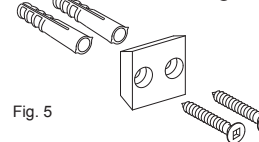

Plaster board installation

Please consult your local hardware store for appropriate wall plugs for installation on plaster board.

3. ACCESSORY INSTALLATION

Step 3.1

NOTE: For all accessories ensure that the grub screw hole is oriented downwards.

• For the robe hook, toilet paper holder & hand towel ring

Slide the accessory over the bracket. (Fig. 6)

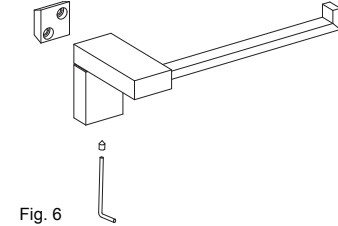


Fig. 6

• For the single towel rail, double towel rail & glass shelf

Slide the assembled accessory over the fixed brackets. (Fig. 7)

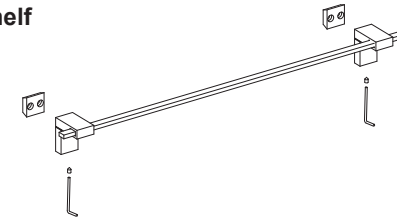


Fig. 7

Step 3.2

Align and firmly press the accessory against the wall while screwing in the grub screw/s with the provided hex key. Make sure the grub screw/s are firmly tightened.

4. CHECK INSTALLATION

Ensure that all connections are tight. Place glass components onto appropriate accessories.

CLEANING INSTRUCTIONS

Clean accessories with mild soap and warm water. Wipe entire surface completely dry with a clean soft cloth. Harsh cleaning products including those that contain ammonia and chlorine may adversely affect the finish and are not recommended for cleaning.