

SKU: 1561843-A07-A

KOHLER®

PRE-PURCHASE INSTALLATION TEMPLATE

FAMILYCARE™ TOILET ARMRESTS 22090T-0

DISCLAIMER:

All information on this template is based on the latest product information available at the time of publication. Kohler reserves the right to make changes in product characteristics, packaging or availability at any time without notice.

All installations shall be in accordance with local building codes.

CONTACT INFORMATION:

NEW ZEALAND

Kohler New Zealand Limited
Ph: 0800 564 537
kohler.co.nz

AUSTRALIA

kohler.com.au

↑ **(A)** Must be clear of the toilet's tank ↑

Option 1 - Install with a compatible Kohler or Englefield BTW toilet as below:

Brand	Product Name	Product Code
Kohler	Veil 2PC BTW Toilet	23622A-0
Kohler	Kohler Dual BTW Toilet	4346A-0
Kohler	Parliament BTW Toilet	77304A-0
Englefield	Evora Rimless BTW Toilet	29484A-0
Englefield	Evora II Rimless BTW Toilet	35457A-0
Englefield	Evora II Raised Height BTW Toilet	27987A-0
Englefield	Milano BTW Toilet	7380A-0
Englefield	Valencia BTW Toilet	98277A-0
Englefield	Valencia Close Coupled Toilet	77912A-0





(D) The centre of the fixing holes on the toilet pan should be visible within these oblong holes



Option 2 - Install with another BTW toilet using this pre-purchase template to ensure that each of the following criteria are met:

1. Minimum clearance **(A)** between the front of toilet tank and the toilet seat mounting holes is 60mm.
2. Minimum pan width **(C)** at position **(B)** is 310mm in order to provide a strong support to the arm rest.
3. The distance between the toilet seat mounting hole centres **(D)** is from 130mm to 170mm.
4. The toilet pan must be screwed/bolted to the finished floor/brackets.

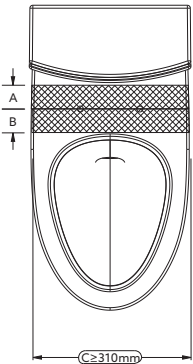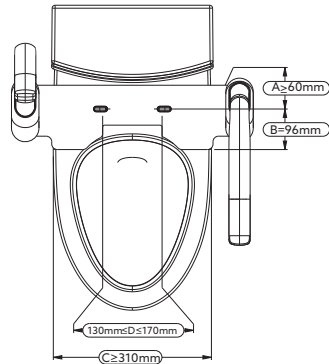

(B/C) Must not overhang into toilet pan

(B/C) Must be appropriately supported on toilet pan (minimal overhang)

(B/C) Must not overhang into toilet pan

(B/C) Must be appropriately supported on toilet pan (minimal overhang)

JUN 2023