



A Ensure that this back edge does not interfere with the toilet cistern.

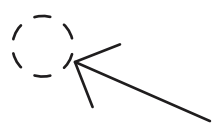

1/2" Water Inlet
(underneath)

B The centre of seat fixing
holes on the toilet pan shall be
within these two cut-outs.

240V Power Cord
(underneath)

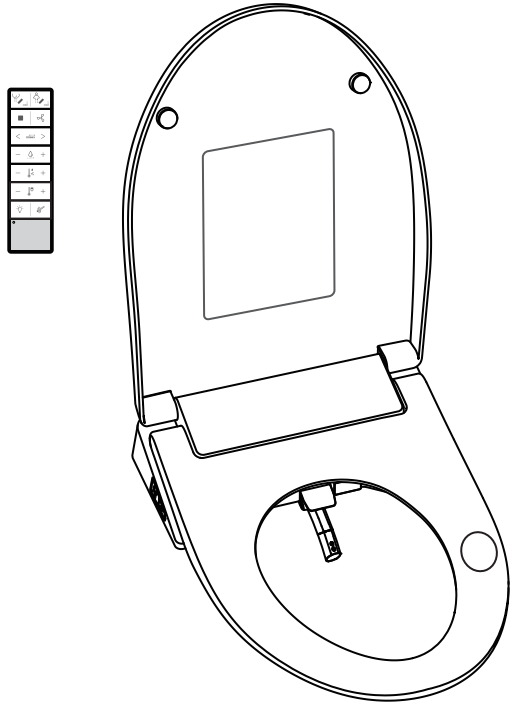

PRE-PURCHASE INSTALLATION TEMPLATE

ENGLEFIELD D SHAPE BIDET SEAT:38549A-0


DISCLAIMER

For hygiene reasons Kohler NZ cannot accept product returned due to non-compatible install.

This template is to help confirm the suitability of the Englefield D-Shape Bidet Seat prior to committing to a purchase.

If conditions **A**, **B**, **C** and **D** are all met simultaneously, the Englefield D-Shape Bidet Seat should be a matching fit.

TOILET COMPATIBILITY GUIDE

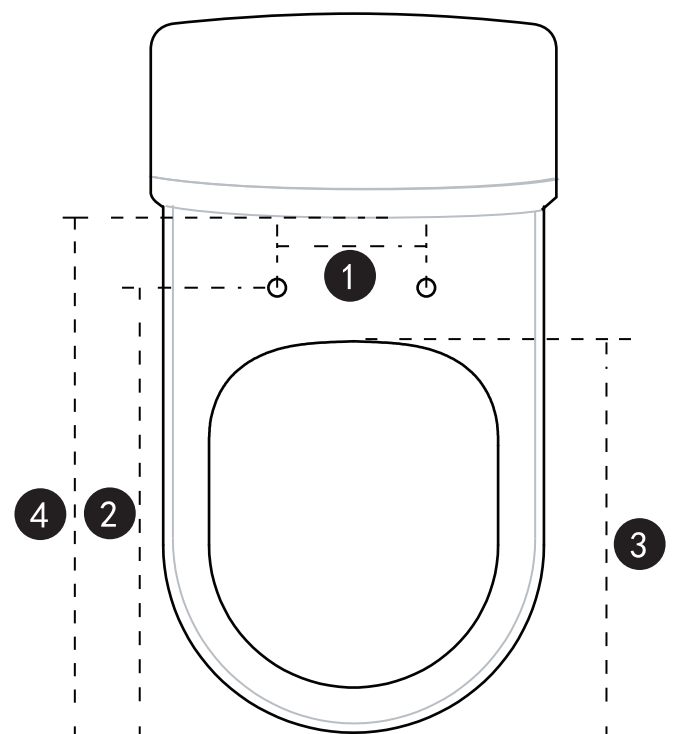

- 1 Distance between seat mounting holes: 135-165mm
- 2 Distance between the seat mounting holes and the front of toilet pan: 430-470mm
- 3 Distance from the inner circle of toilet pan to the front of toilet pan: >375mm
- 4 Distance from the toilet cistern to the front of toilet pan: >505mm

TEMPLATE INSTRUCTIONS

1. Carefully remove the existing seat from the toilet pan.
2. Place the template on the pan, this face up, ensuring that the back edge of the outline **A** is away from the toilet cistern.
3. Locate the seat fixing holes inside the cut-outs **B**.
4. Reposition the template so the bumpers **C** are mostly covering the rim of the pan & the front edge of the template **D** is over hanging the rim by 0~10mm.
5. Take note of the power and water inlet locations:
 - Supplied water inlet hose is 0.5m in length.
 - Supplied power cord is 1.5m in length.

This is where the bumpers are located on the underside of the bidet seat. All four must be positioned over the rim of the pan.

D These edges should, ideally, not overhang the pan rim by more than 10mm.

1673898-A07-B