



INSTALLATION INSTRUCTIONS



SHOWER | TIVOLI® - INSLIDE™ DOOR 900 X 900 mm

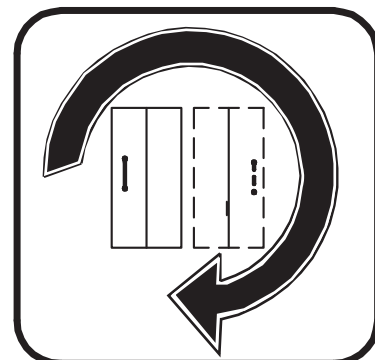


FLIP UPSIDE DOWN
FOR DOOR HANDLING

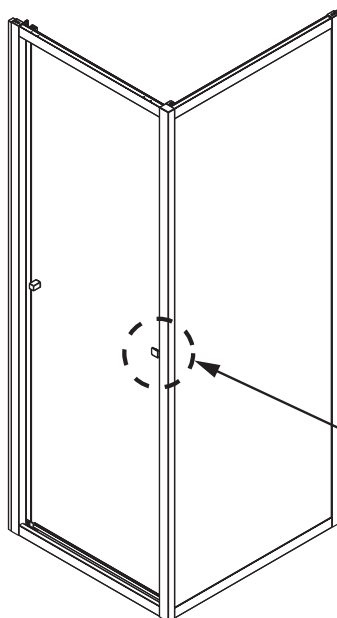

Push here to open

RIGHT HAND INSTALLATION

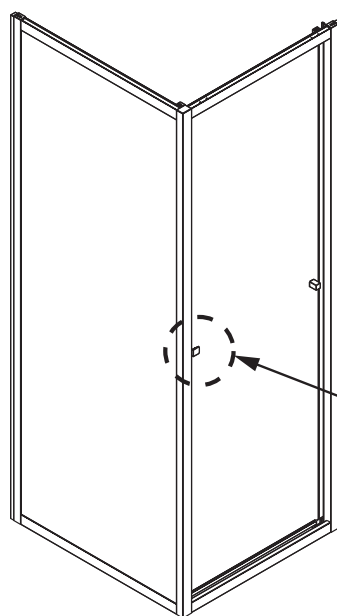

Push here to open

LEFT HAND INSTALLATION



To assist with product tracking the shower has QR code label underneath the corner extrusion top cap. Use this QR code when contacting customer support for assistance with your newly purchased shower.

BEFORE YOU BEGIN:

Before installing the shower please read these instructions carefully to familiarise yourself with the required tools, materials, and installation sequences. Please leave the QR code label for the consumer after installation. Refer to the separate care and maintenance guide for important care and cleaning information.

Ensure that the installation of the shower tray and wall, where applicable, is completed prior the installation of the shower door and return. Follow all warnings, cautions and instructions contained in this guide.

Check that the mixer and other tapware are installed clear of the opening door path.

SAFETY:

1. ENGLEFIELD strongly recommends that a minimum of TWO persons install this enclosure due to the weight of the door panels
2. Toughened safety glass cannot be cut. Risk of injury or product damage.
3. Wear protective footwear when lifting panels.
4. Wear safety glasses when drilling.


ATTENTION:

1. The wall retainers must be installed onto a waterproof, vertical and flat wall surface. Failure to do so will result in an unsatisfactory seal, which may cause property damage. The wall inclination (out of squareness) is recommended to be out by no more than +/- 2mm/m.
2. Please install this door onto an ENGLEFIELD tray, unless installing directly onto tiled walls and floor (vinyl flooring or tiles).


 For the door to operate correctly the floor and tray **MUST BE level**.

3. Care must be taken when drilling into walls and floors to avoid any hidden pipes or wires.
4. Prior sealant application, clean the surface with Isopropyl Alcohol.
5. It is the responsibility of the INSTALLER to ensure that the installation complies with council and or local authority by laws.

TOOLS AND MATERIALS REQUIRED:

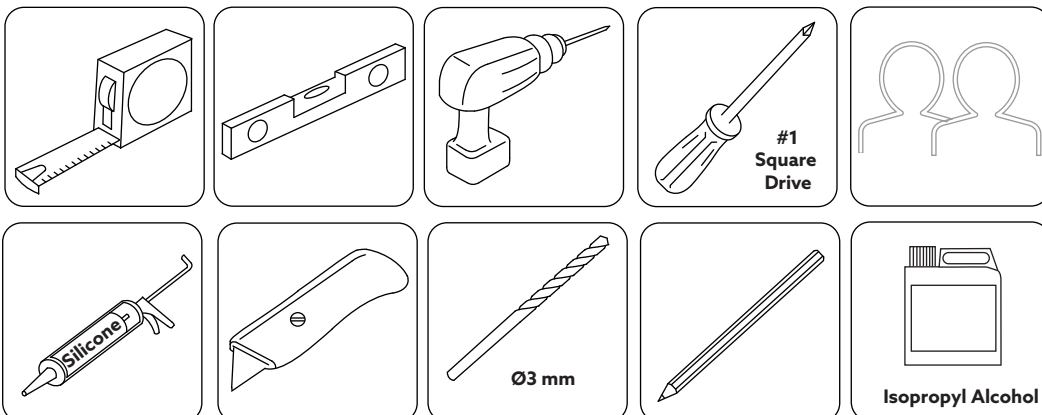


PARTS IDENTIFICATION:




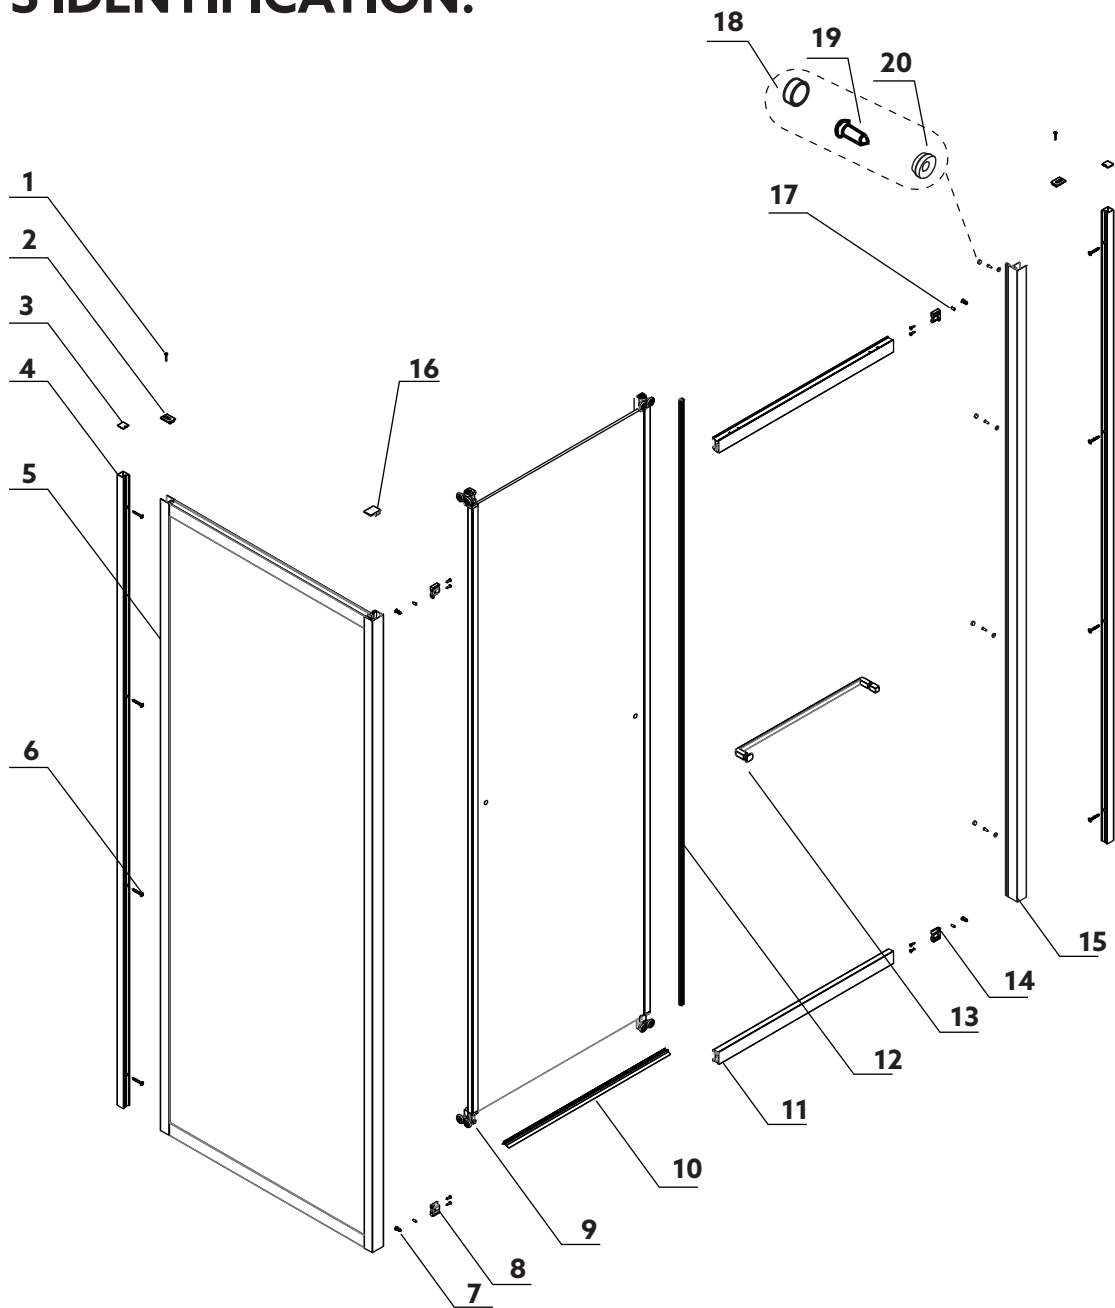


1	 ST4*20	10x	8		2x	15		1x	22	 4mm 3mm 2.5mm 2mm	4x
2		2x	9		1x	16	 L R	2x			
3		2x	10		1x	17	 M5*6	4x			
4		2x	11	 L R	2x	18		4x			
5		1x	12		1x	19	 ST4*12	4x			
6	 ST4*30	8x	13		1x	20		4x			
7	 M5*10	4x	14		2x	21		1x			


PARTS IDENTIFICATION:

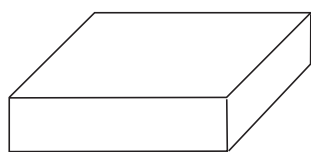




1x Fixing Kits

 M5 X 6	4x Screws	 2x Return Panel Fixing Block
 M5 X 10	4x Screws	 2x Door Panel Fixing Block
 ST4 X 30	8x Fixing screws	 2x Adjustable Extrusion Cap
 ST4 X 20	10x Screws	 2x Extrusion Cap
 ST4 X 12	4x Wall Retainer Screws	 2x Extrusion Top Cap
 4x Screw cap 1644707		 1x Grease
 4x Screw washer 1644709		 4x Allen Key 4mm 3mm 2.5mm 2mm

1x Seal Pack

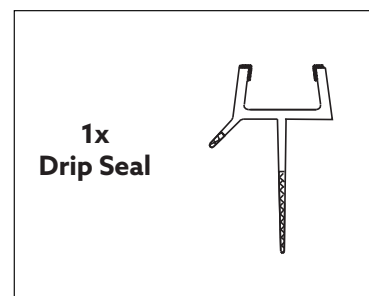1x
Drip Seal



1x Extrusion Pack

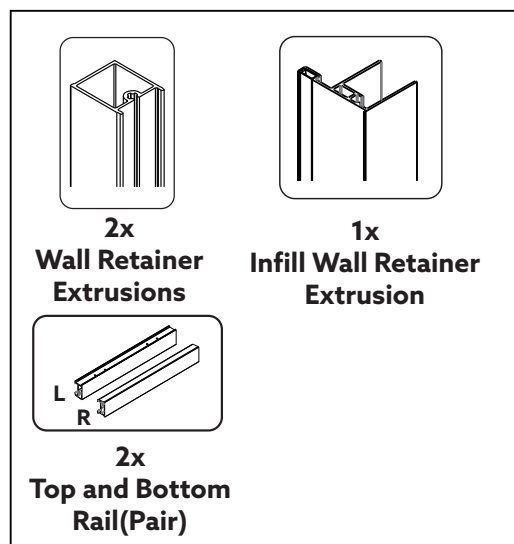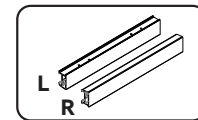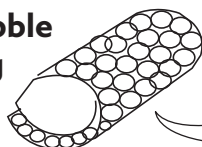2x
Wall Retainer
Extrusions1x
Infill Wall Retainer
Extrusion2x
Top and Bottom
Rail(Pair)Bubble
Bag1x Handle Kits
1644708-***
(SHP, 2MB, EGN)

1x Door Handle



1x Door Set

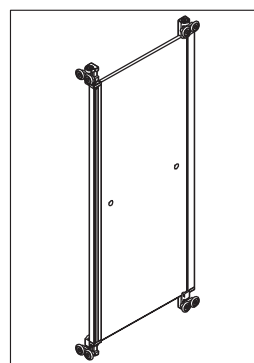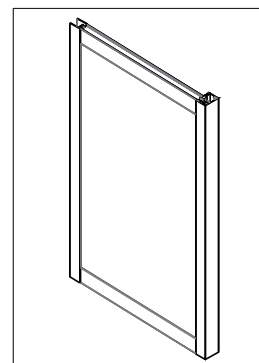1x Return Panel
Set

CONSTRUCTION REQUIREMENTS

Acrylic tray with acrylic wall or acrylic tray with tile wall.





ATTENTION

Due to the weight of the glass panels Englefield strongly recommends constructing double studs to fix the wall retainers to.


Size	DIM "A"	DIM "B"
900 x 900	900	900

NOTE: This setup allows for the use of standard 10 mm wall board. A thicker wall board could make the recess too narrow for the door system.

For tile walls the complete door system must be installed onto the waterproof membrane **PRIOR TO WALL TILING**.

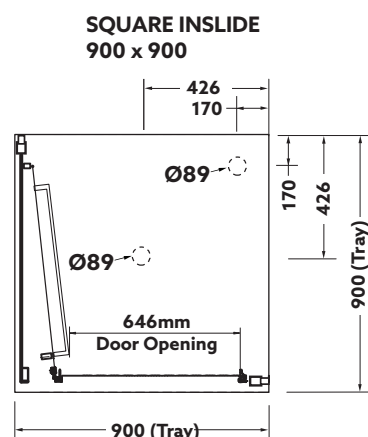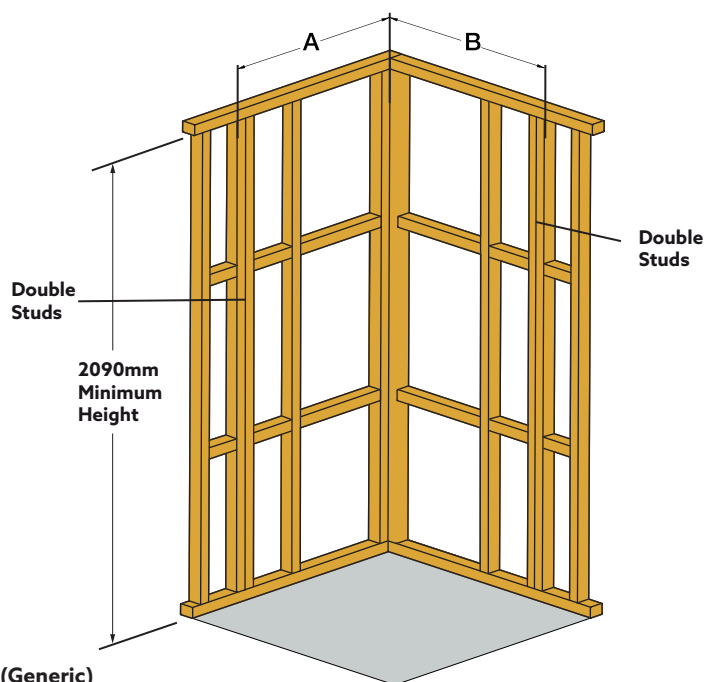

Front View (Generic)

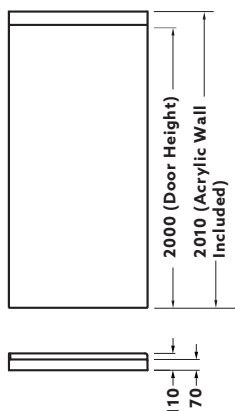

Nominal Size	900 x 900
Door Adjustment Range	864-879 mm
Return Adjustment Range	864-879 mm

INSTALLATION REQUIREMENTS

Tray: For tray installation refer to the instructions supplied with the tray.

Wall: For acrylic wall installation refer to the instructions supplied with the wall.

CONSTRUCTION REQUIREMENTS

For tile floor and tile wall.



ATTENTION

Due to the weight of the glass panels Englefield strongly recommends constructing double studs to fix the wall retainers to.

For tile floor and tile wall - Finished surfaces

The door set can be installed directly onto the wall and floor tiles.

Please check that the mixer and other tapware are installed clear of the opening door path.

Size	Dim 'C'	Dim 'D'
900 x 900	884	884

NOTE: Before tiling, ensure that there is adequate timber framing for the shower system to be fixed into.

Due to the weight of the glass double studs are required to fix the wall retainer to.

"C" & "D"

* Measure to Finished Surfaces


The door set can be installed directly onto the wall and floor tiles.

Ensure there is adequate fall to the waste.

Please check that the mixer and other tapware are installed clear of the opening door path.



Finish/Tiled hob to be :

1. Minimum 75mm wide and 70mm high.
2. 1.5-2° fall front to back is acceptable.
3. Level (+/-0mm) left or right.

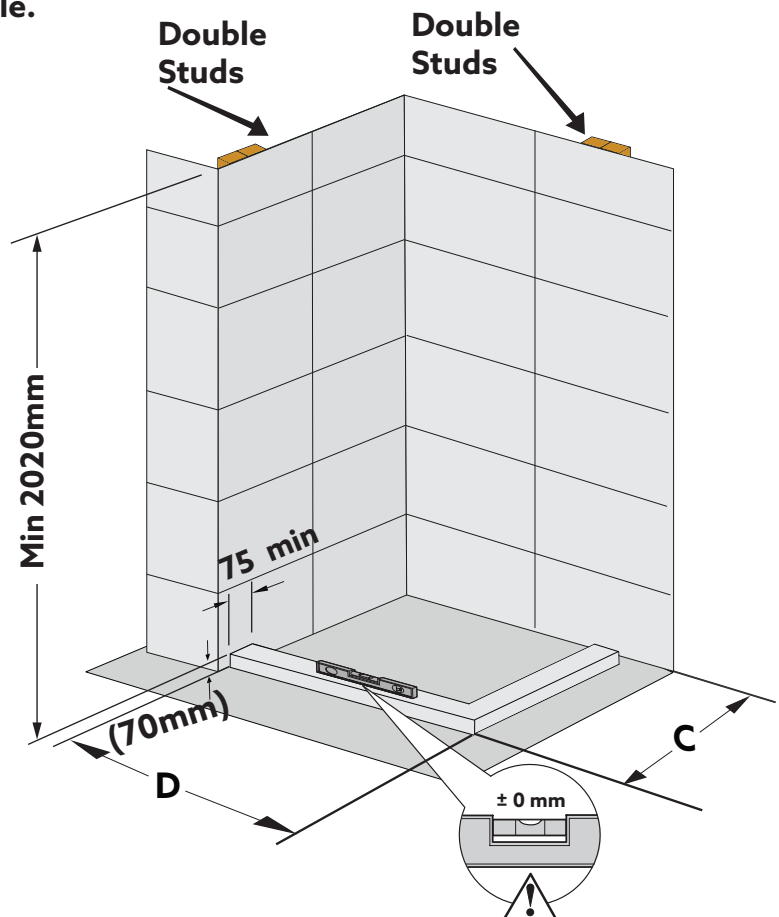


INSTALLATION:

Choose what installation you prefer. This will determine where the return panel will be installed on the tray.

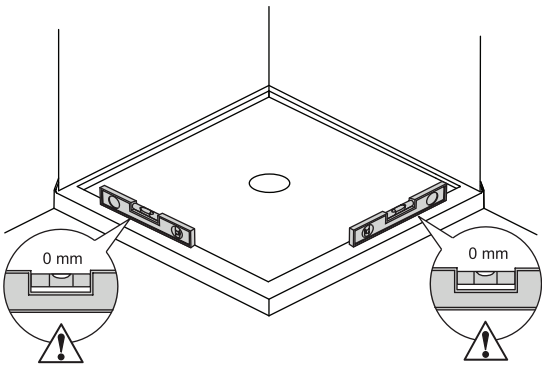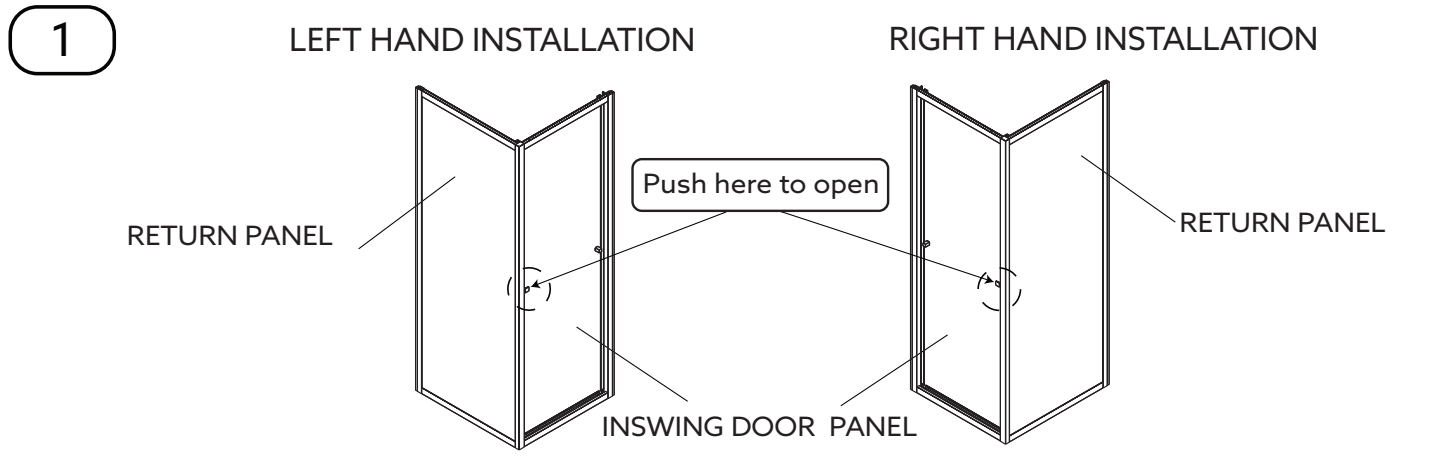


 Caution: Ensure tray or tiled hob is level & walls are vertical & square.

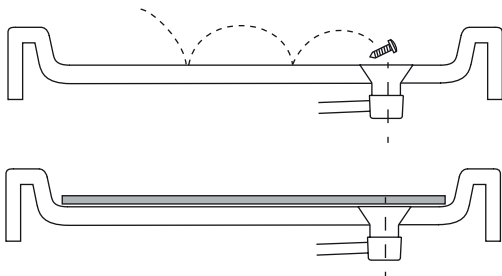


Tip: Cover the waste to prevent the loss of small parts. If installing onto a tray protect the tray surface during installation.

- (a) Mark the locations of the wall retainers.
- Mark from "finished wall surface" to outer edge of retainer.

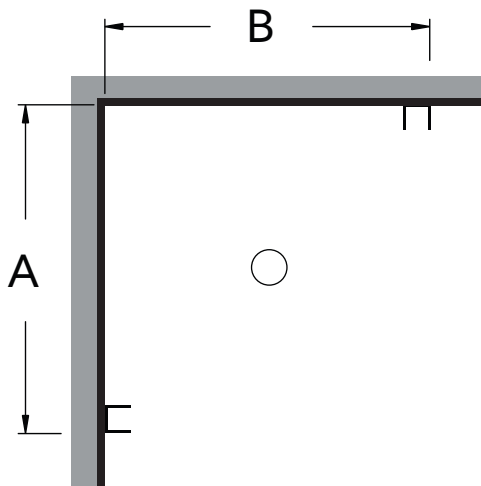


Size	A	B
900 x 900	872	872


2

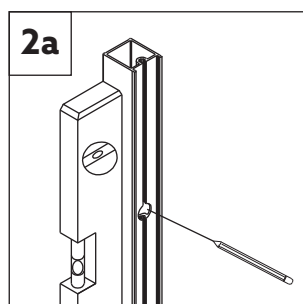



2b

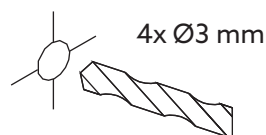


2c

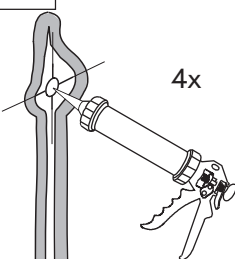


2d

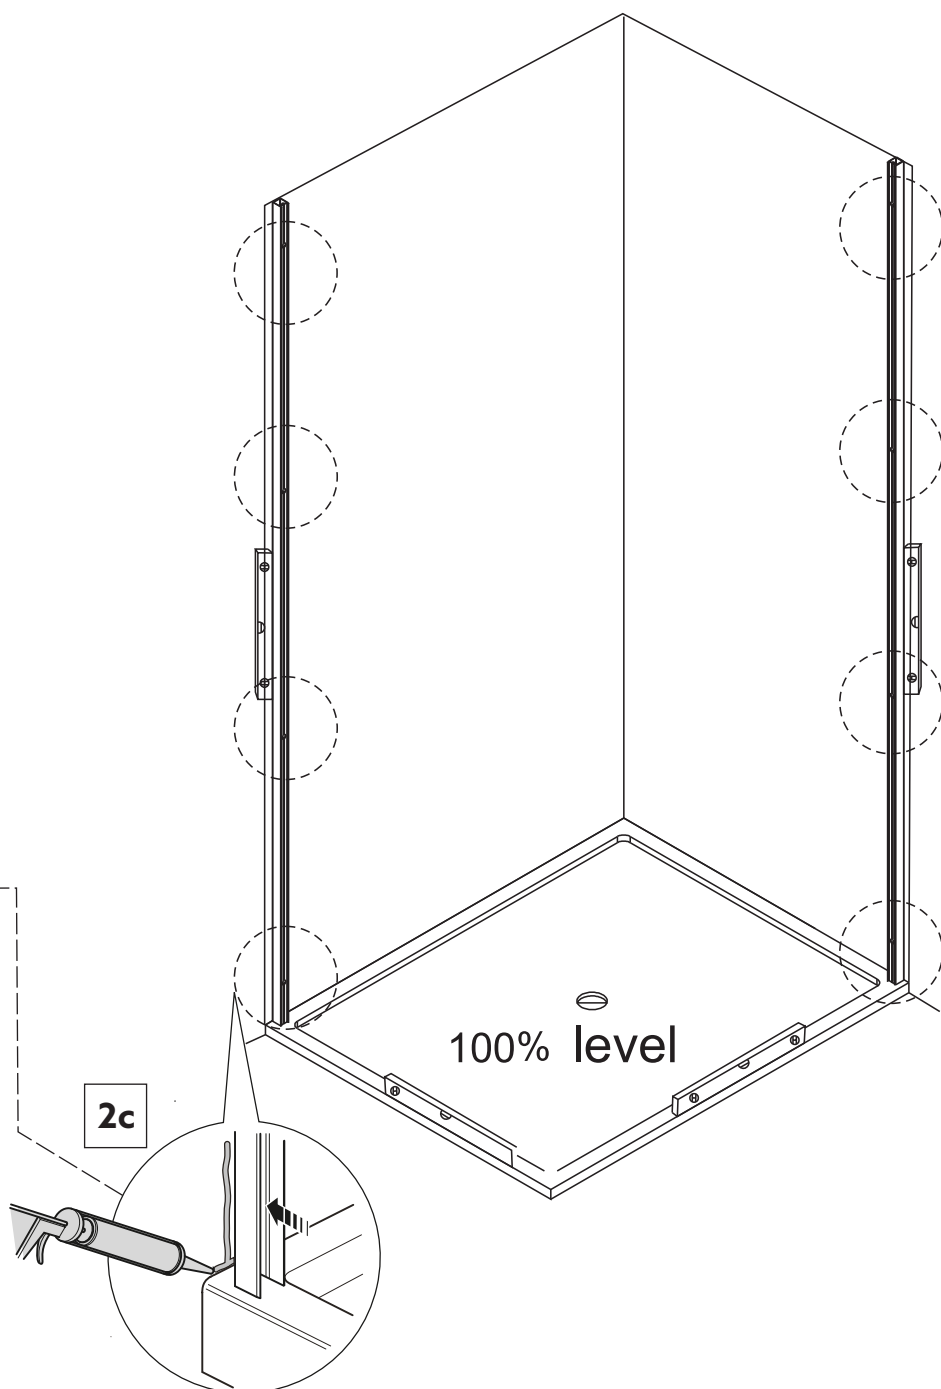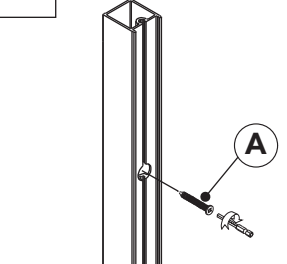

- (a) Position a wall channel for the return panel. Using a level, make sure that the channel is upright.
- (b) Mark the position of the fixing holes, then remove the channel.
- (c) Drill with a 3mm bit. For other types of wall structure, alternative fixings may be required (not supplied).
- (d) Apply silicone sealant along the length of the wall and at the bottom where the wall retainer extrusion will be placed, including the top of the tray.
- (e) Position the wall channel on the wall and install the fixing screws (A). Fully tighten the fixing screws, making sure that the wall retainer extrusion remains vertical. Repeat the process for the door panel wall channel.

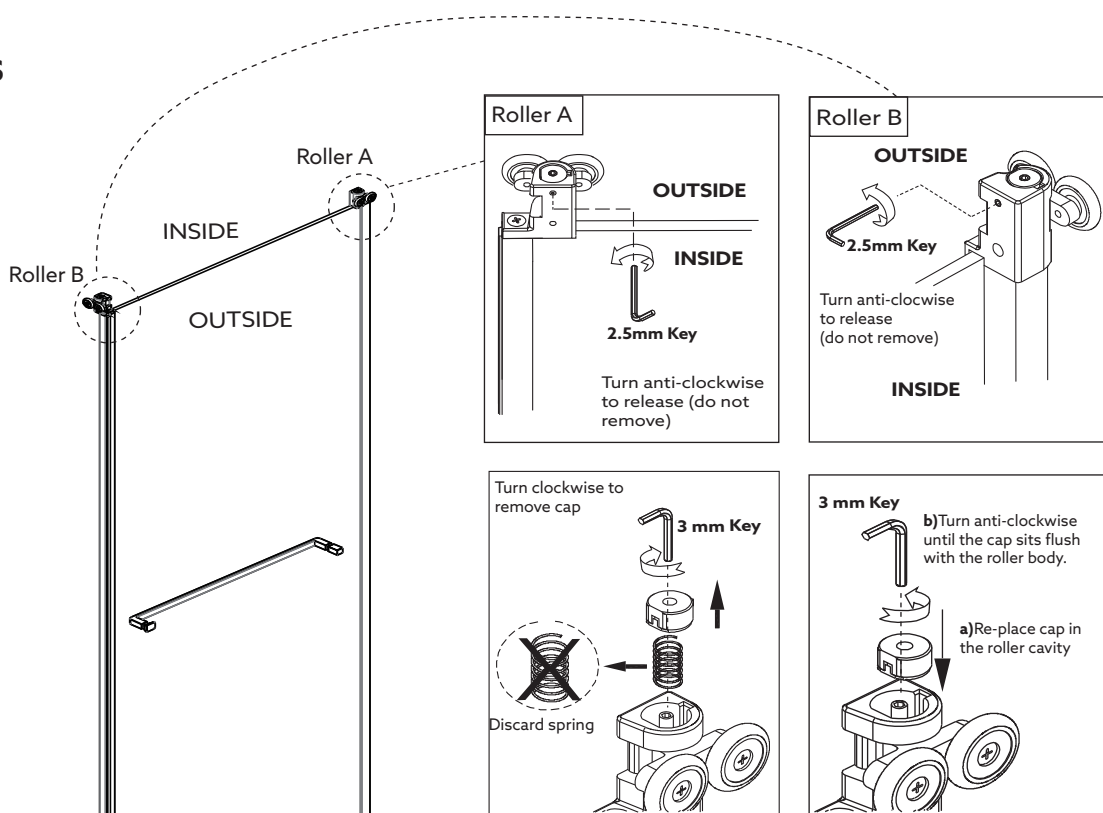
3**PREPARE THE DOOR FOR INSTALLATION (ROLLERS & HANDLE)****3-1a****TOP ROLLERS****3-1b****BOTTOM ROLLERS**

IMPORTANT :
THE GRUB SCREW ON BOTH BOTTOM ROLLERS MUST BE TIGHTENED NOW. FAILURE TO DO SO WILL RESULT IN THE MALFUNCTIONING OF THE DOOR.

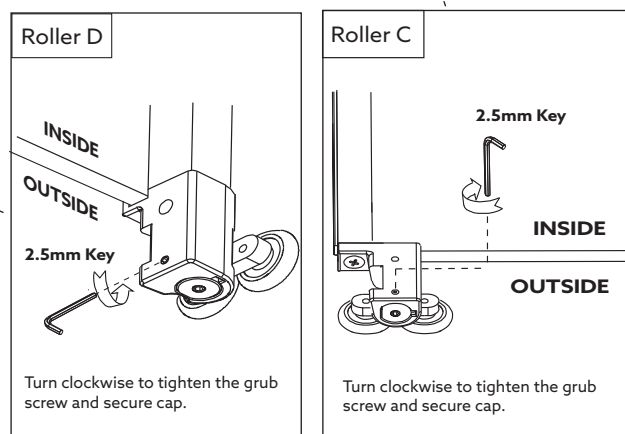


- (a) On the top rollers, loosen (do not remove) the top grub screw, remove the top cover caps then remove and discard the springs, then replace the top cover caps and flush with top of roller body. Do not secure with the side grub screw at this stage. The door needs adjusting after is in position.
- (b) On the bottom rollers, leave the cover caps and springs as factory installed. Ensure to tighten the grub screw as shown in the above images (Roller D & Roller C).

3-2







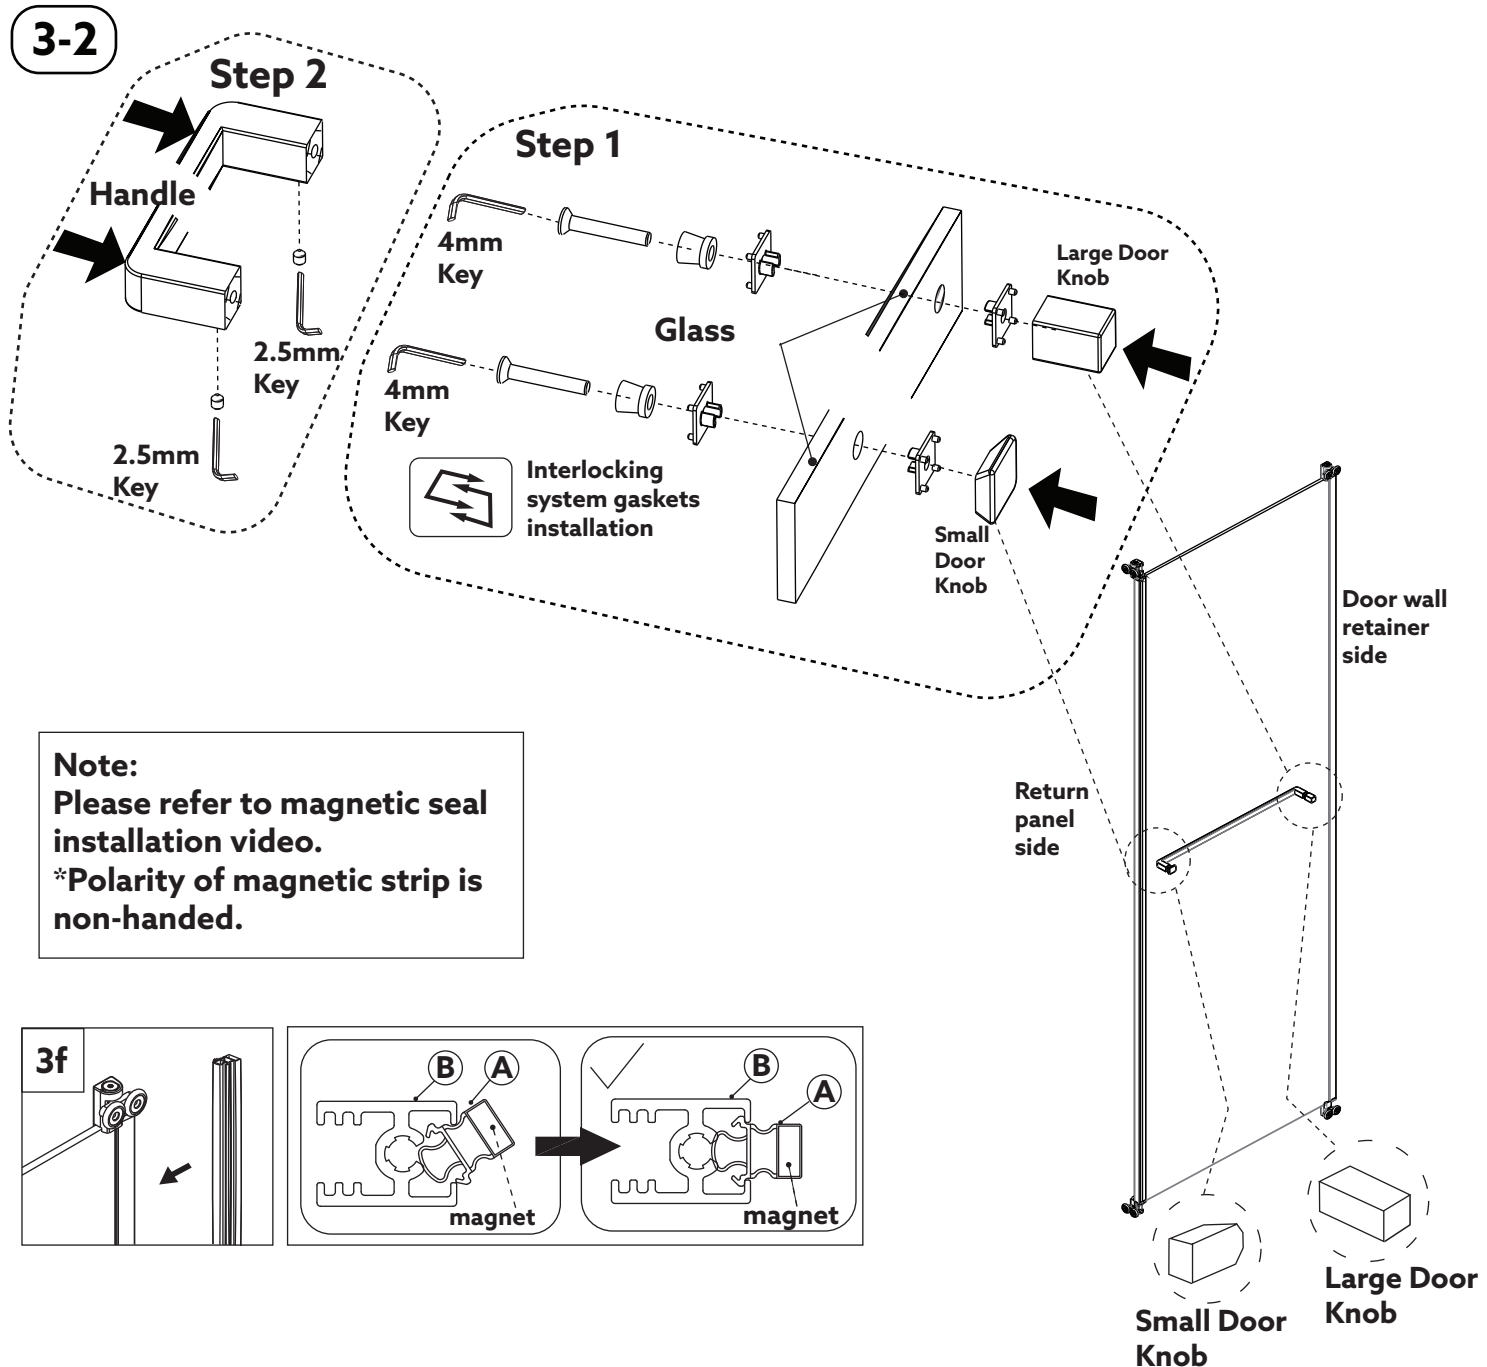


- Assemble the screw, ferrule, and gasket and feed it through the hole in the glass, from the inside of the shower
- From the outside, assembly the knob on the gasket and then onto the protruding end of the screw.
- Hold together and fasten the screw with 4mm allen key until everything is firm on the glass. **DO NOT OVERTIGHTEN.**
- Install the internal handle bar, making sure that the grub screws are positioned on the underside.
Hold firmly against the the door panel and secure with the grub screw.
- If not pre-fitted, insert the door seals in an angle (A) and pushing the magnetic strip, turning into the slot (B), and push in the seal with fingertips.
- Turn the door panel in the final orientation. Magnetic Seal on the front of the extrusion is facing toward outside the shower, matching the magnetic seal in the corner post.
- Lift the door and place it on the protected tray inside the shower to be installed later.

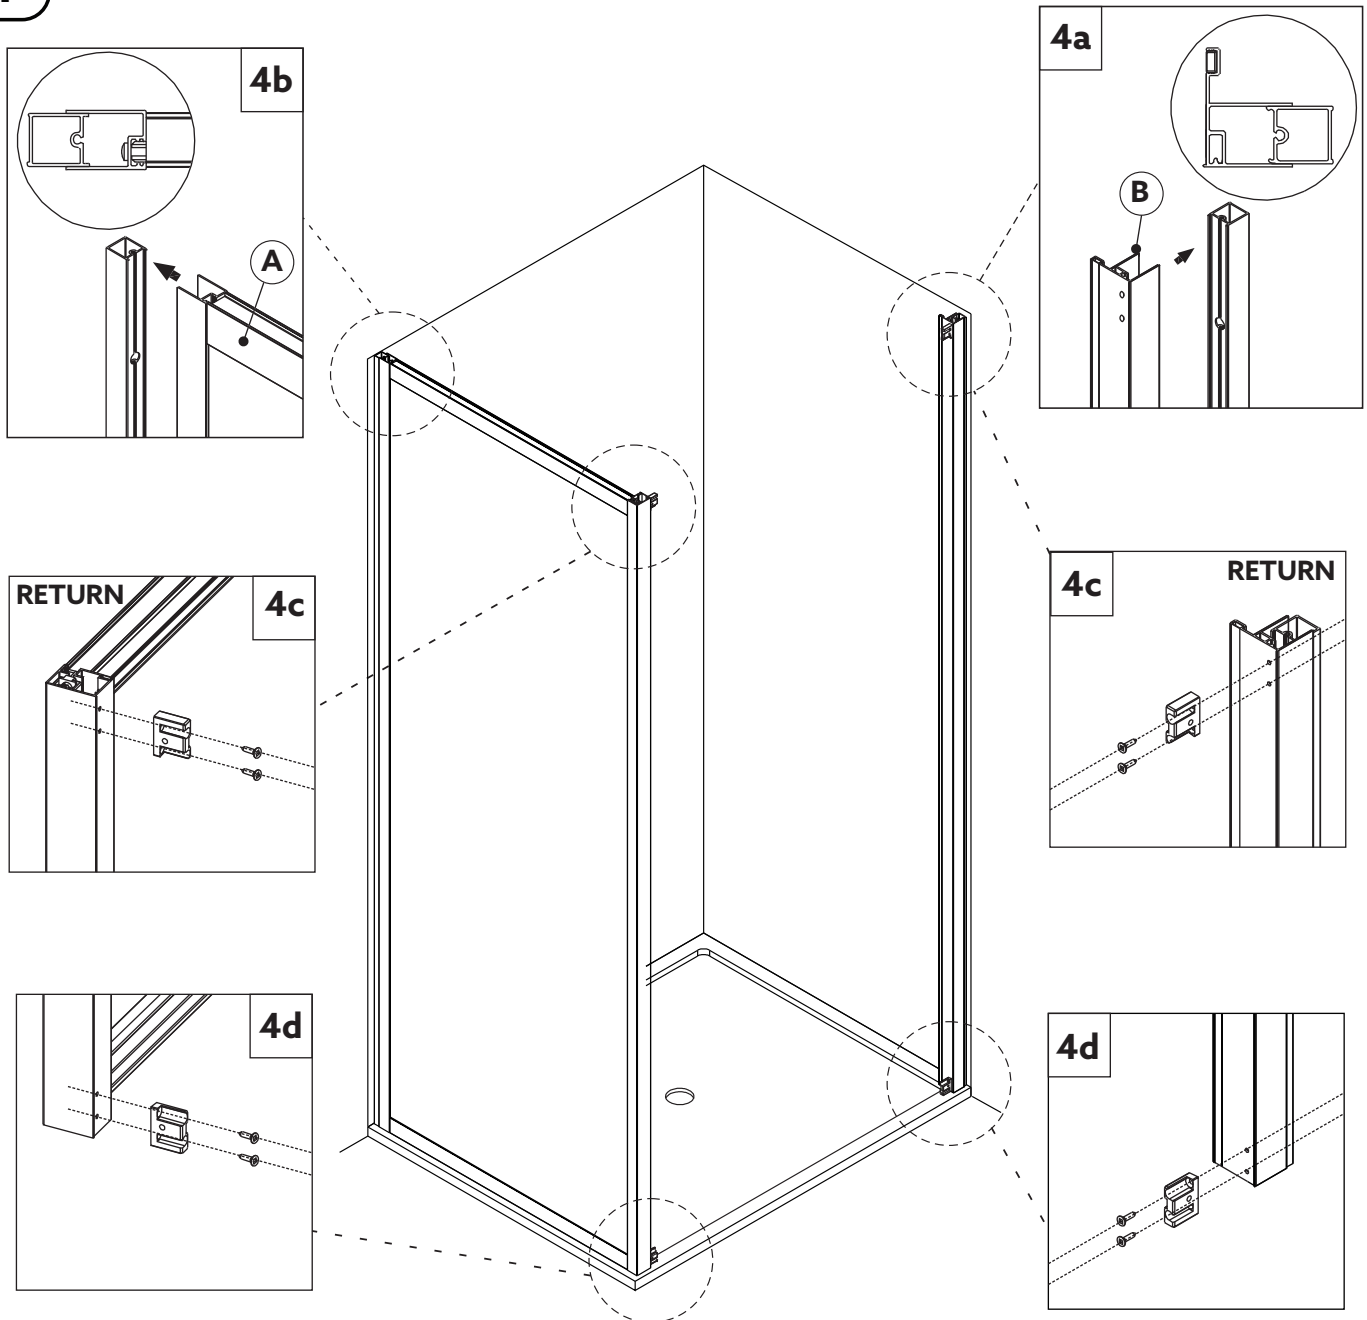4


- (a) Fit the door wall retainer extrusion over the door side wall channel (Image 4a).
- (b) Install the return panel over the return wall channel (Images 4b).
- (c) Install the top fixing brackets as shown in image (Image 4c).
- (d) Install the bottom fixing brackets as shown in image (Image 4d).

5

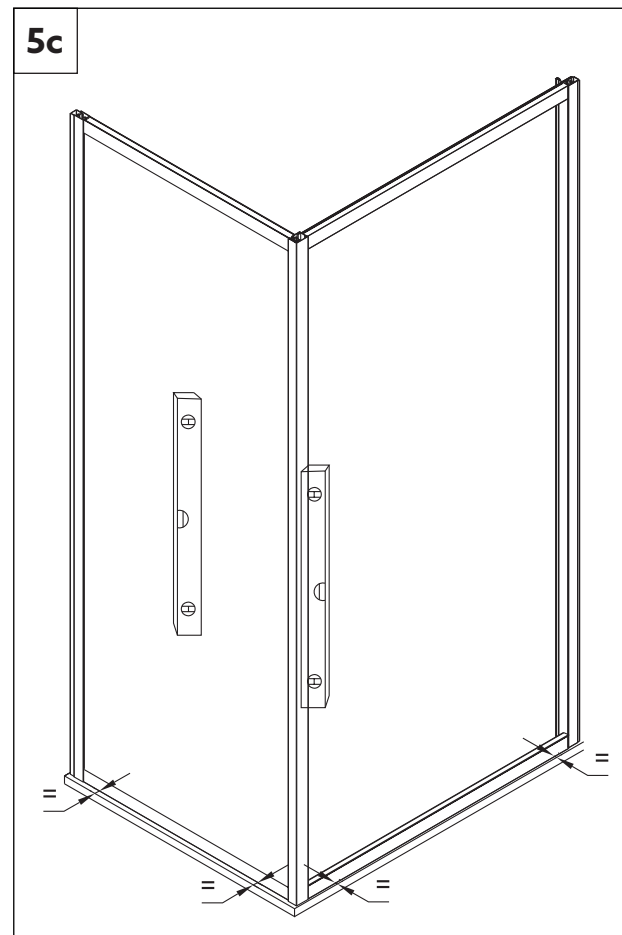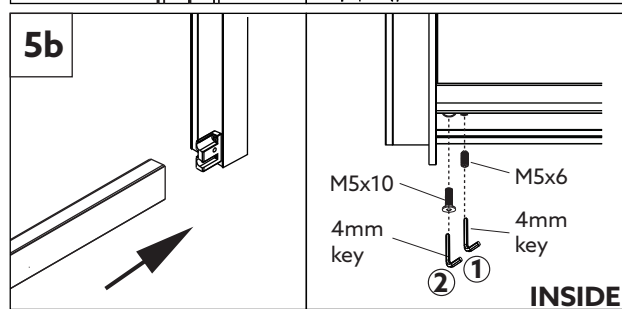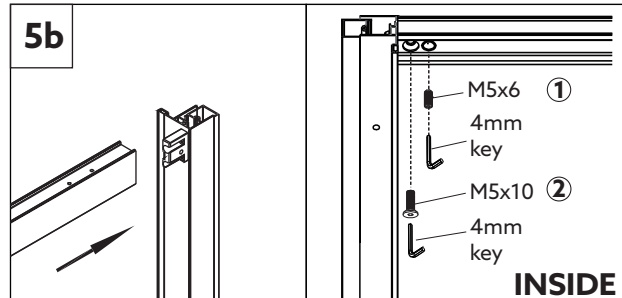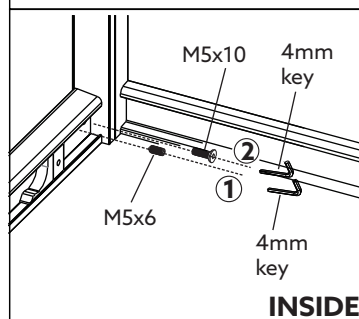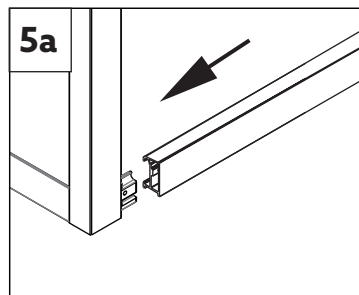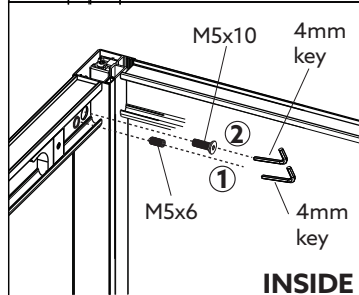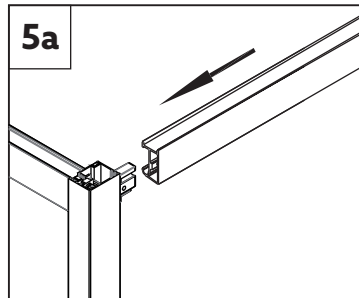



- (a) Push the top and bottom rails over the corner post fixing blocks. Secure with the M5x6 grub screw. Ensure the rail is flush with the corner post, then secure with the M5x10 CSK screw (Images 5a). DO NOT OVERTIGHTEN.
- (b) Repeat on the door wall retainer side (Images 5b). Ensure now that all screws are tighten.
- (c) Ensure that the gap between frame and edge of tray is even all the way around (Image 5c).

6





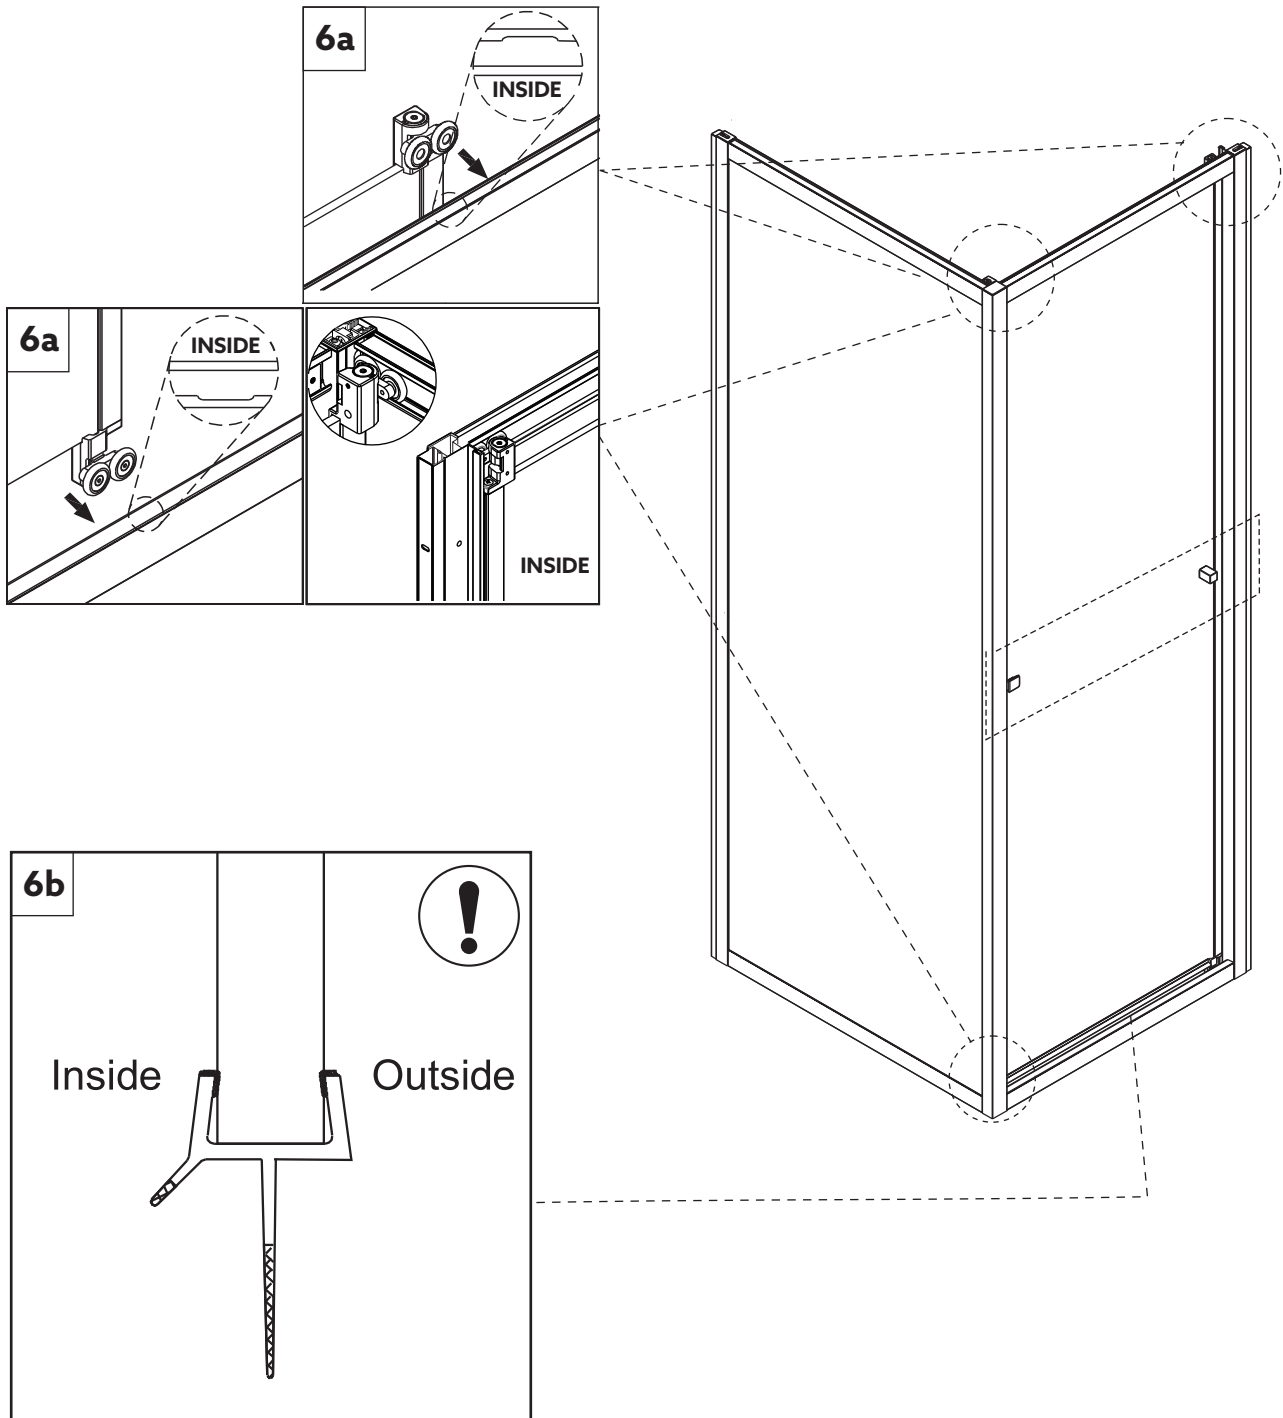


- (a)** Lift the door onto the frame. Place the roller on the door opening top rail and the other roller on the return panel top rail, locate in the notch in the top and bottom door rails. Slide the door panel with the rollers positioned in the middle of the top rail. Take care that rollers do not slide off the rail through the notch cut in the middle of rail. Push down the return panel bottom roller to latch onto the bottom rail. Repeat with the door opening bottom roller. The notch will help latch the roller into the rail.
- (b)** Fit the drip seal with longer fin facing outside of door.




7

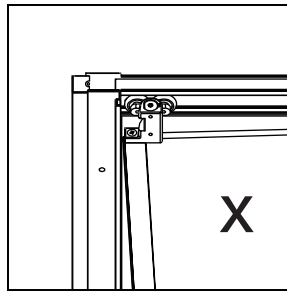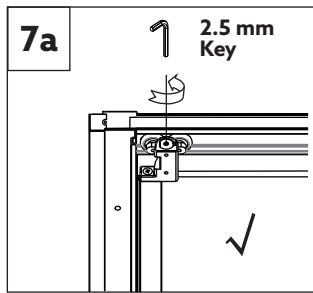

or

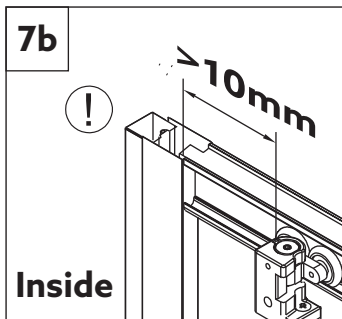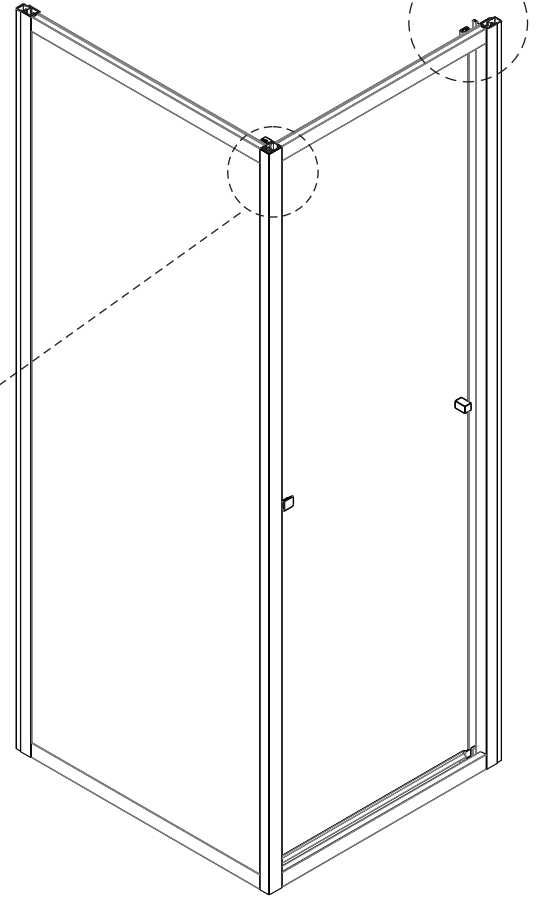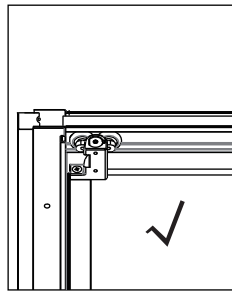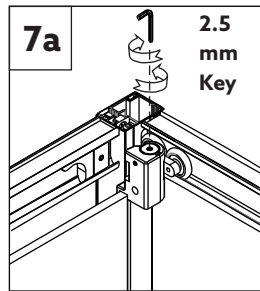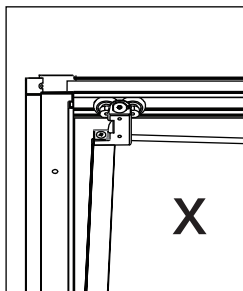


Note: Please refer to roller adjustment installation video

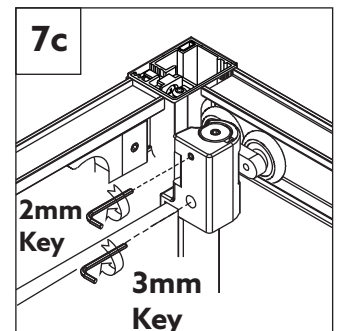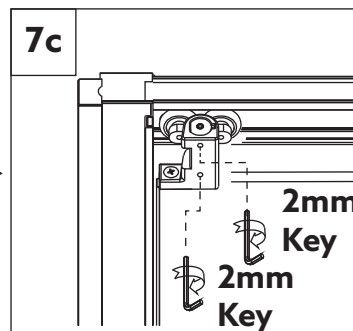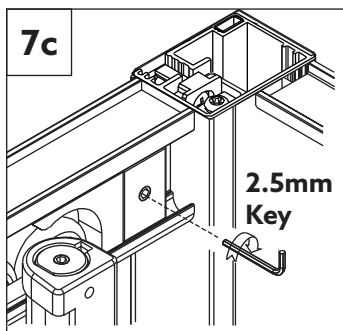


- (a) When the doors align properly, modify the top rollers to establish the appropriate tension in the bottom rollers, ensuring that the doors operate smoothly.
- (b) The gap between the roller and the edge of the extrusion should be at least 10mm.
- (c) Fastening rollers and bumpers as per steps shown.


8

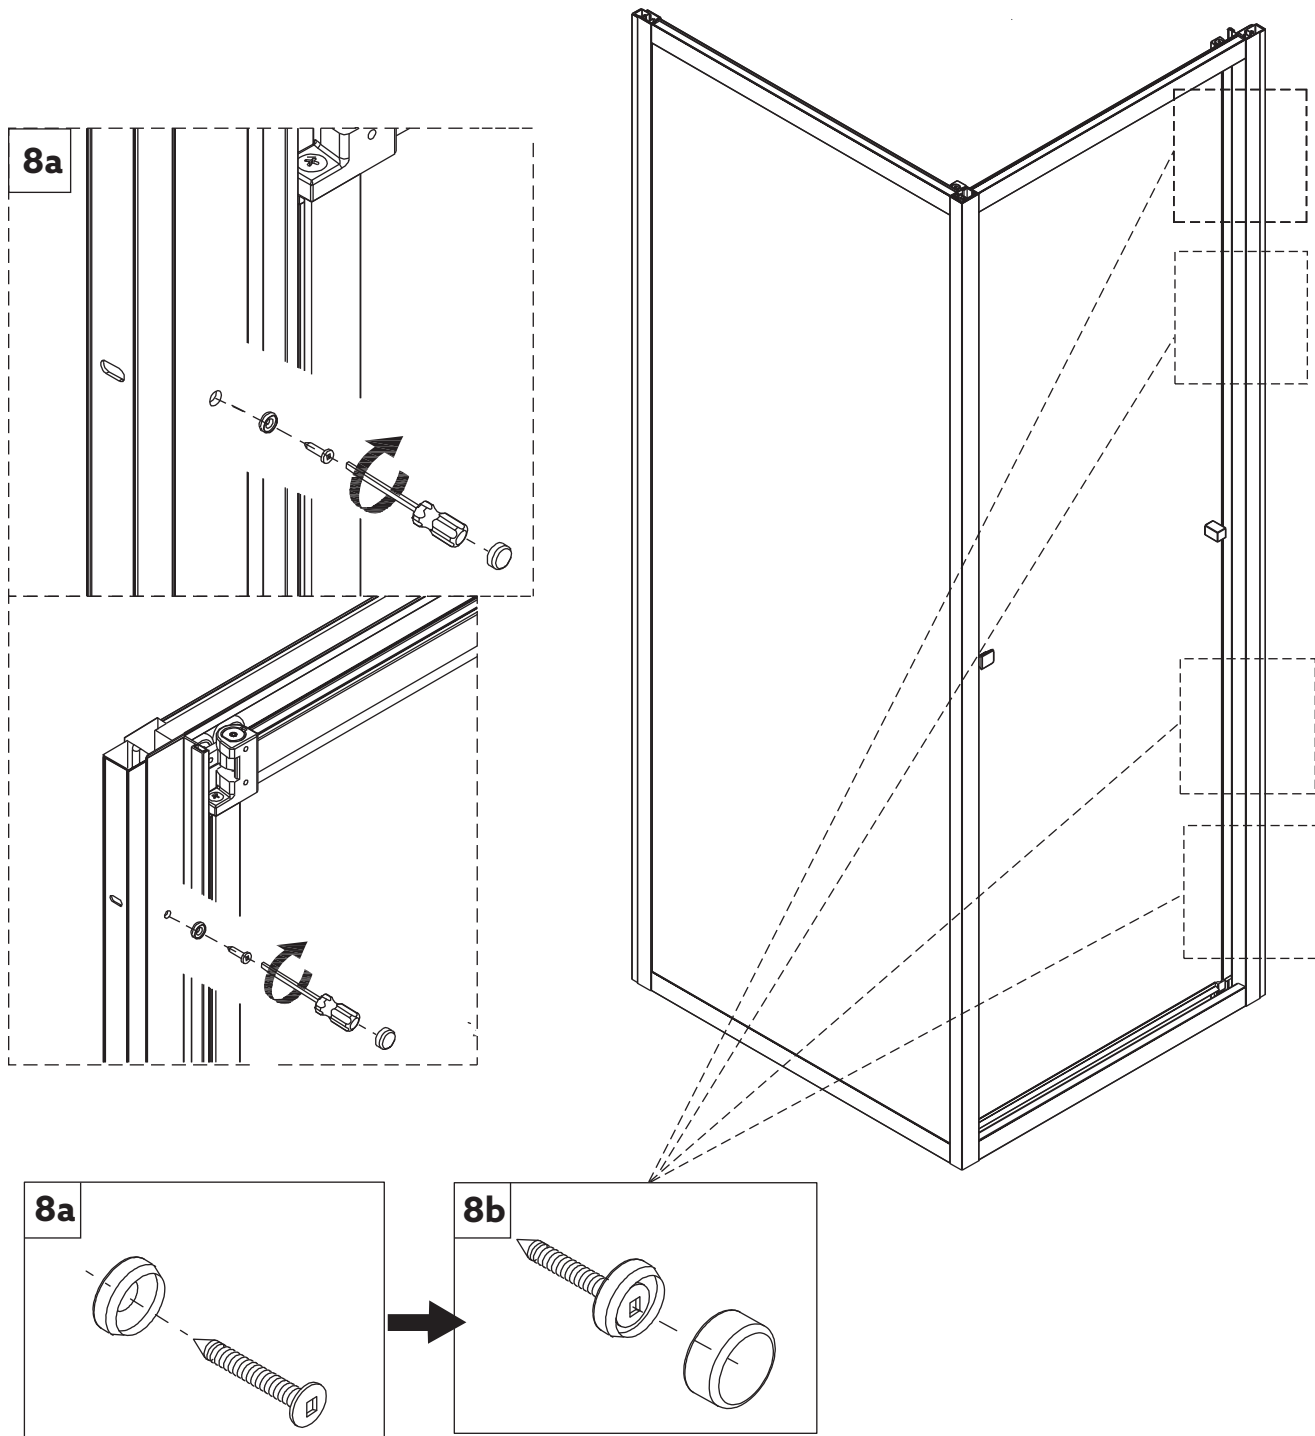

- (a) Place a screw washer over the wall retainer screw. Insert wall retainer screw with washer into the pre-drilled hole and tighten.
- (b) Place the screw cap on & repeat steps for all 4 screws in wall retainer extrusion.

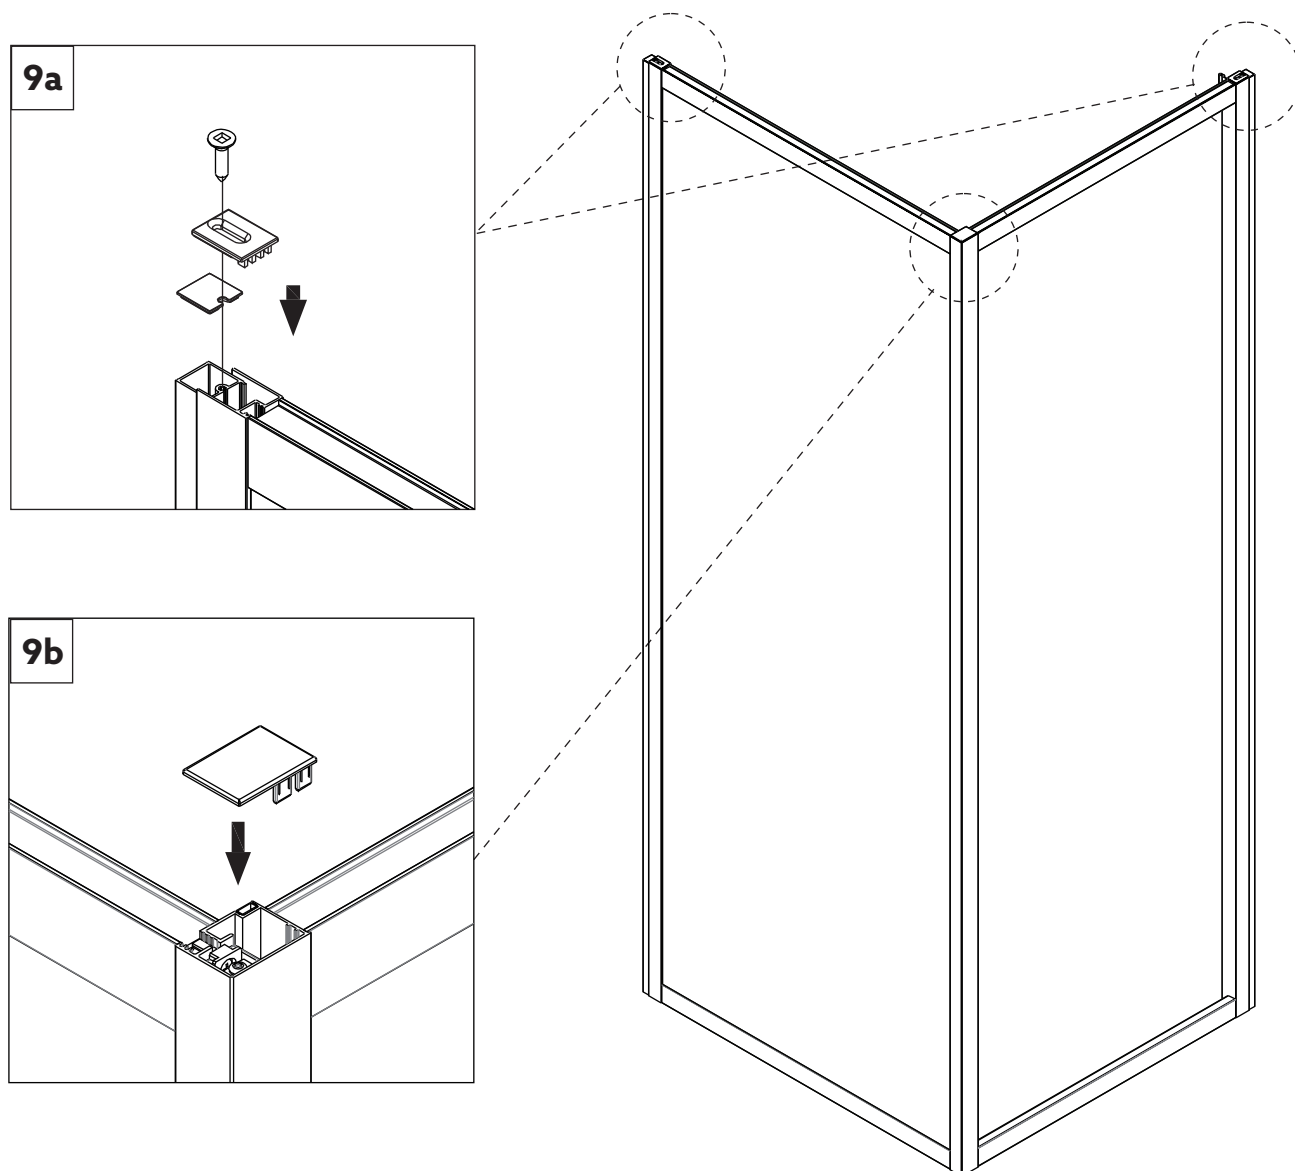
9

- (a) Fit the wall retainer extrusion cap and the adjustable extrusion cap over the wall retainer and secure as shown in fig 5a. to the top of the extrusions. Tighten the fixing cap screw.
- (b) Fit the corner extrusion top cap to the corner extrusion. It should 'snap' into place.

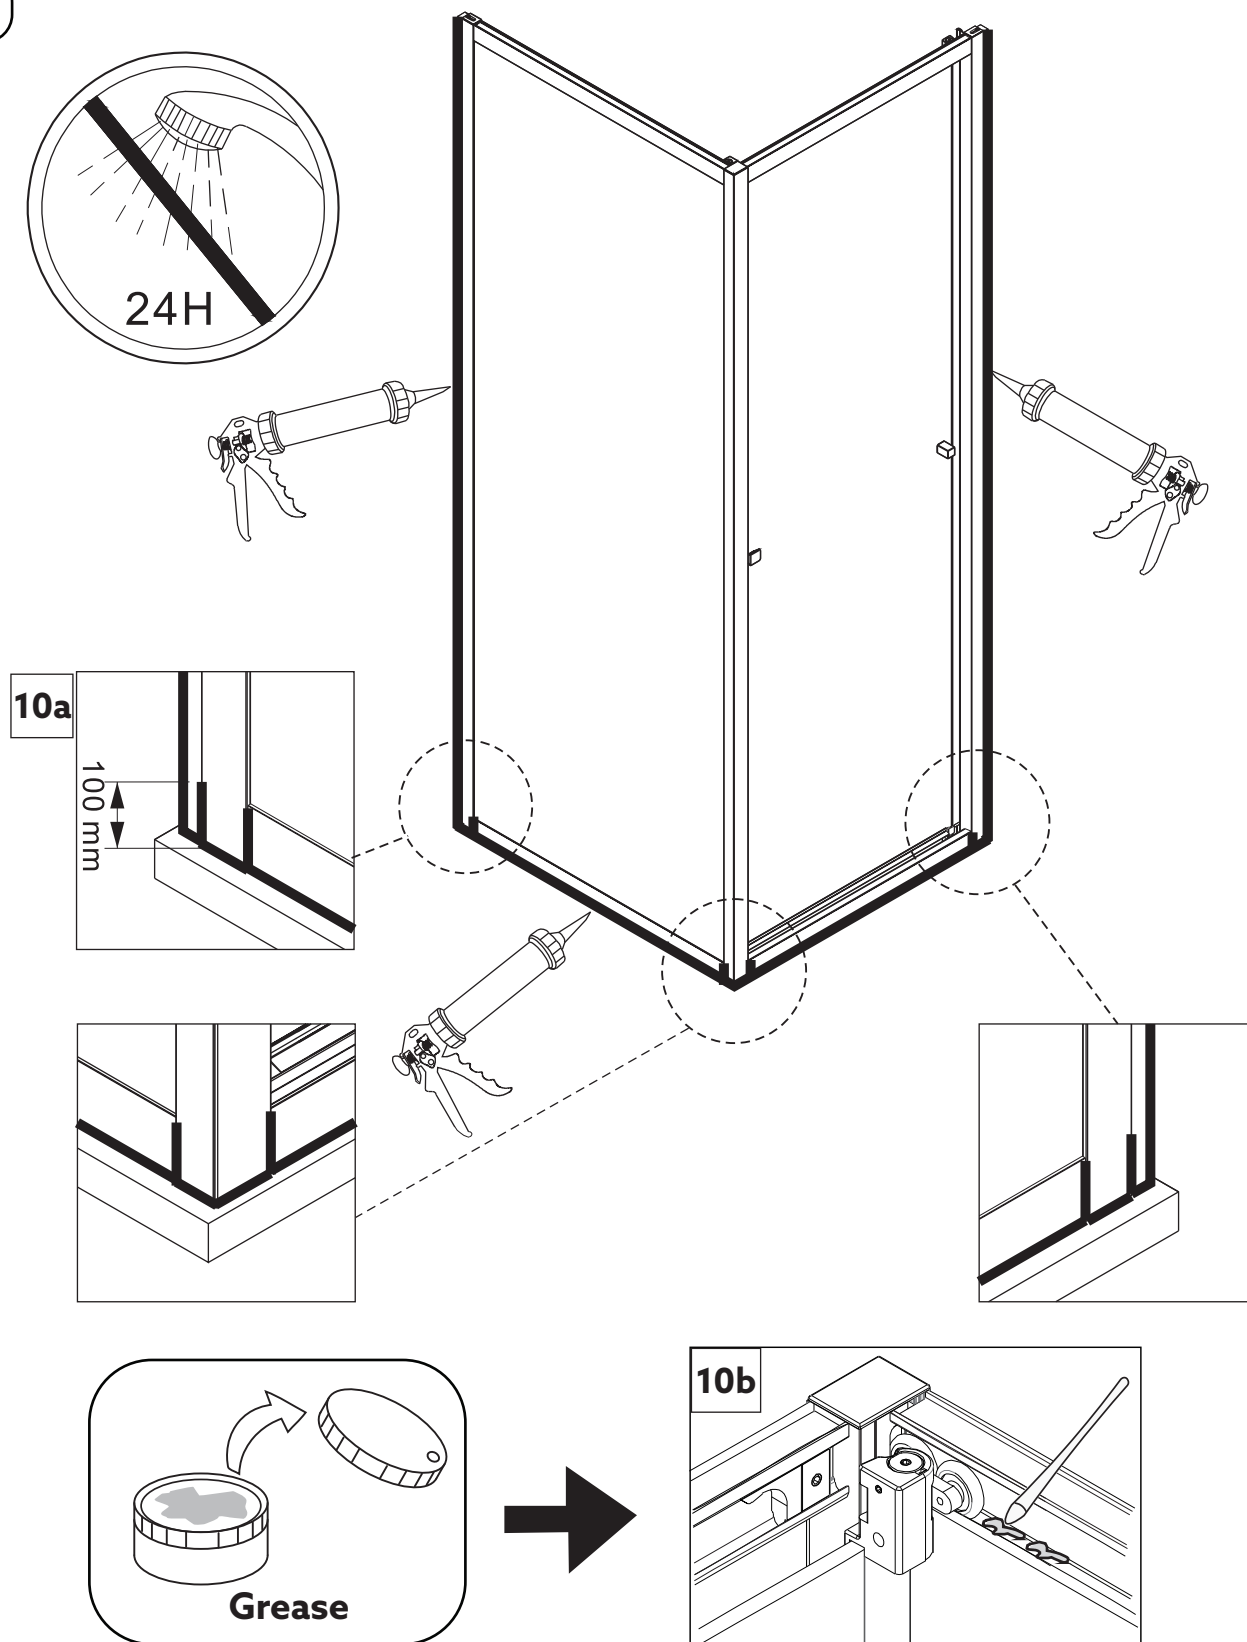
10

- (a) Apply sealant along the outside surfaces of the enclosure.
- Do not seal from inside.
 - Allow the silicone sealant to cure for 24 hours before use.
- (b) Lubricate the upper and lower rail channels with grease.

SPARE PARTS: 900x900mm Left Hand Configuration

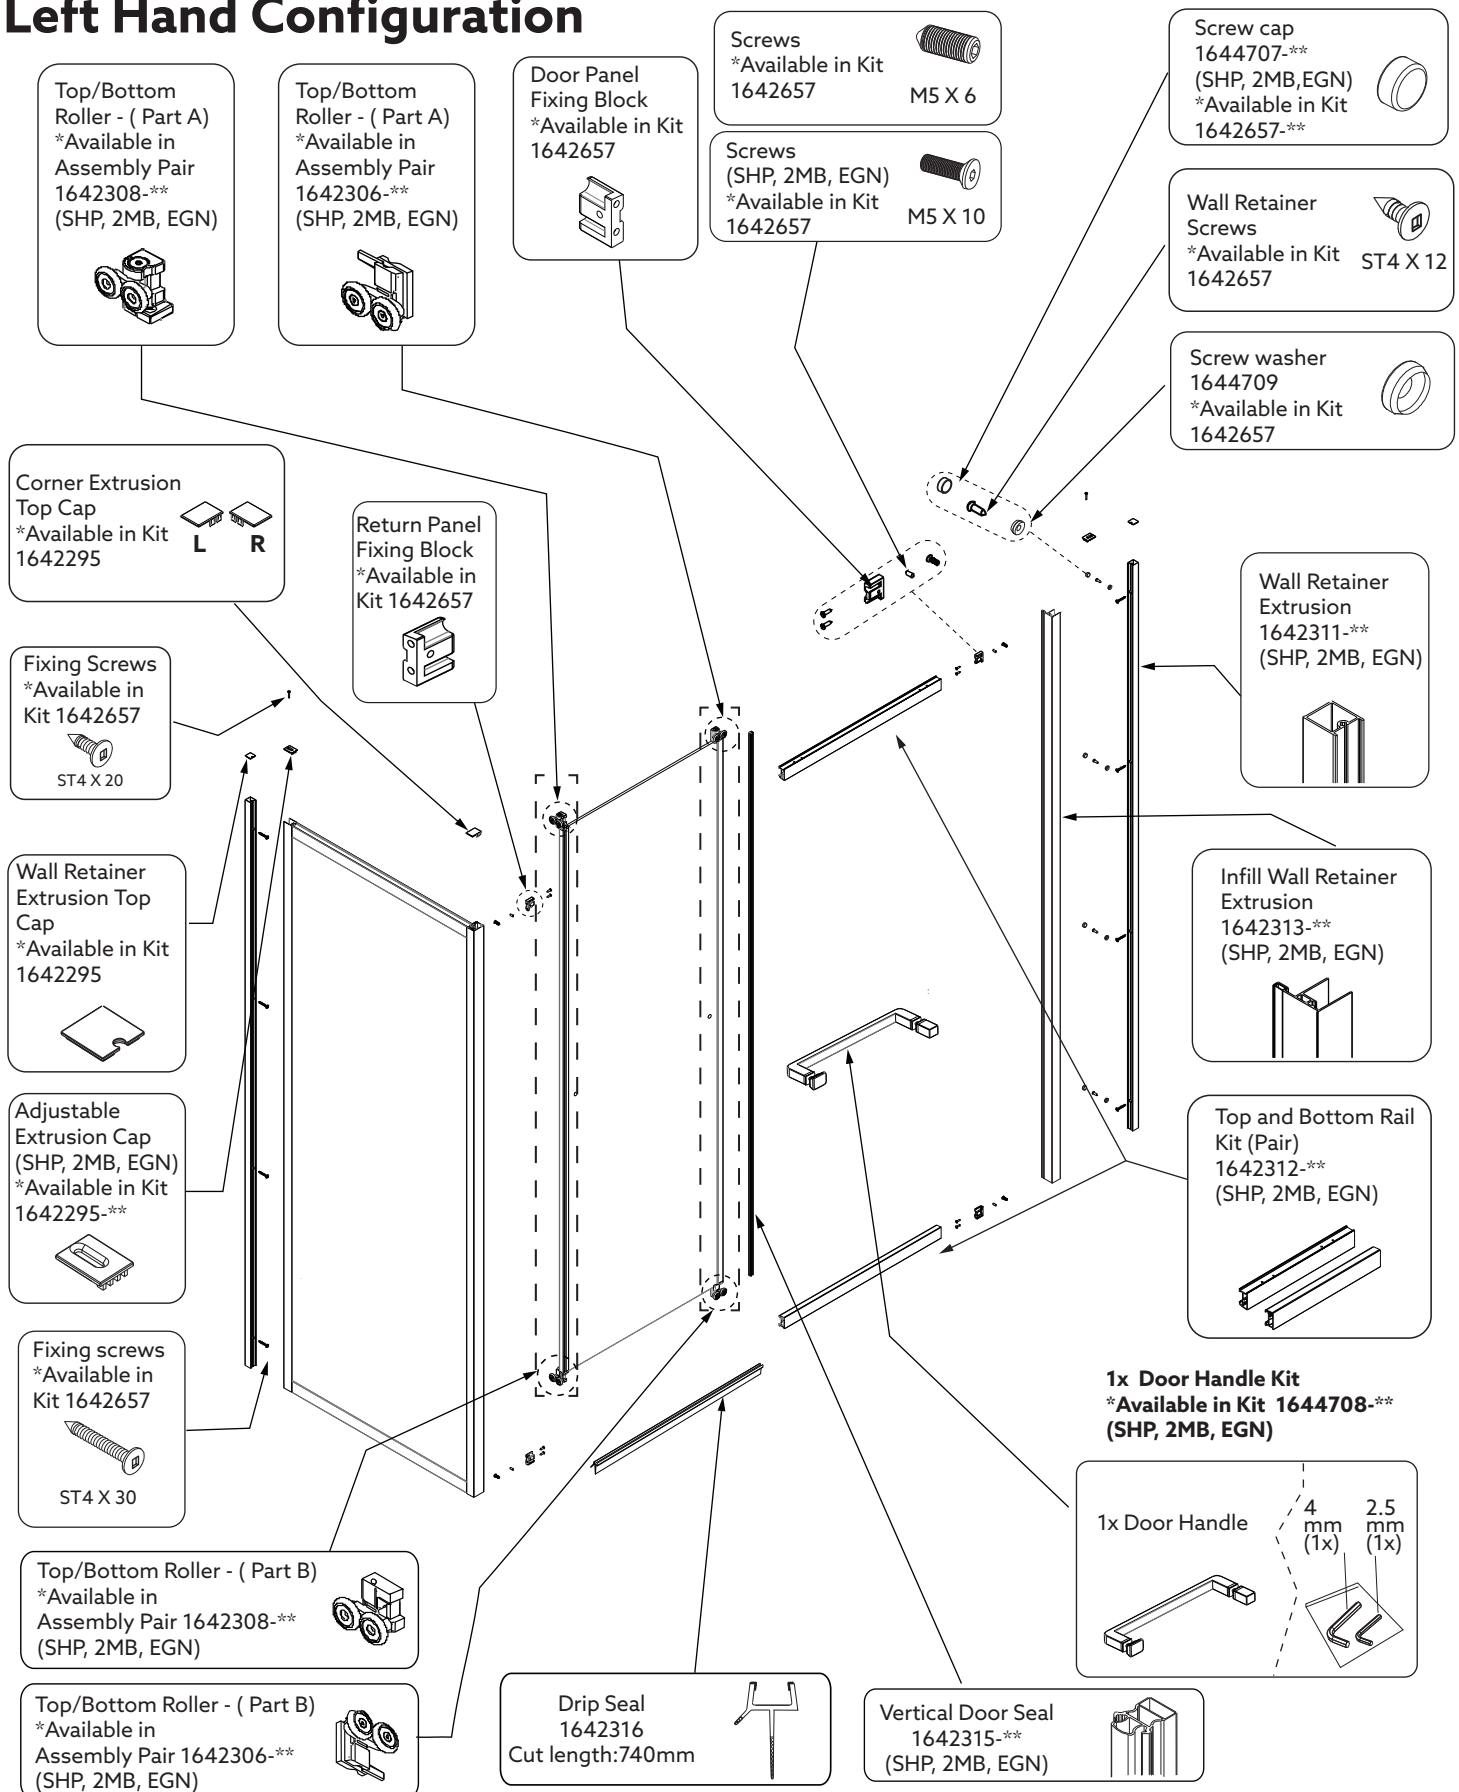

SPARE PARTS: 900x900mm Right Hand Configuration

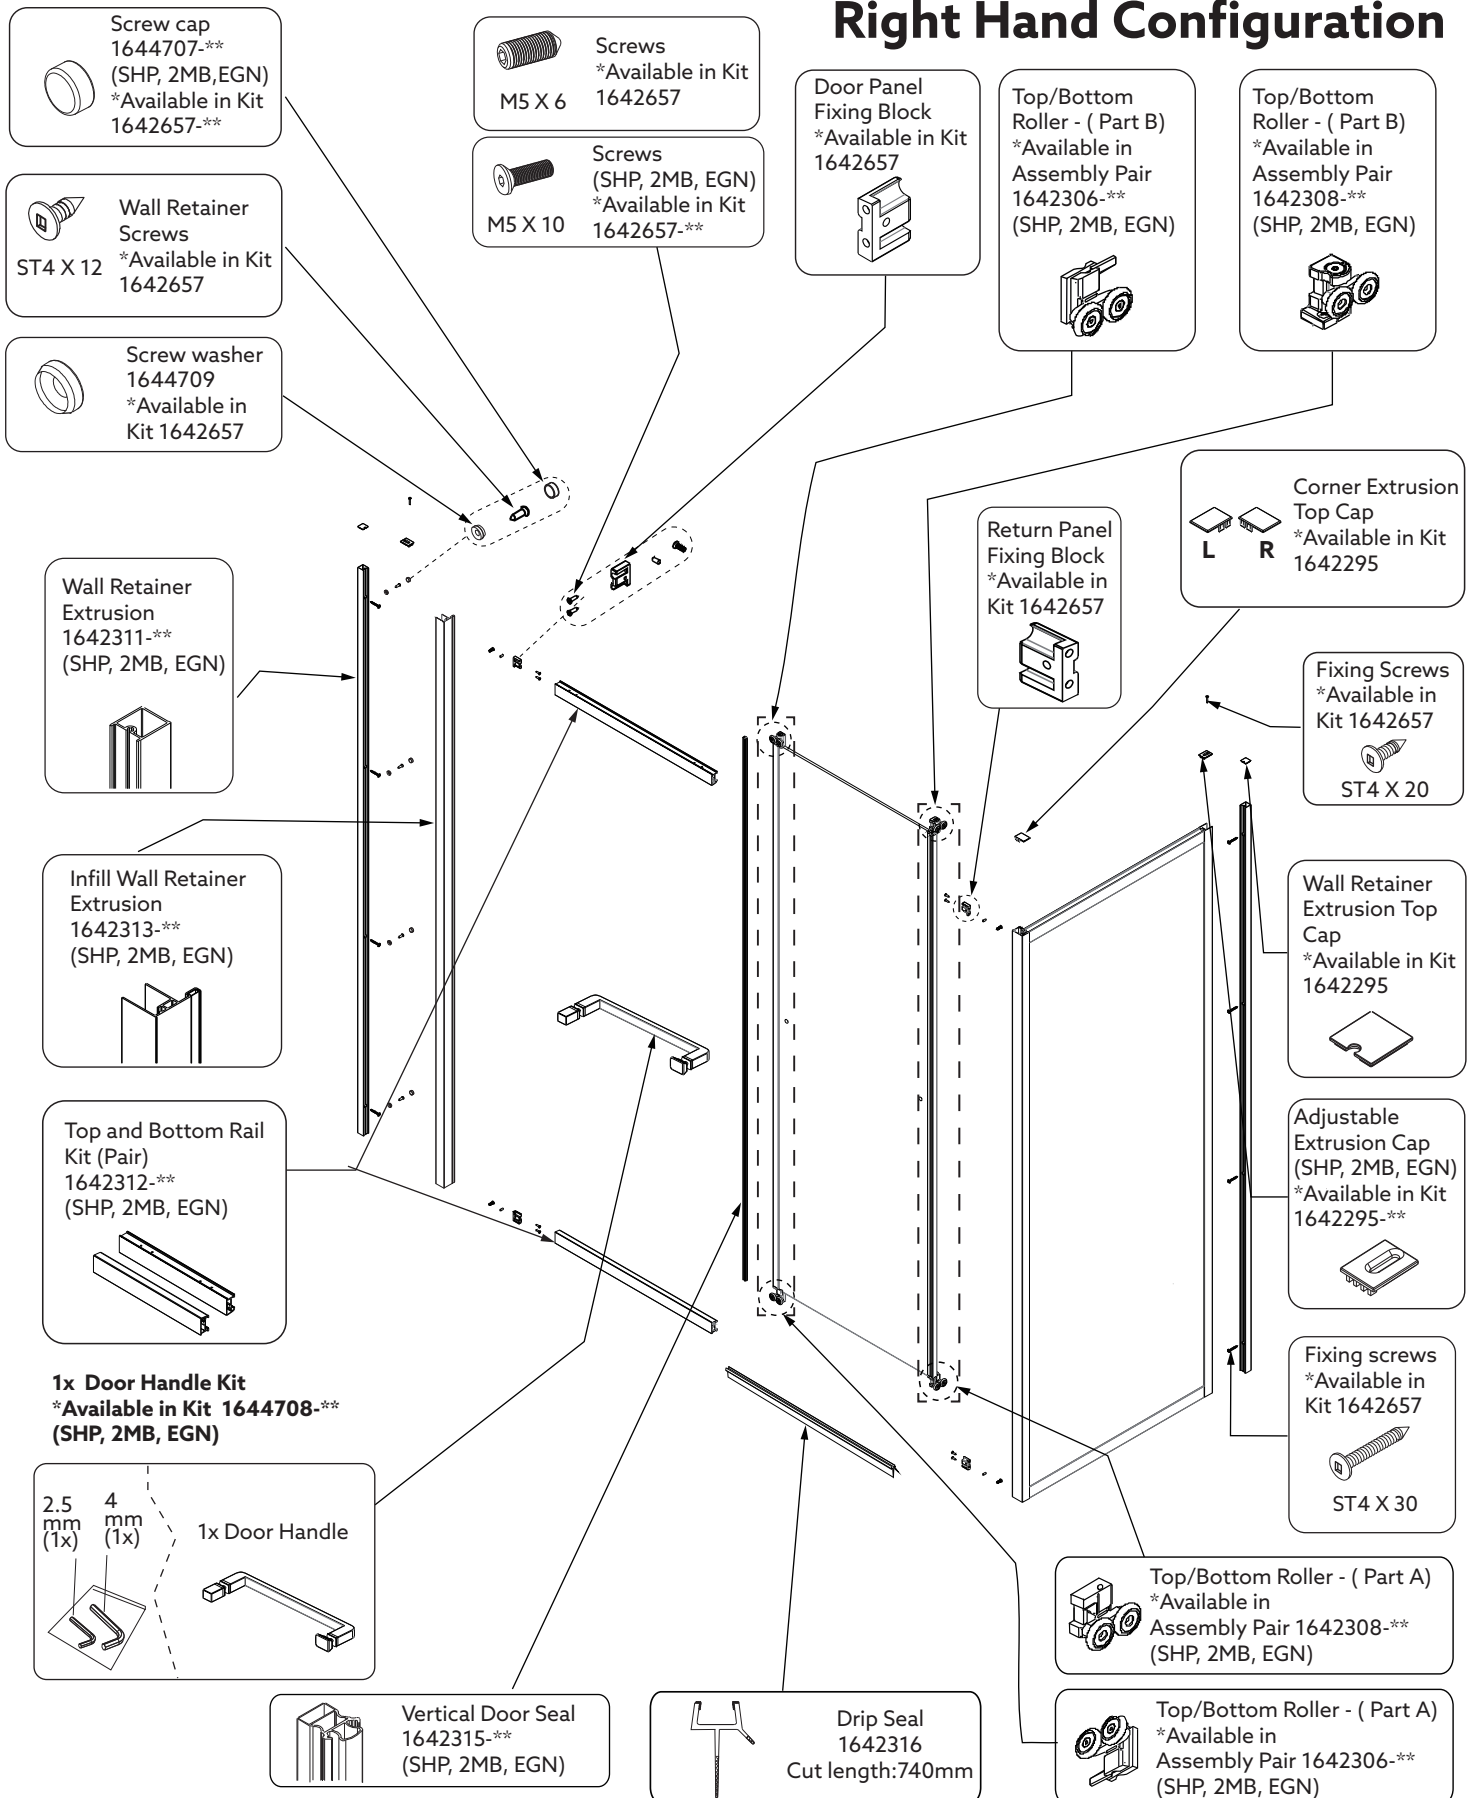


CLEANING AND MAINTENANCE INSTRUCTIONS

Please refer to the homeowners guide and our website for cleaning instructions.


SPARE PARTS KIT/Assembly Pair:

900x900mm

Component Kit (900)
1647795-**
(SHP, 2MB, EGN)





Fixing Kit (900)
1642657-**
(SHP, 2MB, EGN)




	2x Corner Extrusion Top Cap (Semi-transparent)
	2x Wall Retainer Extrusion Top Cap (Semi-transparent)
	2x Adjustable Extrusion Cap (SHP, 2MB, EGN)

	4x Wall Retainer Screws ST4 X 12		4x Screws M5 X 6		2x Door Panel Fixing Block
	4x Screw cap (SHP, 2MB, EGN)		4x Screws (SHP, 2MB, EGN) M5 X 10		2x Return Panel Fixing Block
	4x Screw washer		8x Fixing screws ST4 X 30		10x Screws ST4 X 20

1x Top and Bottom Rail Kit (Pair) (900) 1642312-** (SHP, 2MB, EGN)

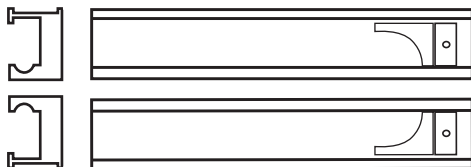


Left Hand Configuration Inside shower

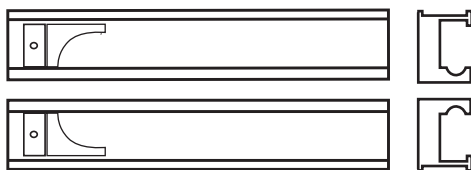


Right Hand Configuration Inside shower


Top/Bottom Roller Assembly Pair- Open Side 1642308-** (SHP, 2MB, EGN)

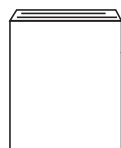


Top/Bottom Roller- Part A (SHP, 2MB, EGN)



Top/Bottom Roller- Part B (SHP, 2MB, EGN)




Top/Bottom Roller Assembly Pair- Return Side 1642306-** (SHP, 2MB, EGN)

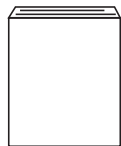



Top/Bottom Roller- Part A (SHP, 2MB, EGN)




Top/Bottom Roller- Part B (SHP, 2MB, EGN)



1x Door Handle Kit 1644708-** (SHP, 2MB, EGN)

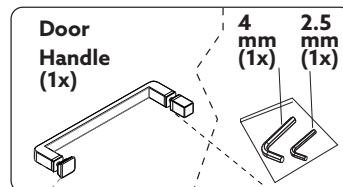

1x Door Handle Gasket Kit 1658522-BL

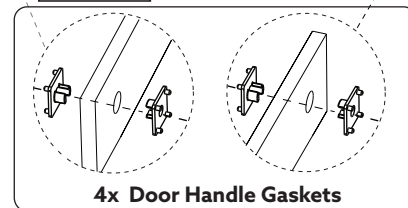

CONTACT AND WARRANTY INFORMATION

NEW ZEALAND

Kohler New Zealand Limited

0800 100 382

info@englefield.co.nz

englefield.co.nz

AUSTRALIA

englefield.com

