



# INSTALLATION INSTRUCTIONS

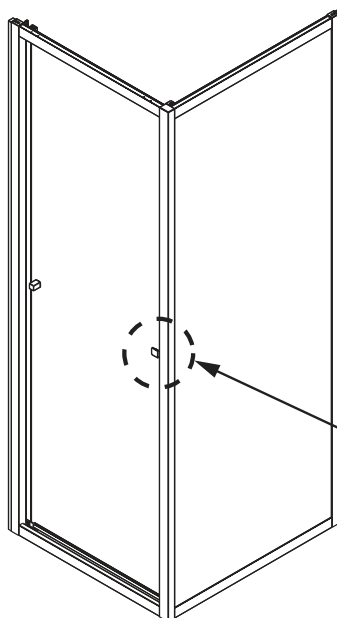


## SHOWER | TIVOLI® - INSLIDE™ DOOR 900 X 900 mm

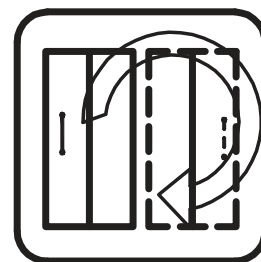

Push here to open

RIGHT HAND INSTALLATION

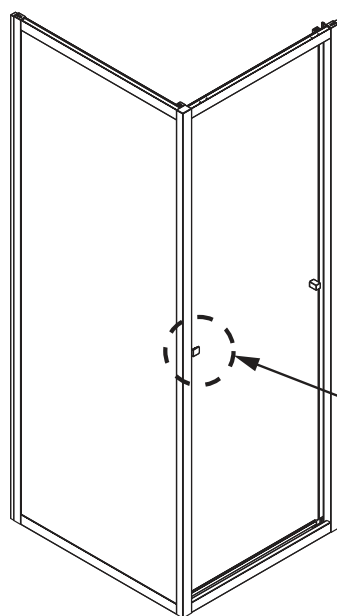

Push here to open

LEFT HAND INSTALLATION



To assist with product tracking the shower has QR code label underneath the corner extrusion top cap.  
Use this QR code when contacting customer support for assistance with your newly purchased shower.

## BEFORE YOU BEGIN:

Before installing the shower please read these instructions carefully to familiarise yourself with the required tools, materials, and installation sequences. Please leave the QR code label for the consumer after installation. Refer to the separate care and maintenance guide for important care and cleaning information.

Ensure that the installation of the shower tray and wall, where applicable, is completed prior the installation of the shower door and return. Follow all warnings, cautions and instructions contained in this guide.

Check that the mixer and other tapware are installed clear of the opening door path.

### SAFETY:

1. ENGLEFIELD strongly recommends that a minimum of TWO persons install this enclosure due to the weight of the door panels
2. Toughened safety glass cannot be cut. Risk of injury or product damage.
3. Wear protective footwear when lifting panels.
4. Wear safety glasses when drilling.


### ATTENTION:

1. The wall retainers must be installed onto a waterproof, vertical and flat wall surface. Failure to do so will result in an unsatisfactory seal, which may cause property damage. The wall inclination (out of squareness) is recommended to be out by no more than +/- 2mm/m.
2. Please install this door onto an ENGLEFIELD tray, unless installing directly onto tiled walls and floor (vinyl flooring or tiles).


⚠ For the door to operate correctly the floor and tray **MUST BE** level.





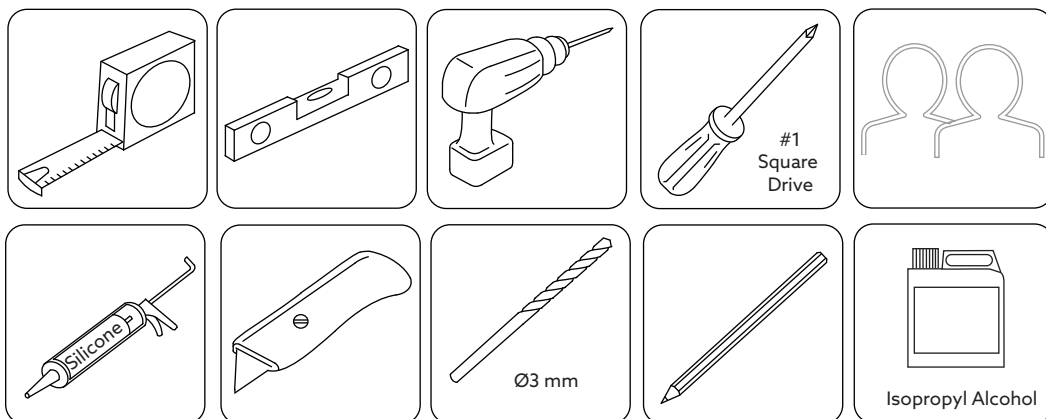



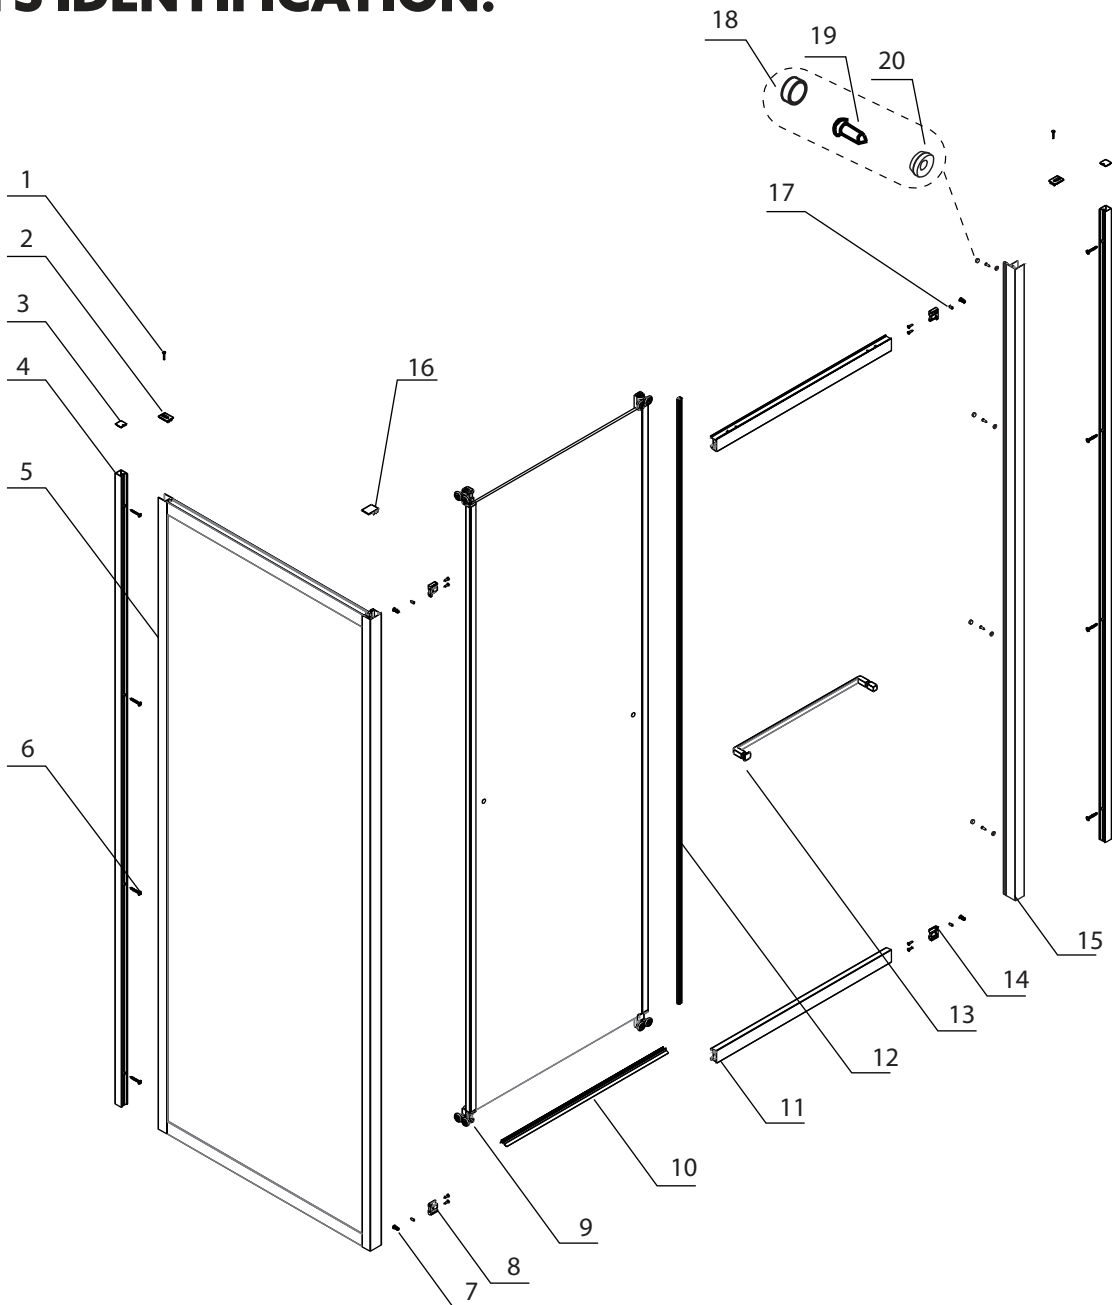













3. Care must be taken when drilling into walls and floors to avoid any hidden pipes or wires.
4. Prior sealant application, clean the surface with Isopropyl Alcohol.
5. It is the responsibility of the INSTALLER to ensure that the installation complies with council and or local authority by laws.

## TOOLS AND MATERIALS REQUIRED:













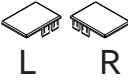

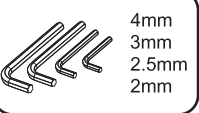


PARTS IDENTIFICATION:

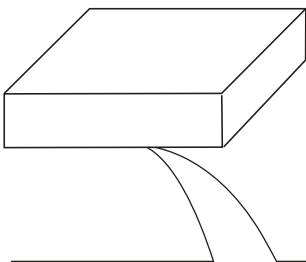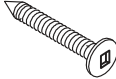


1	 ST4*20	10x	8		2x	15		1x	22	 4mm 3mm 2.5mm 2mm	4x
2		2x	9		1x	16	 L R	2x			
3		2x	10		1x	17	 M5*6	4x			
4		2x	11	 L R	2x	18		4x			
5		1x	12		1x	19	 ST4*12	4x			
6	 ST4*30	8x	13		1x	20		4x			
7	 M5*10	4x	14		2x	21		1x			

PARTS IDENTIFICATION:

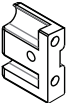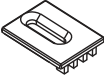
 <div>1x Fixing Kits</div>	
 <div>M5 X 6</div>	4x Screws
 <div>M5 X 10</div>	4x Screws
 <div>ST4 X 30</div>	8x Fixing screws
 <div>ST4 X 20</div>	10x Screws
 <div>ST4 X 12</div>	4x Wall Retainer Screws
 <div>4x Screw cap 1644707</div>	
 <div>4x Screw washer 1644709</div>	
	 <div>2x Return Panel Fixing Block</div>
	 <div>2x Door Panel Fixing Block</div>
	 <div>2x Adjustable Extrusion Cap</div>
	 <div>2x Extrusion Cap</div>
	 <div>2x Extrusion Top Cap</div>
	 <div>1x Grease</div>
	 <div>4x Allen Key</div>

1x Seal Pack

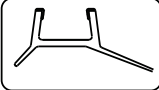


1x  
Drip Seal


1x Extrusion Pack

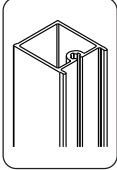

2x  
Wall Retainer  
Extrusions

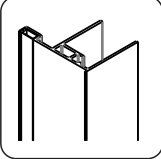


1x  
Infill Wall Retainer  
Extrusion

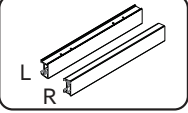

2x  
Top and Bottom  
Rail(Pair)

Bubble Bag

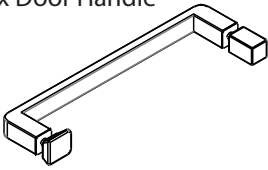


1x Door Handle

1x Handle Kits  
1644708-\*\*  
(SHP, 2MB, EGN)

1x Door Set

1x Return Panel Set

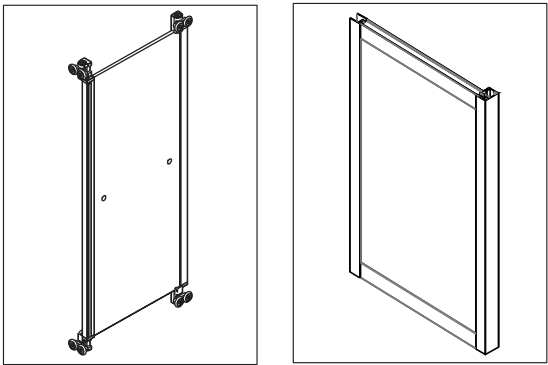

## CONSTRUCTION REQUIREMENTS

Acrylic tray with acrylic wall or acrylic tray with tile wall.




### ATTENTION

Due to the weight of the glass panels Englefield strongly recommends constructing double studs to fix the wall retainers to.


Size	DIM"A"	DIM"B"
900 x 900	900	900

**NOTE:** This setup allows for the use of standard 10 mm wall board. A thicker wall board could make the recess too narrow for the door system.


For tile walls the complete door system must be installed onto the waterproof membrane **PRIOR TO WALL TILING.**

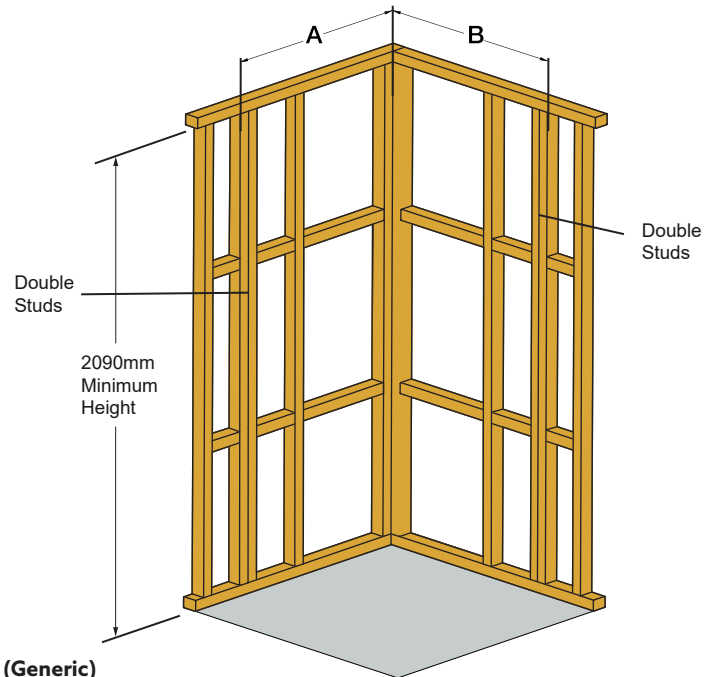

**SQUARE INSLIDE  
900 x 900**

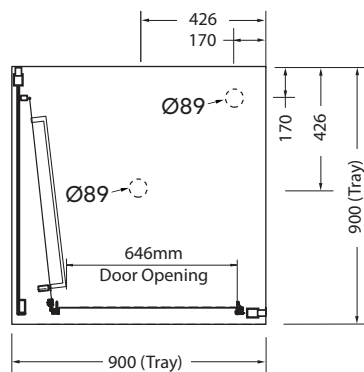

**Front View (Generic)**

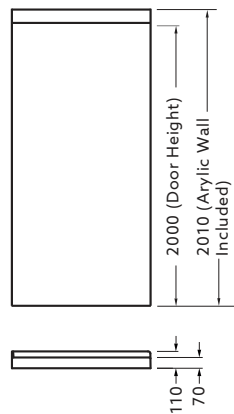

Nominal Size	900 x 900
Door Adjustment Range	864-879 mm
Return Adjustment Range	864-879 mm

## INSTALLATION REQUIREMENTS

**Tray:** For tray installation refer to the instructions supplied with the tray.

**Wall:** For acrylic wall installation refer to the instructions supplied with the wall.

## CONSTRUCTION REQUIREMENTS

For tile floor and tile wall.



### ATTENTION

Due to the weight of the glass panels Englefield strongly recommends constructing double studs to fix the wall retainers to.

#### For tile floor and tile wall - Finished surfaces

The door set can be installed directly onto the wall and floor tiles.

Please check that the mixer and other tapware are installed clear of the opening door path.

Size	Dim 'C'	Dim 'D'
900 x 900	884	884

NOTE: Before tiling, ensure that there is adequate timber framing for the shower system to be fixed into.

Due to the weight of the glass double studs are required to fix the wall retainer to.

"C" & "D"

\* Measure to Finished Surfaces


The door set can be installed directly onto the wall and floor tiles.

Ensure there is adequate fall to the waste.

Please check that the mixer and other tapware are installed clear of the opening door path.



Finish/Tiled hob to be :

1. Minimum 75mm wide and 70mm high.
2. 1.5-2° fall front to back is acceptable.
3. Level (+/-0mm) left or right.

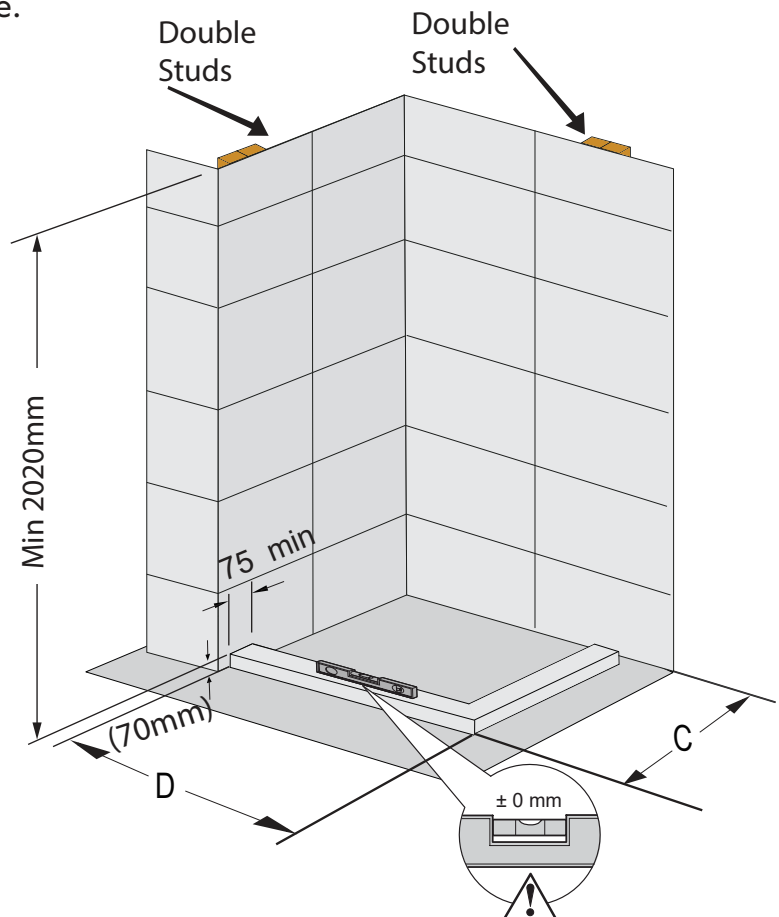


INSTALLATION:

Choose what installation you prefer. This will determine where the return panel will be installed on the tray.

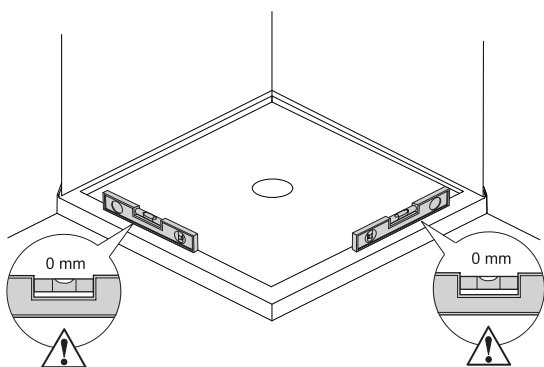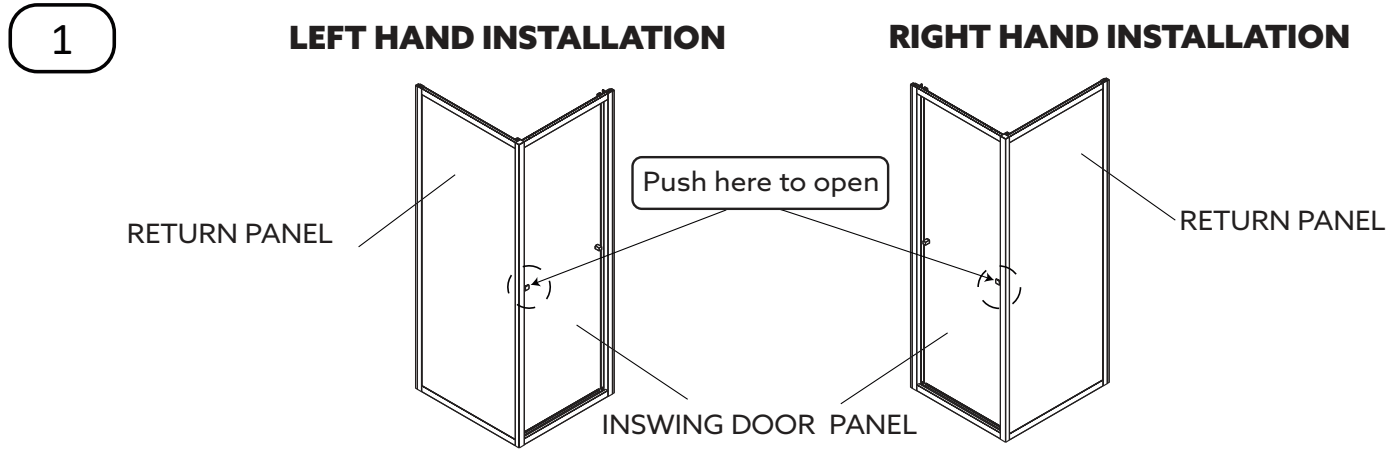


**Caution:** Ensure tray or tiled hob is level & walls are vertical & square.

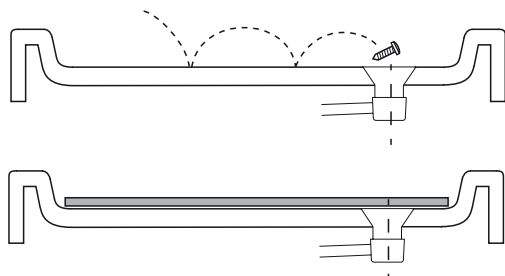






**Tip:** Cover the waste to prevent the loss of small parts. If installing onto a tray protect the tray surface during installation.

- (a) Mark the locations of the wall retainers.
- Mark from **"finished wall surface"** to outer edge of retainer.

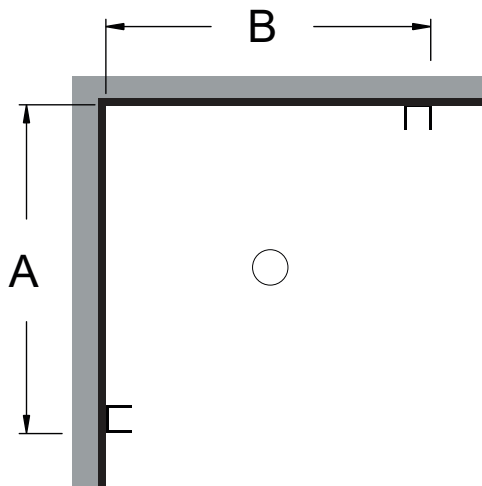

Size	A	B
900 x 900	872	872

2

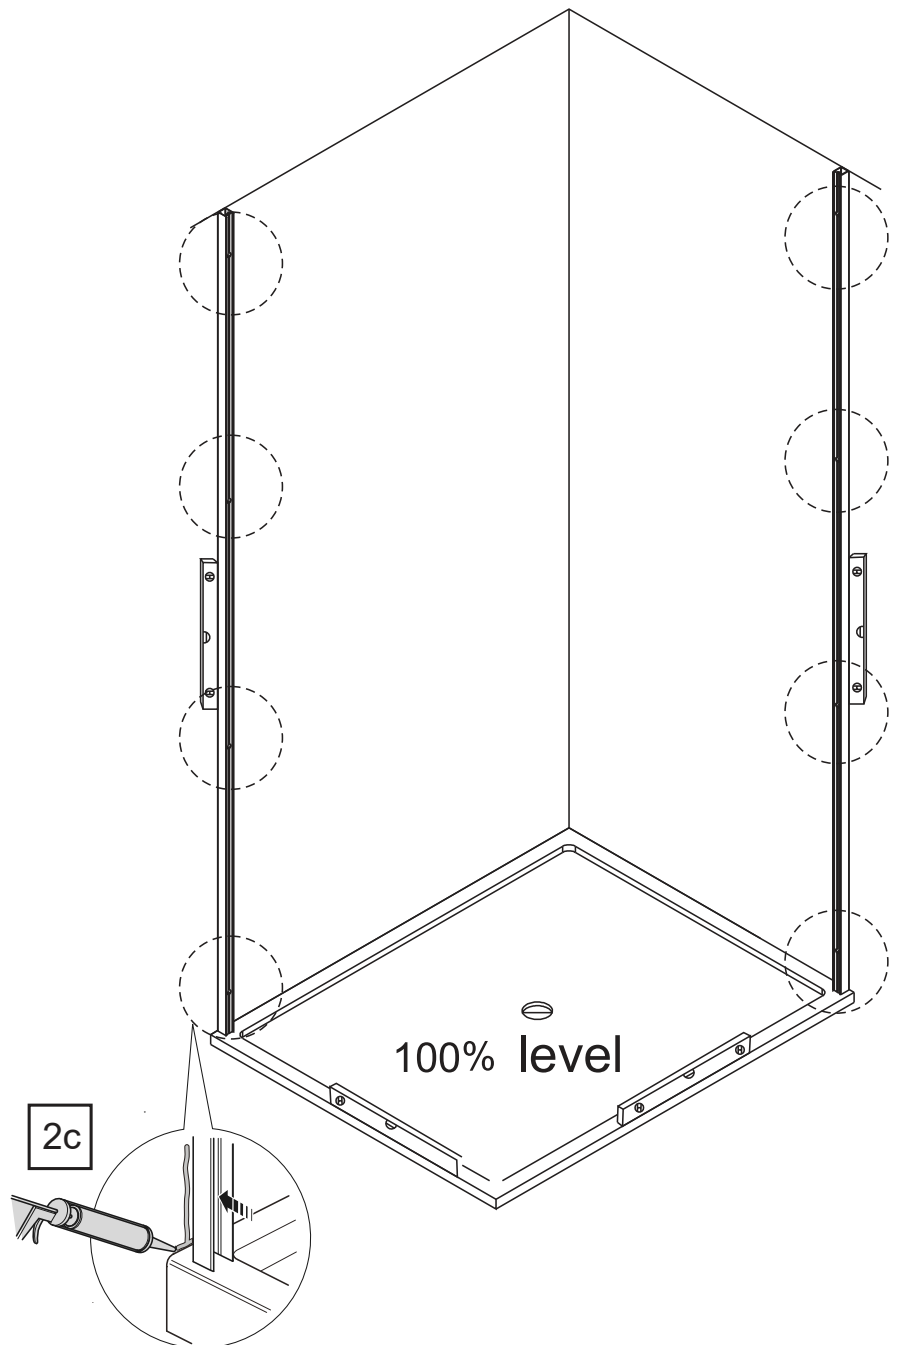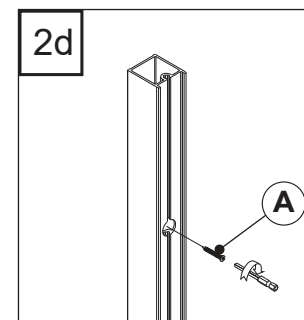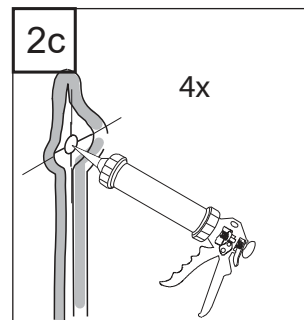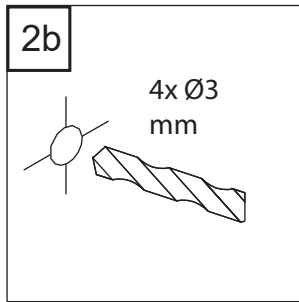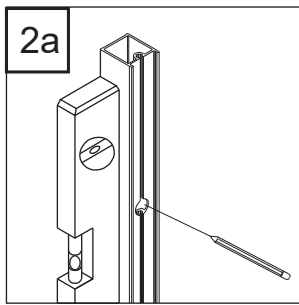


- (a) Position a wall channel for the return panel. Using a level, make sure that the channel is upright.
- (b) Mark the position of the fixing holes, then remove the channel.
- (c) Drill with a 3mm bit. For other types of wall structure, alternative fixings may be required (not supplied).
- (d) Apply silicone sealant along the length of the wall and at the bottom where the wall retainer extrusion will be placed, including the top of the tray.
- (e) Position the wall channel on the wall and install the fixing screws (A). Fully tighten the fixing screws, making sure that the wall retainer extrusion remains vertical. Repeat the process for the door panel wall channel.





3



**IMPORTANT :**  
ONLY THE TOP ROLLERS REQUIRES THE SPRING TO BE REMOVED.

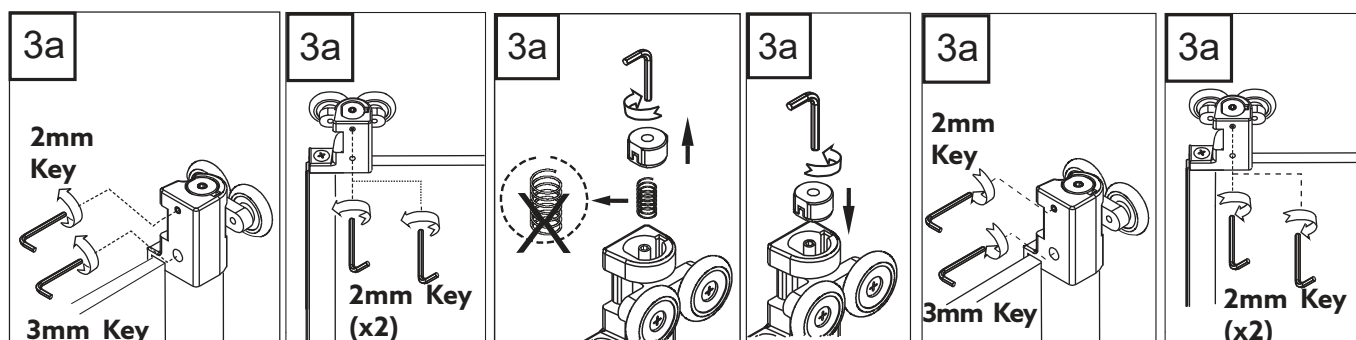


**Note:** Please refer to magnetic seal installation video.  
\*Polarity of magnetic strip is non-handed.

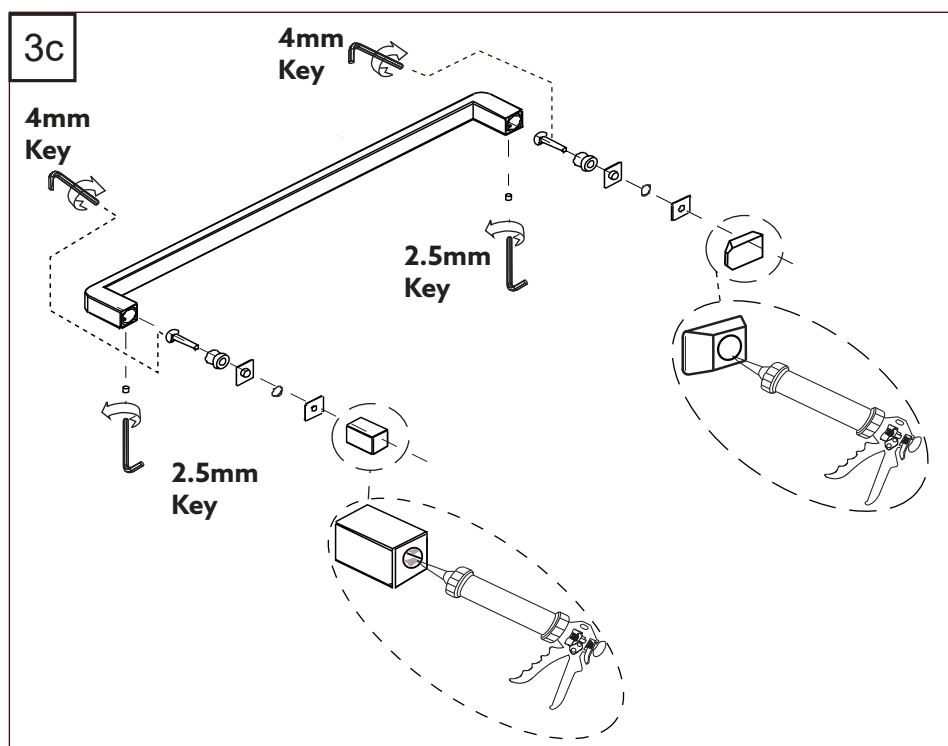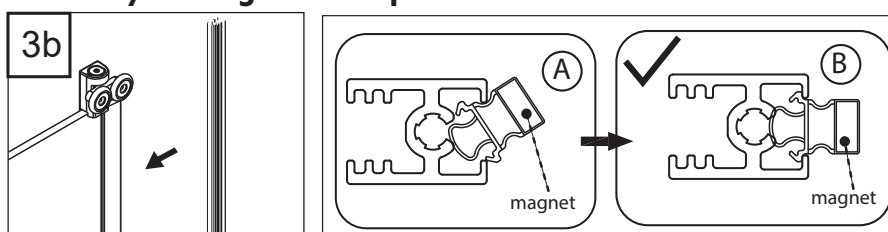








- (a) On the top rollers, loosen the grub screw, remove the top cover caps then remove and discard the springs.
- (b) Install the door handles, ensuring that the grub screws are on the underside. Apply a small amount of silicone in the hole before fixing.
- (c) If not pre-fitted, insert the door seals in an angle (A) and push the magnetic strip, turning into the slot (B), and push in the seal with fingertips.
- (d) Turn the door panel in the final orientation. Magnetic Seal on the front of the extrusion is facing toward outside the shower, matching the magnetic seal in the corner post.
- (e) Lift the door and place it on the protected tray inside the shower to be installed later.

4

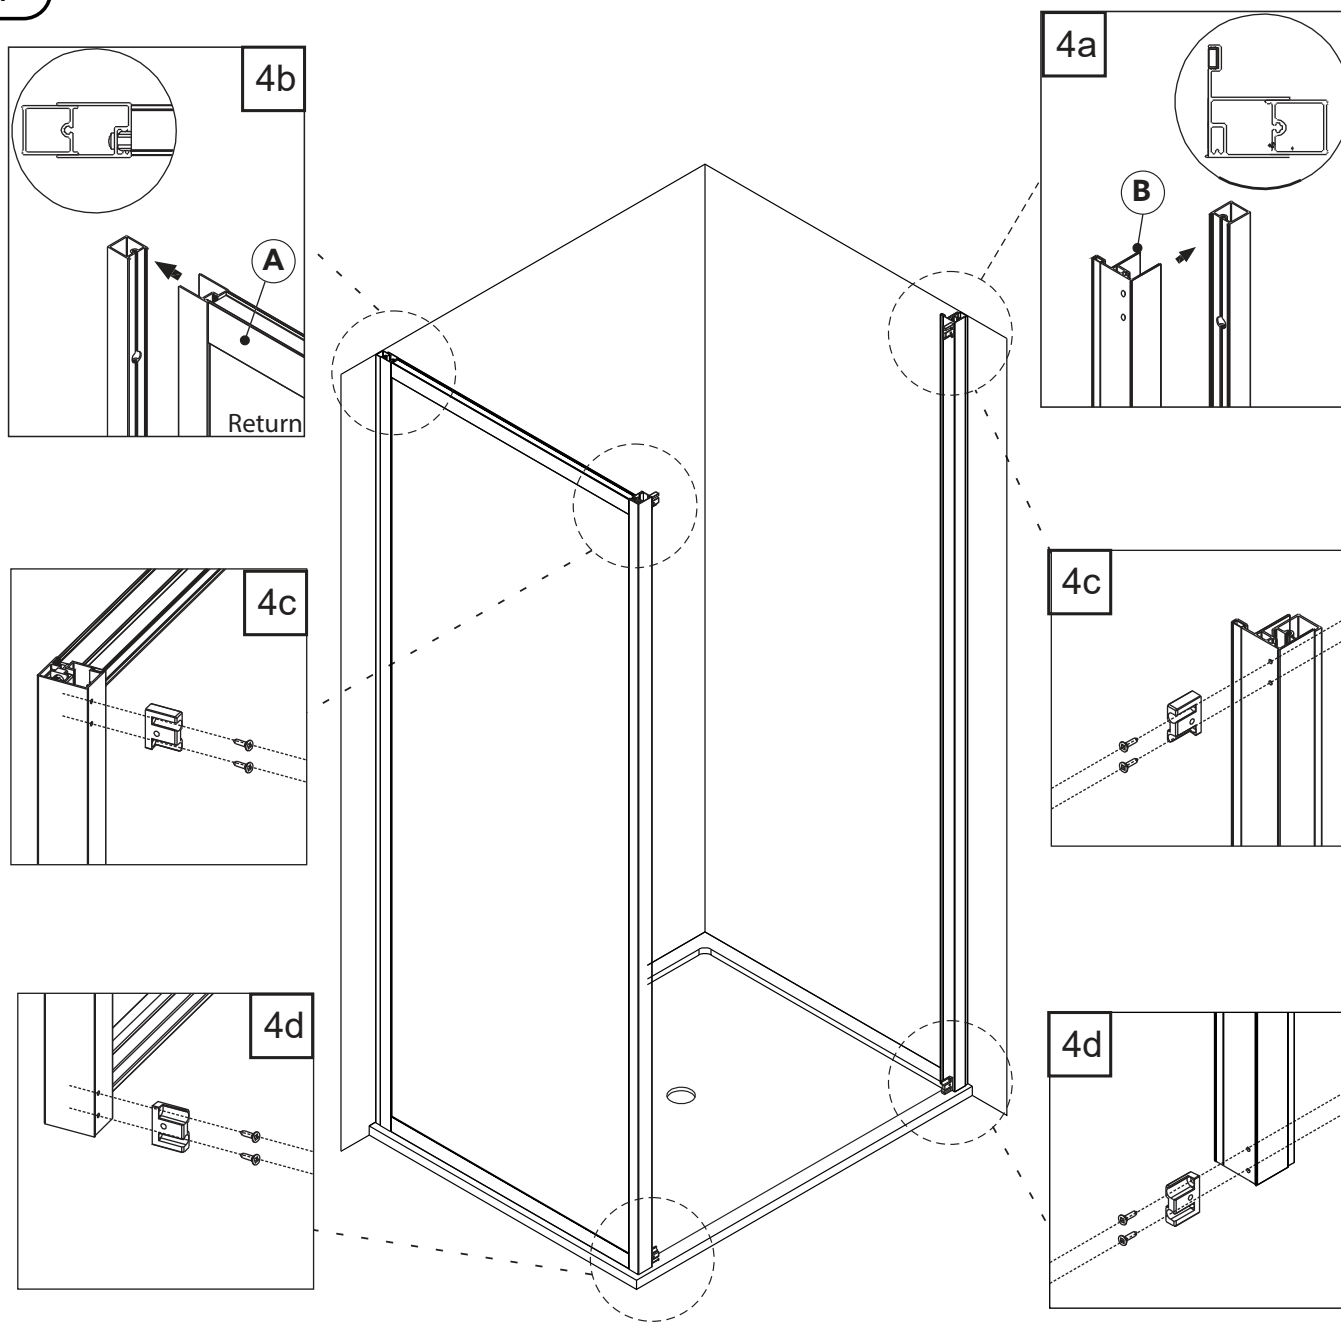


- (a) Fit the door wall retainer extrusion over the door side wall channel (Image 4a).
- (b) Install the return panel over the return wall channel (Images 4b).
- (c) Install the top fixing brackets as shown in image (Image 4c).
- (d) Install the bottom fixing brackets as shown in image (Image 4d).

5

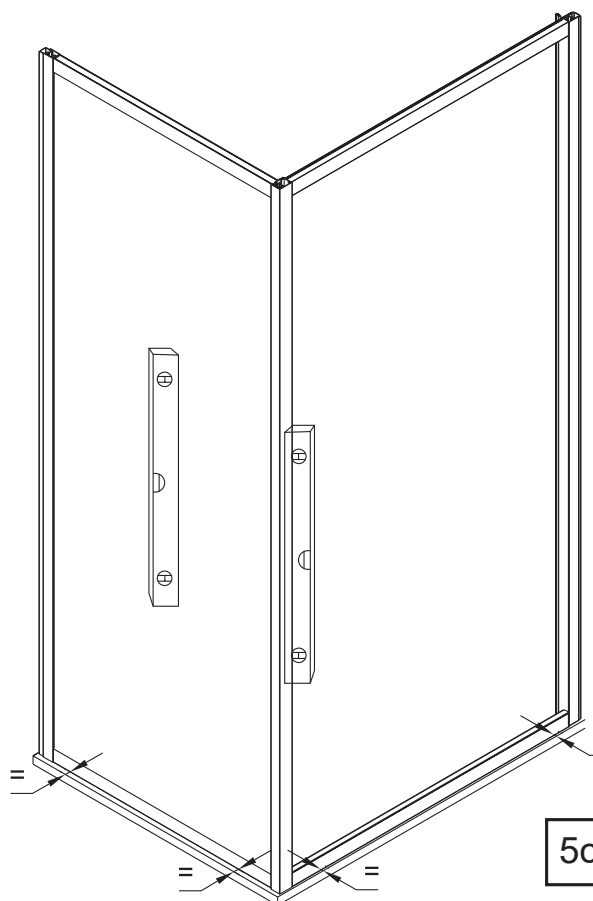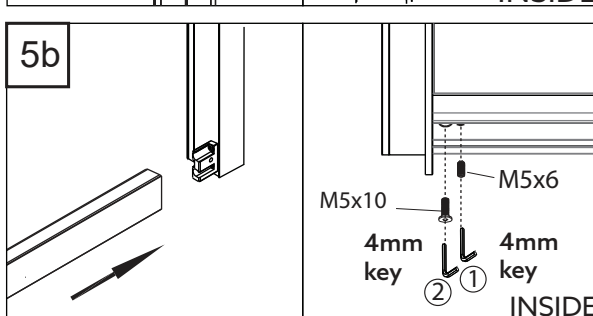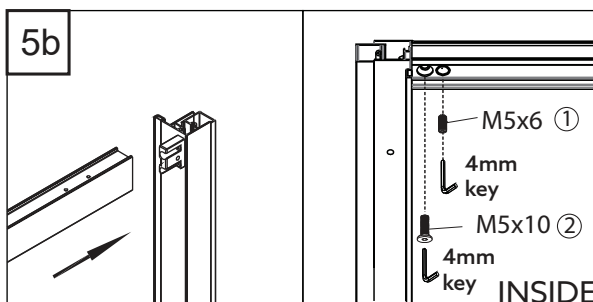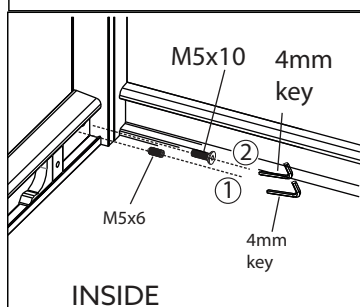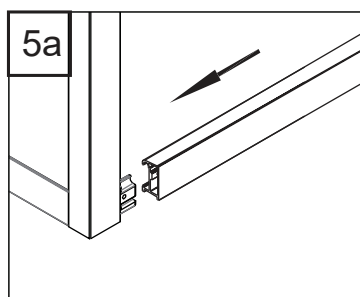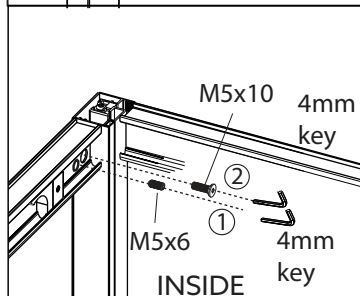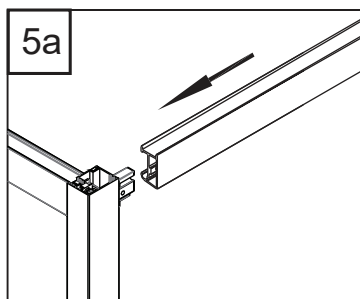



- (a) Push the top and bottom rails over the corner post fixing blocks. Secure with the M5x6 grub screw. Ensure the rail is flush with the corner post, then secure with the M5x10 CSK screw (Images 5a). DO NOT OVERTIGHTEN.
- (b) Repeat on the door wall retainer side (Images 5b). Ensure now that all screws are tighten.
- (c) Ensure that the gap between frame and edge of tray is even all the way around (Image 5c).

6



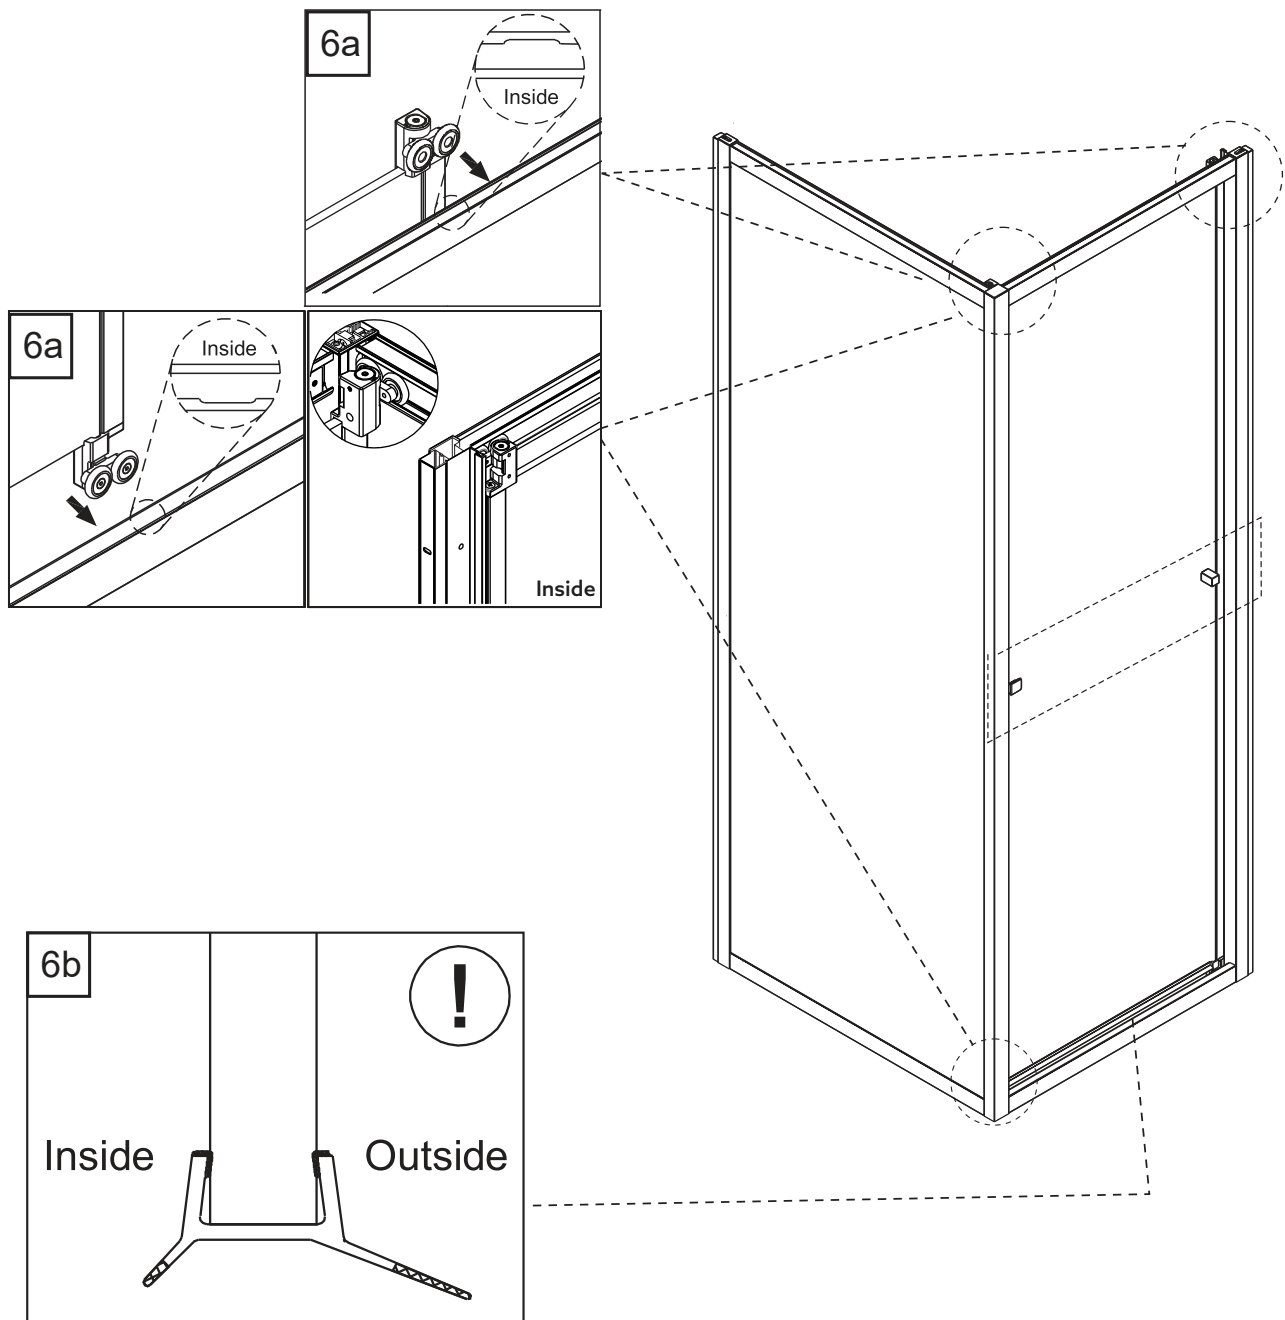


- (a)** Lift the door onto the frame. Place the roller on the door opening top rail and the other roller on the return panel top rail, locate in the notch in the top and bottom door rails. Slide the door panel with the rollers positioned in the middle of the top rail. Take care that rollers do not slide off the rail through the notch cut in the middle of rail. Push down the return panel bottom roller to latch onto the bottom rail. Repeat with the door opening bottom roller. The notch will help latch the roller into the rail.
- (b)** Fit the drip seal with longer fin facing outside of Inslide door.

7

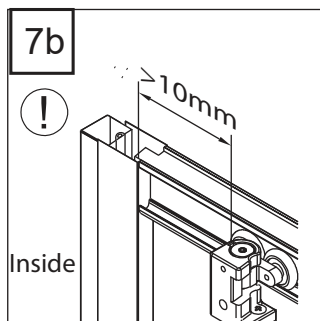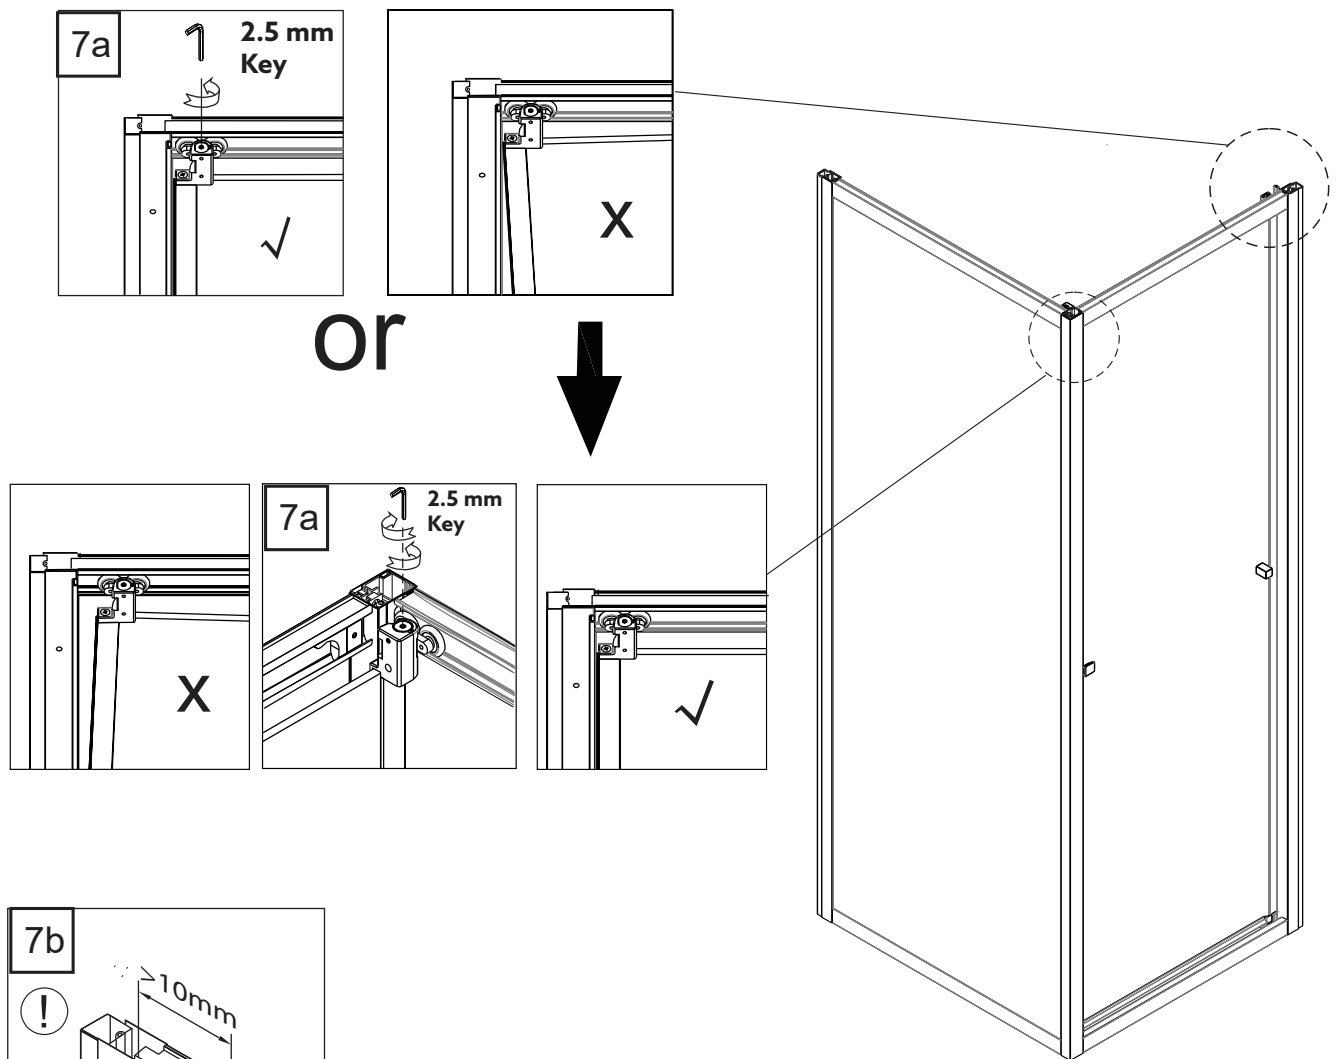


**Note: Please refer to roller adjustment installation video**

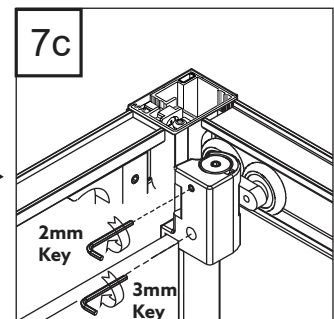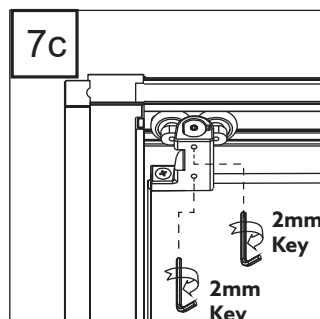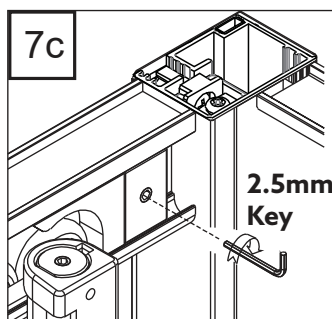


- (a) When the doors align properly, modify the top rollers to establish the appropriate tension in the bottom rollers, ensuring that the doors operate smoothly.
- (b) The gap between the roller and the edge of the extrusion should be at least 10mm.
- (c) Fastening rollers and bumpers as per steps shown.

8

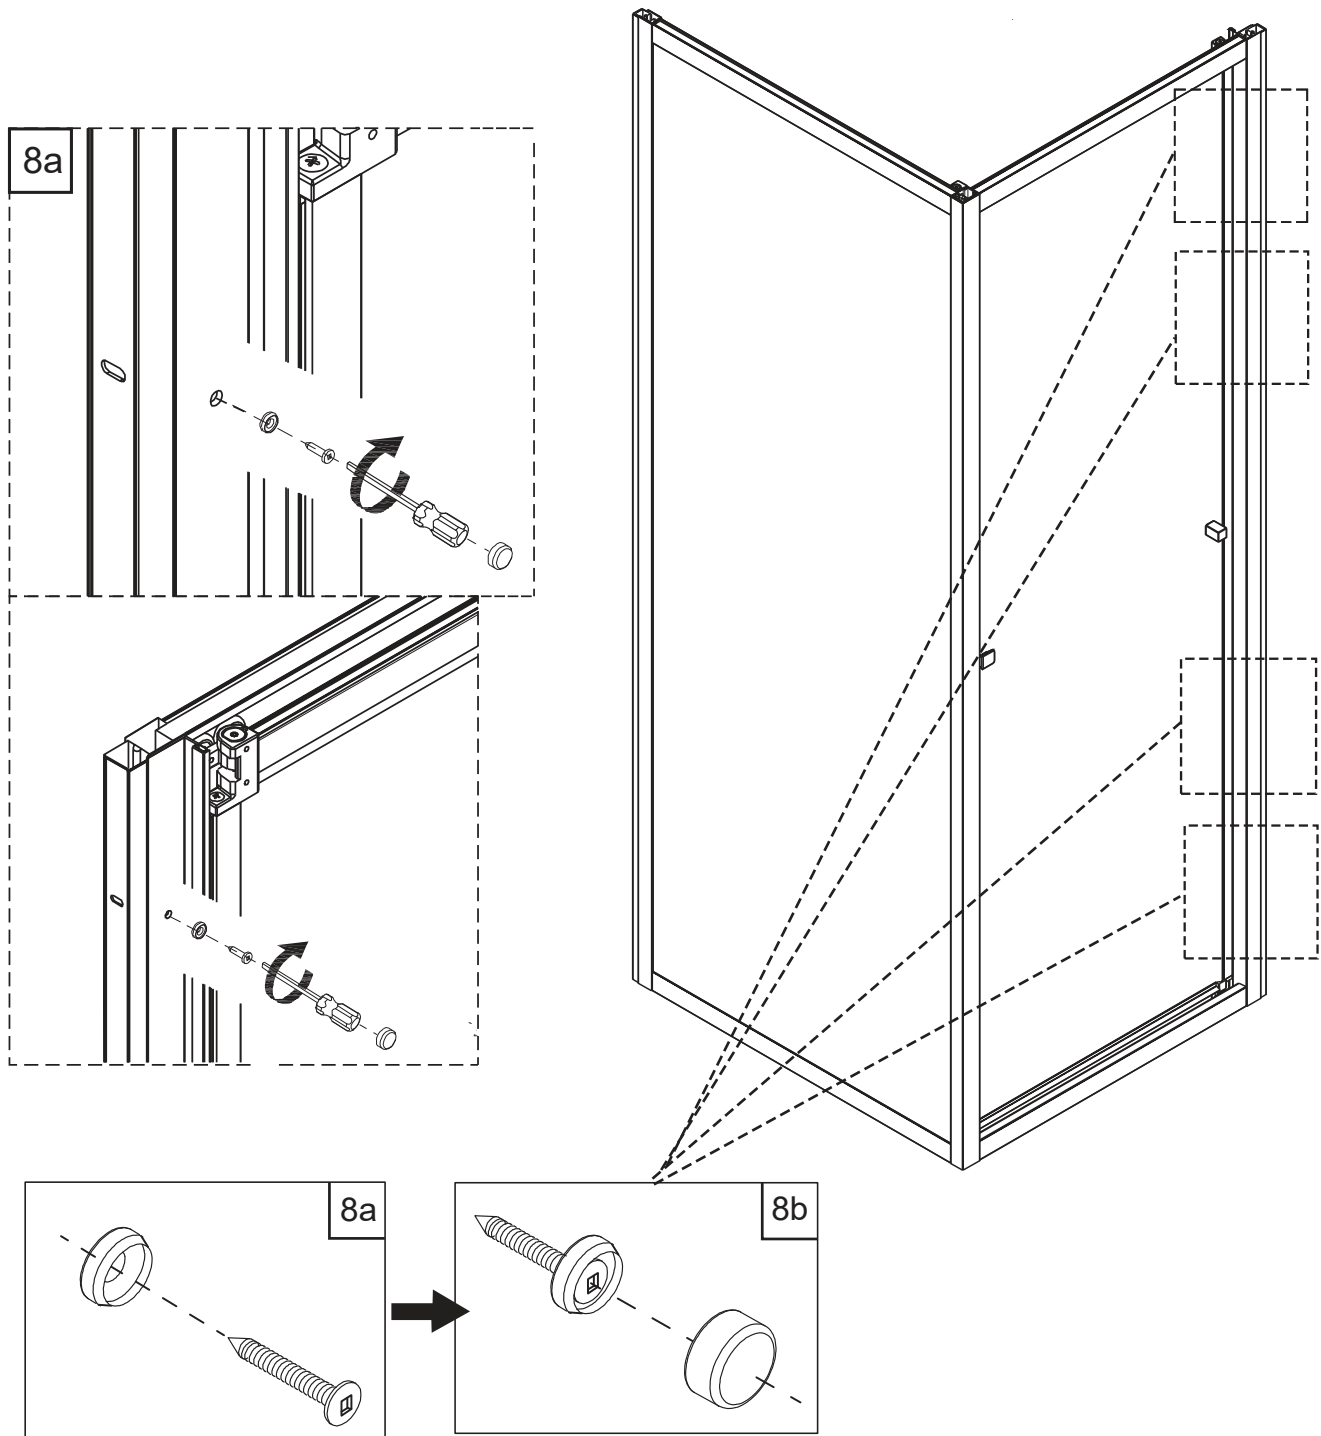


- (a) Place a screw washer over the wall retainer screw. Insert wall retainer screw with washer into the pre-drilled hole and tighten.
- (b) Place the screw cap on & repeat steps for all 4 screws in wall retainer extrusion.

9

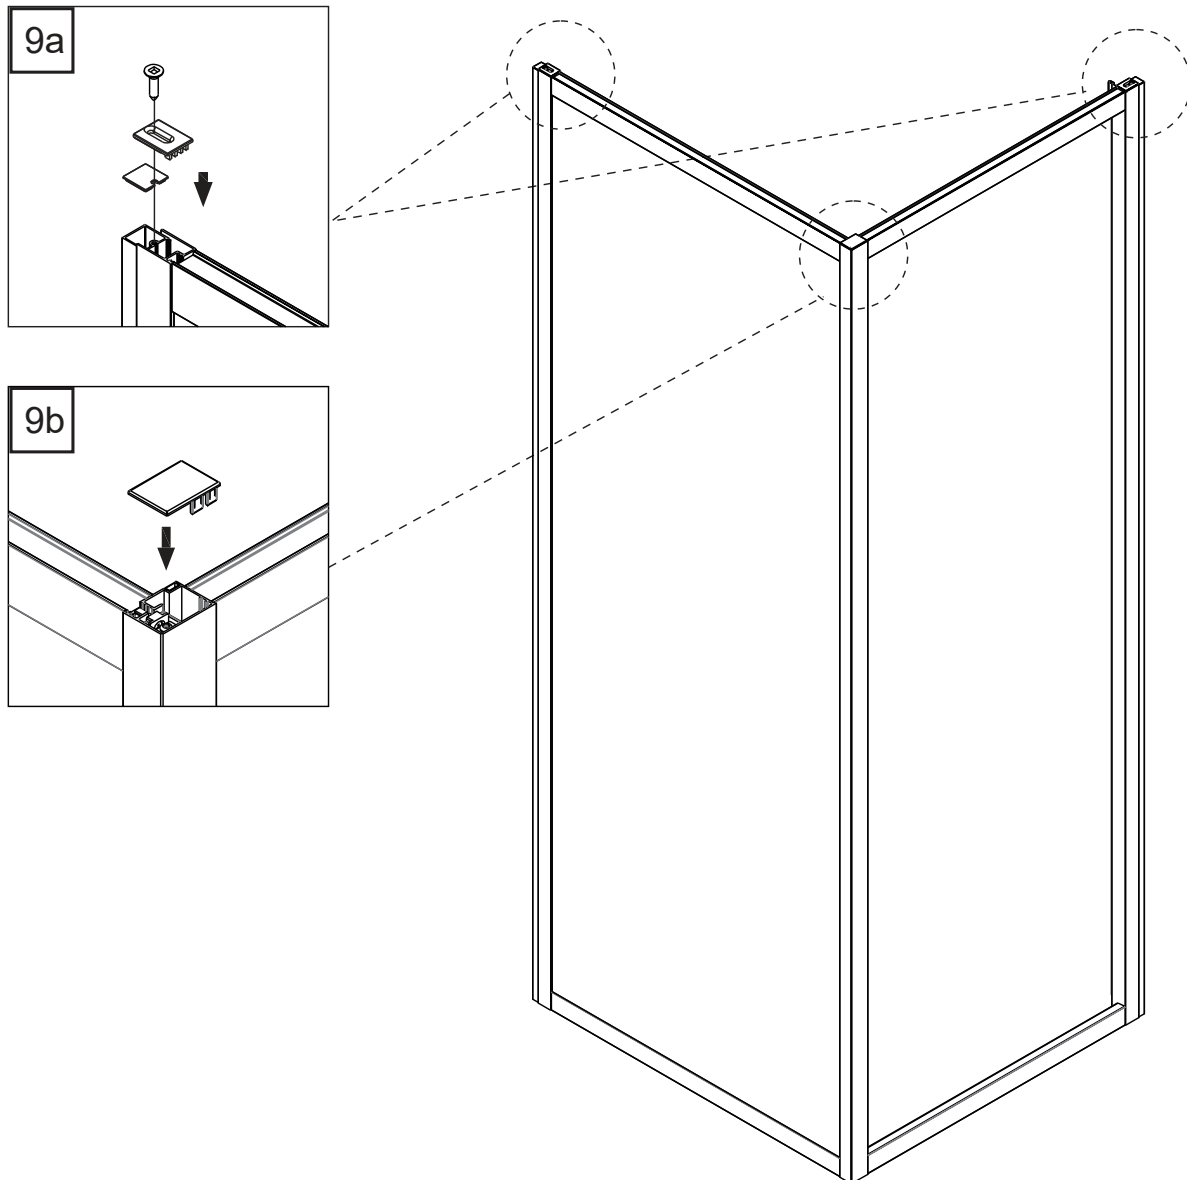

- (a) Fit the wall retainer extrusion cap and the adjustable extrusion cap over the wall retainer and secure as shown in fig 5a. to the top of the extrusions. Tighten the fixing cap screw.
- (b) Fit the corner extrusion top cap to the corner extrusion. It should 'snap' into place.


10

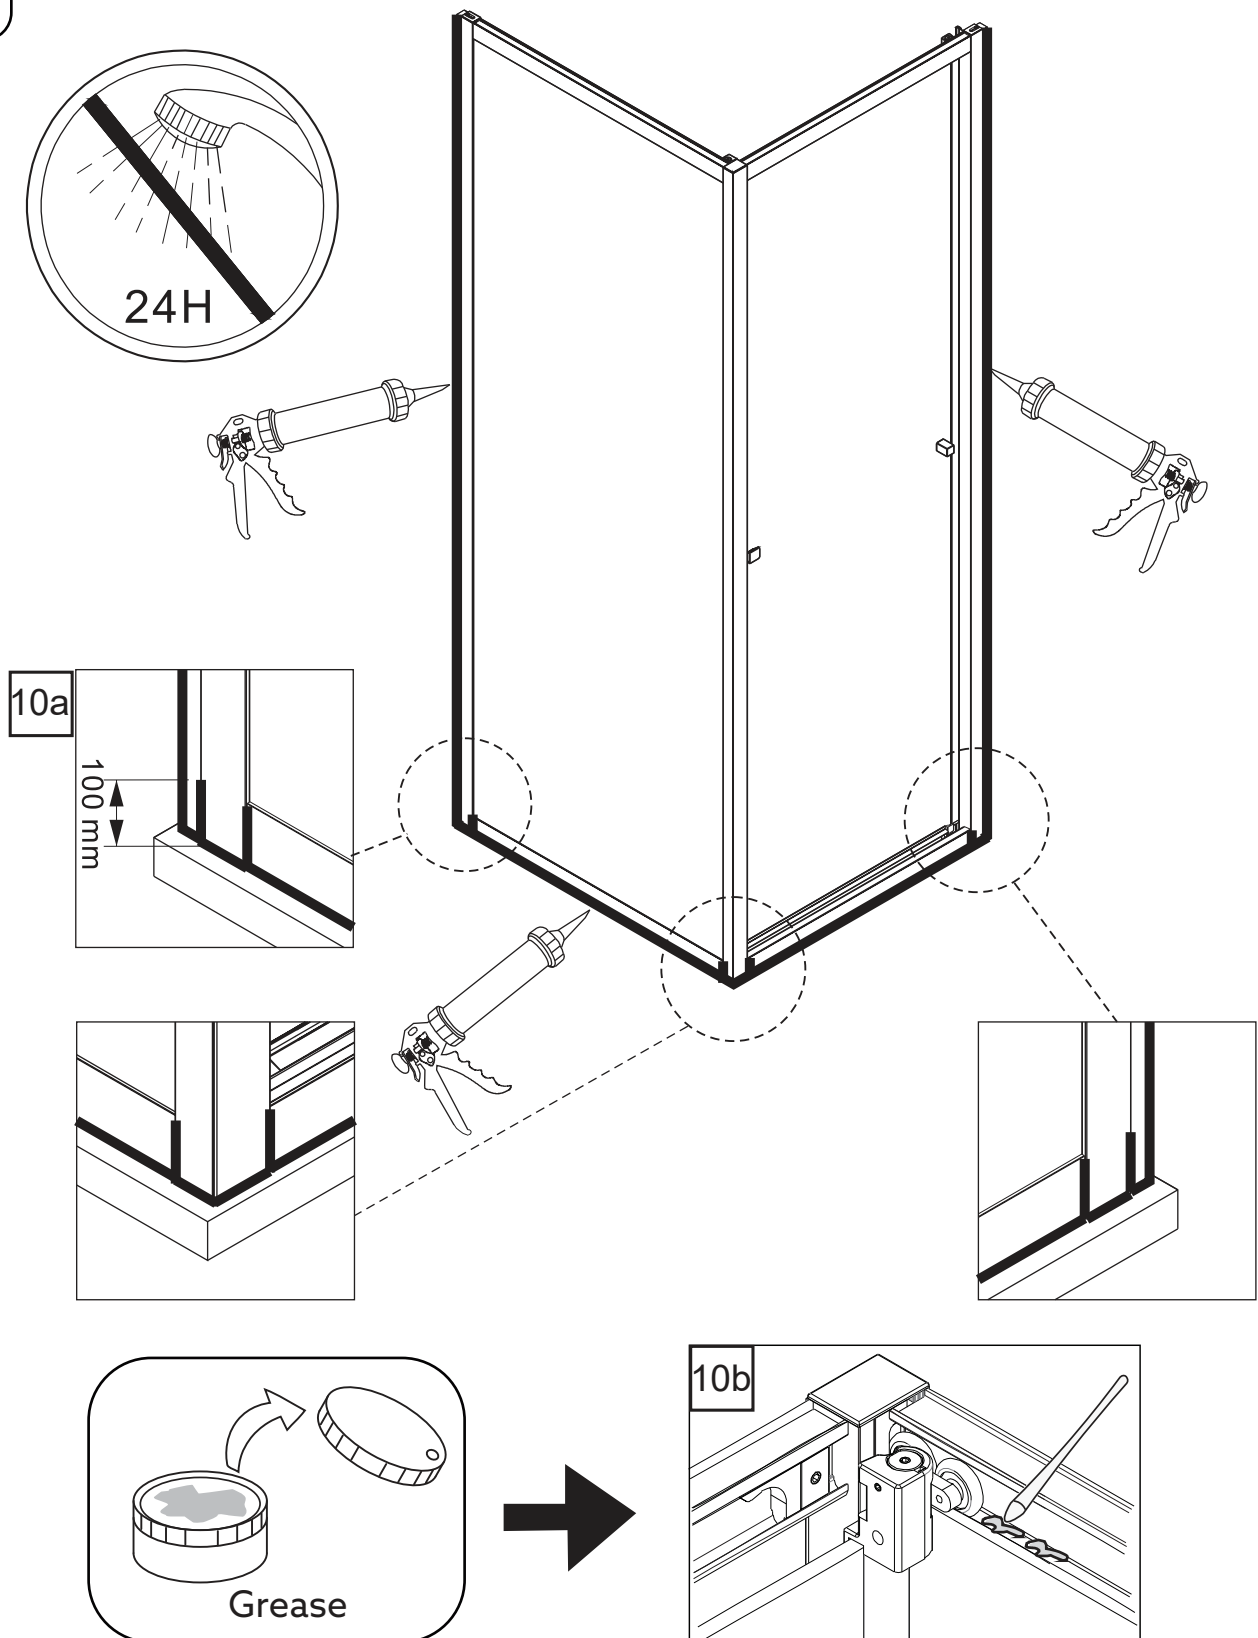


- (a) Apply sealant along the outside surfaces of the enclosure.
- Do not seal from inside.
  - Allow the silicone sealant to cure for 24 hours before use.
- (b) Lubricate the upper and lower rail channels with grease.



# SPARE PARTS: 900x900mm Left Hand Configuration

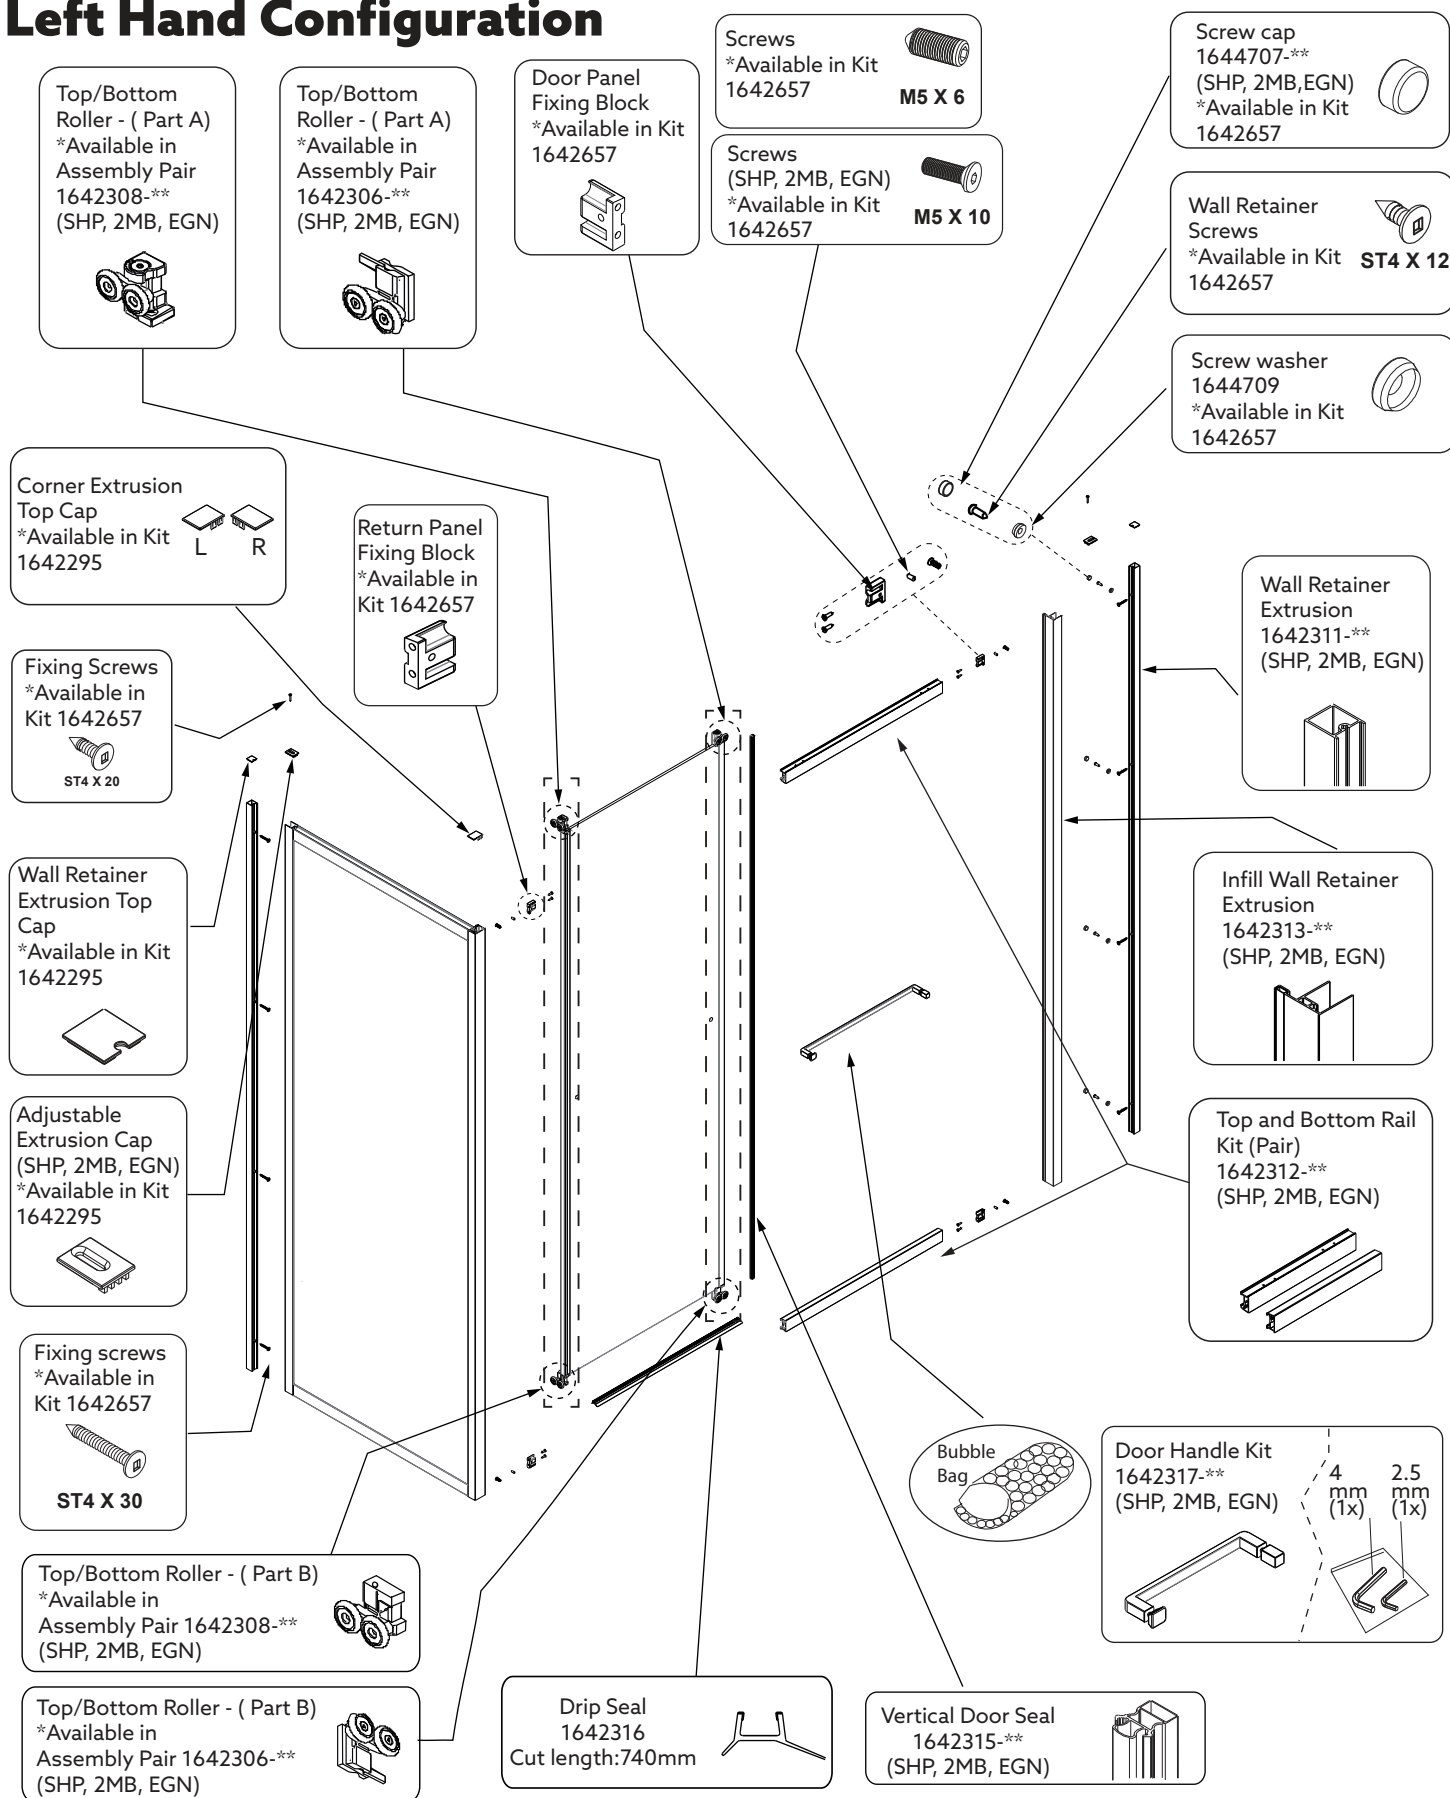

## SPARE PARTS: 900x900mm Right Hand Configuration

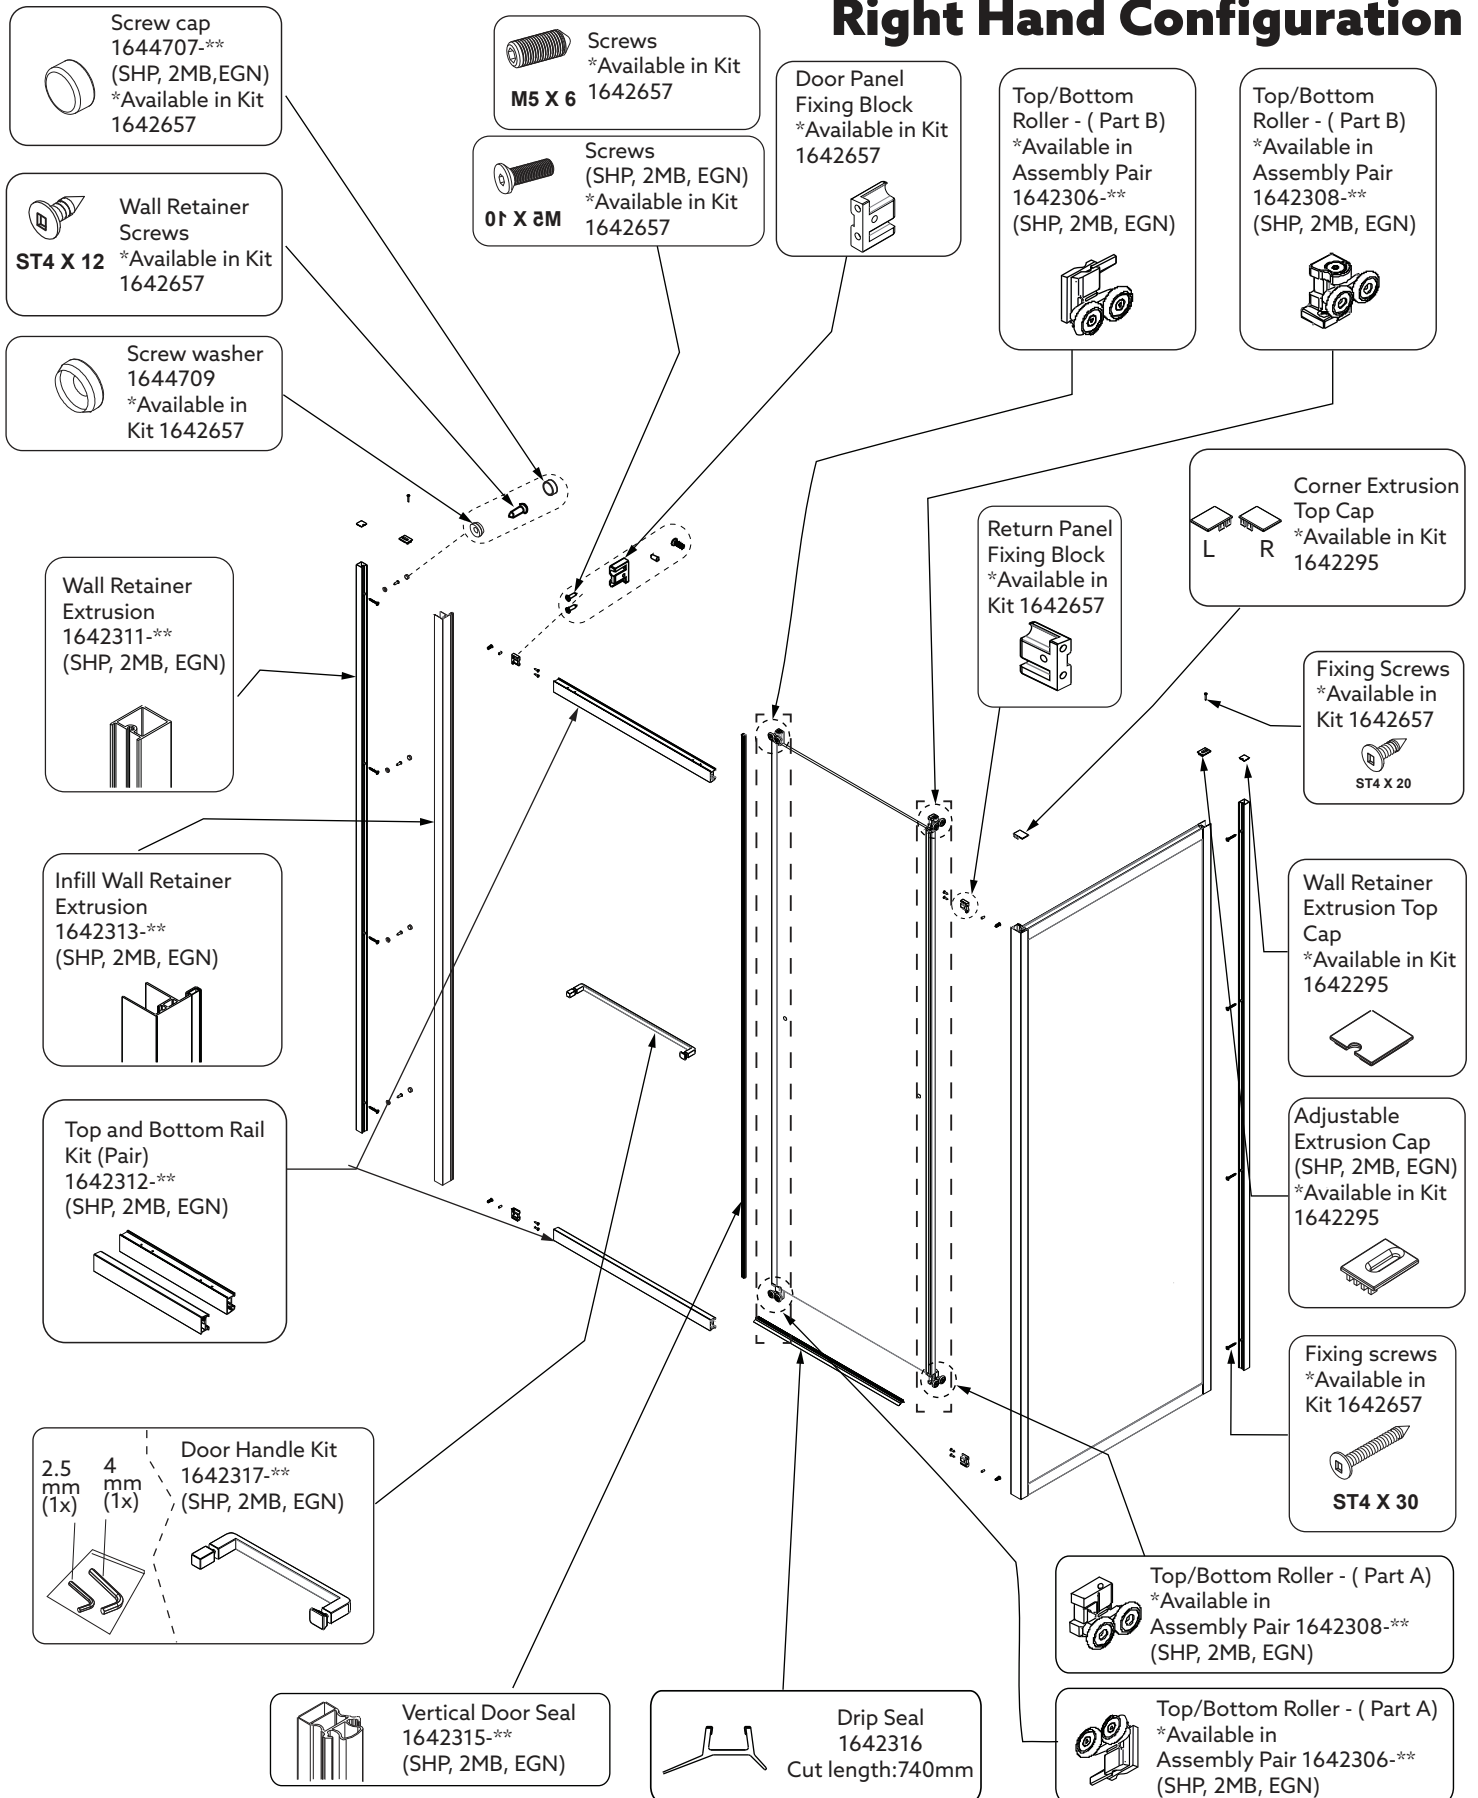

# CLEANING AND MAINTENANCE INSTRUCTIONS

Please refer to the homeowners guide and our website for cleaning instructions.




## SPARE PARTS KIT/Assembly Pair: 900x900mm










**Component Kit  
(900)  
1642295**



**Fixing Kit  
(900)  
1642657**





	2x Corner Extrusion Top Cap
	2x Wall Retainer Extrusion Top Cap
	2x Adjustable Extrusion Cap (SHP, 2MB, EGN)


	4x Wall Retainer Screws <b>ST4 X 12</b>		4x Screws <b>M5 X 6</b>		2x Door Panel Fixing Block
	4x Screw cap (SHP, 2MB, EGN)		4x Screws (SHP, 2MB, EGN) <b>M5 X 10</b>		2x Return Panel Fixing Block
	4x Screw washer		8x Fixing screws <b>ST4 X 30</b>		10x Screws <b>ST4 X 20</b>



1x  
Top and Bottom Rail Kit  
(Pair) (900)  
1642312-\*\*  
(SHP, 2MB, EGN)

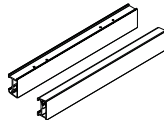

1x Door Handle Kit  
1642317-\*\*  
(SHP, 2MB, EGN)

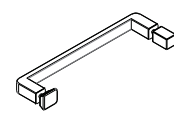


4 mm  
(1x)  
2.5 mm  
(1x)


Top/Bottom Roller Assembly Pair- Open Side 1642308-\*\* (SHP, 2MB, EGN)




Top/Bottom Roller-  
Part A  
(SHP, 2MB, EGN)




Top/Bottom Roller-  
Part B  
(SHP, 2MB, EGN)




Top/Bottom Roller Assembly Pair- Return Side 1642306-\*\* (SHP, 2MB, EGN)



Top/Bottom Roller-  
Part A  
(SHP, 2MB, EGN)



Top/Bottom Roller-  
Part B  
(SHP, 2MB, EGN)



## CONTACT AND WARRANTY INFORMATION

**NEW ZEALAND**  
**Kohler New Zealand Limited**

**AUSTRALIA**

**0800 100 382**  
**info@englefield.co.nz**  
**englefield.co.nz**

**englefield.com**

