

2"  
(5,1 cm)

2-1/2"  
(6,4 cm)

FINISHED WALL / BACK SPLASH

SUGGESTED FAUCET CENTERLINE

CUT ALONG THIS TRIM LINE

RIM OF LAVATORY

CLAMP LOCATION  
(NOTE: HOLES TO BE DRILLED FROM UNDERSIDE OF COUNTER. DO NOT PENETRATE TOP SURFACE)

14-1/2"  
(36,8 cm)

CLAMP LOCATION



# VALENCIA

UNDERCOUNTER BASIN  
TEMPLATE /  
INSTALLATION INSTRUCTIONS

72906A



16-15/16"  
(43 cm)

### CONTACT AND WARRANTY INFORMATION








For warranty information, please visit our website:

NEW ZEALAND  
KOHLER NZ LTD

AUSTRALIA  
KOHLER CO.

Free Ph: 0800 100 382  
Free Fax: 0800 664 488  
www.engefield.co.nz

Free Ph: 1800 364 533  
www.engefield.com

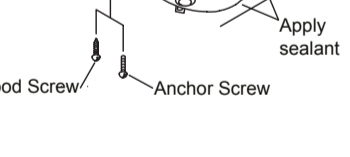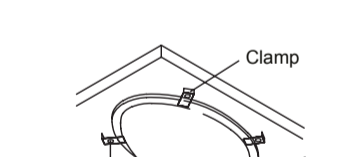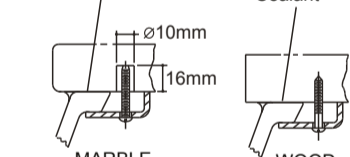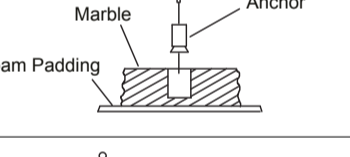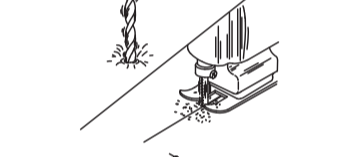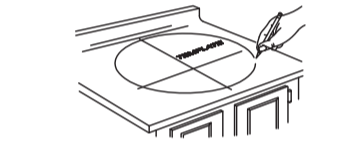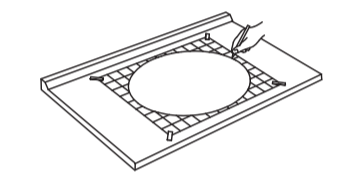

### Installation

- Cut the template on the cut-out/trim line.
- Position the template on the countertop to ensure clearance between the lavatory, faucet, and back splash. Verify cabinet clearance beneath the countertop.
- Trace the template on the counter top with a pencil.
- Check the clearance between the lavatory, faucet, back splash, and cabinet. Re-adjust the template as necessary.
- Drill a hole on the inside of the trim line for saw access.
- Cut the opening in the countertop along the inside edge of the pencil line.
- For marble countertops, be sure to follow cutting instructions from the manufacturer.

#### For wood countertop

- On the underside of the counter, mark the wood screw holes at the locations shown on the template. Pre-drill these holes, ensuring not to drill all the way through the material.
- Waterproof any exposed areas of wood.

**Note:** For wood and wood composite countertops, do not use the supplied anchors. Affix the clamps with appropriate length woodscrews, ensuring not to damage the surface.

#### For marble countertop

- Position the countertop upside down on foam padding to protect the surface. Mark and drill 10mm holes, to 16mm depth at the locations shown on the template.
- Use a setting tool (not supplied) and hammer to secure the anchors.

**Note:** The screws and anchors provided should be used only on marble countertops with a minimum 25mm thickness. For thinner countertops, use appropriate anchors and fasteners.

- If the countertop has not been installed, install it at this time.
- Drill the faucet holes according to the faucet installation instructions.
- Install the faucet to the countertop according to the manufacturer's instructions.
- Install the drain to the lavatory according to the manufacturer's instructions.
- Apply a continuous bead of appropriate, quality sealant to the lavatory rim where it will contact the countertop.
- Position the lavatory squarely under the cutout before tightening the clamps. Draw the lavatory rim up to the countertop until it is snug. Do not overtighten.
- Immediately wipe away any excess sealant.
- Make the final drain and faucet connection to complete the lavatory installation.

Be sure to follow all instructions packed with the drain and faucet.

WHEN PLOTTING TEMPLATE FULL SIZE:  
Make sure horizontal and vertical dimensions  
match the dimensions on the template.  
\* No epoxy/cement to be used to install this product.

1232244-A7-D

OVERFLOW

1232244-A7-D ©2015 KOHLER CO

ALL DIMENSIONS IN: MILLIMETERS				DIMENSIONING AND TOLERANCING PER ASME Y14.5M-1994			
TOLERANCES UNLESS OTHERWISE SPECIFIED .XX ± 0.010 .X ± 0.02 .X ± 0.1 ANG ± 3.0				APPROVED	DATE	PLOT DATE	SCALE
				THANATE P.	01.15.13	04.10.15	1:1
1	D	KW	SEE PC# THS1500XXX	04.13.15	DO NOT SCALE DRAWING AI THIRD ANGLE PROJECTION 		
1	C	KPK	SEE PC# THS1500XXX	04.10.15			
1	B	KPK	SEE PC# THS1400064	03.03.14	<b>KOHLER</b> KOHLER CO., KOHLER, WISCONSIN 53044 ASSEM NAME: VALENCIA UIC BASIN <b>TEMPLATE, CUT-OUT, ENGLISH</b>		
1	A	KPK	SEE PC# THS1400064	02.12.14			
SHT	SYM	BY	DESCRIPTION	DATE	DWG. NO. 1232244-A7		
DWG REVISION RECORD				SHT 1 of 1			

4

3

2

D

C

B

A