

MIDI / MAXI JET OPERATION AND MAINTENANCE

GENERAL


- Regular cleaning of spa jet fittings is recommended to avoid the build up of soap scum, grime and debris.
- The use of abrasive cleaning products and tools should be avoided as this can damage the jets.
- These instructions contain important care, cleaning, and warranty information-please leave these instructions for the consumer.

JET OPERATION

Water flow from back jets and side jets can be individually adjusted to suite your individual bathing requirements. Simply rotate the inner ring of the jet to increase or decrease the water flow.


Side jets also incorporate an adjustable eyeball to allow the direction of water flow to be optimised. Simply use your finger to adjust the eyeball direction.

Rotate to adjust flow rate

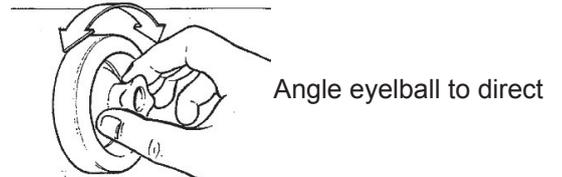


TO DISASSEMBLE AND CLEAN JETS


- 1 Push the eyeball in using the thumb.

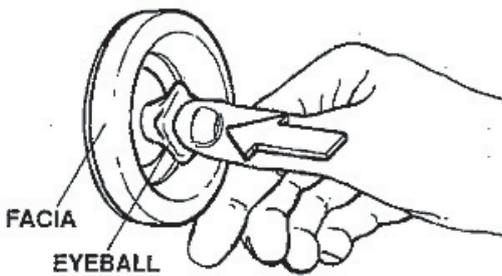


- 2 While holding the eyeball in, gently lever the facia off, either by hand or using an instrument that will not damage the bath or the facia. The eyeball and washer come off with the facia.

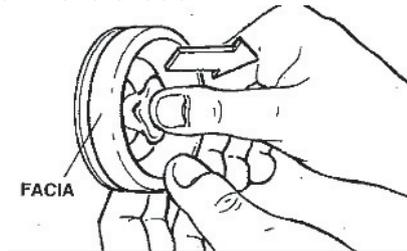


- 3 Pull the sleeve and spring out of the jet body. Note the sleeve may be jammed in place by debris and long nose pliers may be needed to remove it.

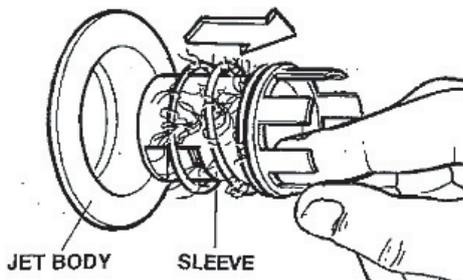


- 4 Slide the spring off the sleeve.

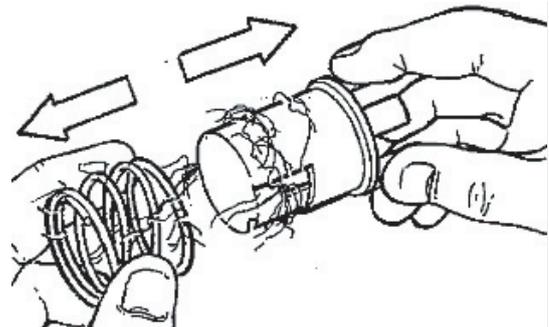

- 5 Clean out any hair or grime from inside the jet body.

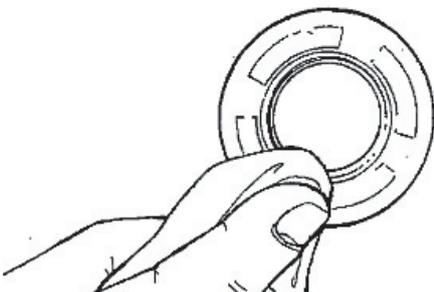


- 6 Clean off any hair or grime from the sleeve, spring, eyeball, washer and facia with a clean cloth.

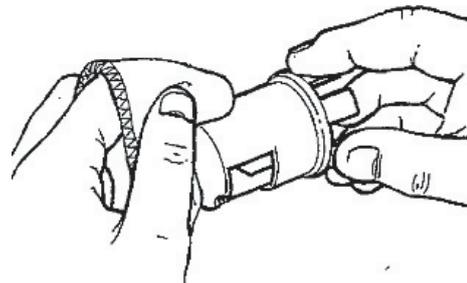


TO REASSEMBLE JETS


- 7 check spring length is 22mm, gently stretch the spring if necessary. Re-assemble the spring over the sleeve.

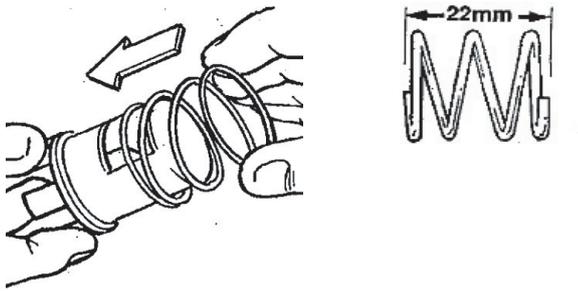


- 8 Replace the spring and sleeve into the jet body.

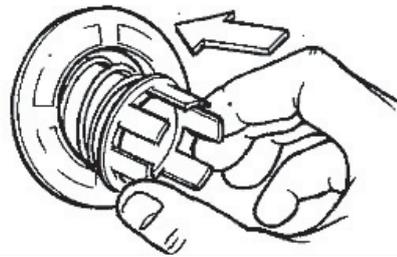


- 9 Re-assemble the two halves of the eyeball and fit into the sleeve. Note that the 6 legs on the eyeball fit between the castleations on the sleeve. Fit the washer over the stalk on the front of the eyeball.

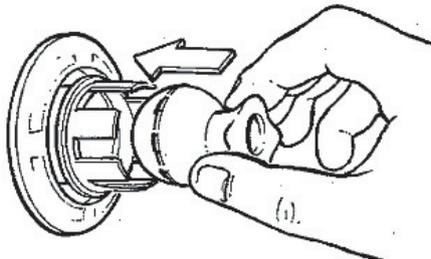

- 10 Holding the eyeball in place, gently push the fascia back into the jet body until it clicks into place.

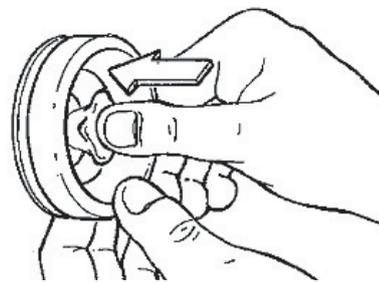

SERVICABLE PARTS

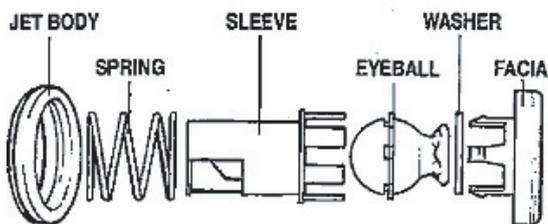

Jet cartridge - Midi Helical chrome -	T1120-CP
Jet cartridge - Midi Rotary chrome -	T1125-CP

Back jet cartridge - Scalloped chrome -	1056043-CP
Back jet cartridge - Scalloped chrome (restricted)	1056042-CP

Exploded assembly view of jet.

CONTACT AND WARRANTY INFORMATION

For warranty information, please visit our website.

Australia

www.inglefield.com

New Zealand

www.inglefield.co.nz

CALL US FOR HELP

NEW ZEALAND
KOHLE NZ LTD

Free Ph: 0800 100 382
Free Fax: 0800 664 488
www.inglefield.co.nz

AUSTRALIA
KOHLE CO.

Free Ph: 1 300 362 284
Free Fax: 1 300 652 284
www.inglefield.com