

# INSTALLATION INSTRUCTIONS




## ACCESSORIES | SIERRA™ CARE TOILET SEAT RING 32354A-NA

### BEFORE YOU BEGIN:


Before proceeding with installation, please read these instructions to familiarise yourself with the required tools, materials and installation sequences. Please leave these instructions for the consumer after installation.

Prior to installation, inspect the toilet seat to ensure that no damage has occurred in transit. If damage has occurred, or a visible defect exists, do not proceed with installation, and advise your supplier immediately.


### PARTS IDENTIFICATION:

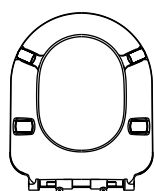

Seat ring  
x 1



Damper  
x 2



Expansion bolt  
x 2




Screw  
x 2



Hinge plate  
x 2



Hinge plate gasket  
x 2




Hinge plate cap  
x 2




Allen key  
x 1

### INSTALLATION:


1. Insert hinge set into seat fixing hole.

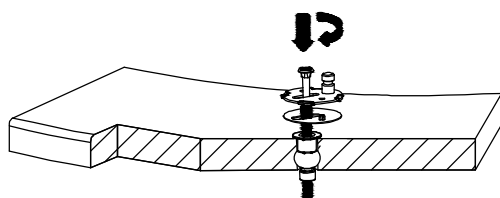


2. Assemble dampers to the seat ring.

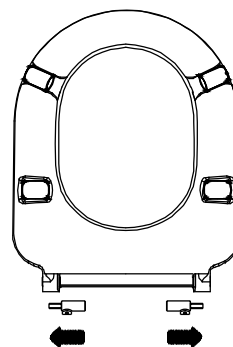


3. Connect the dampers to the hinge plates.

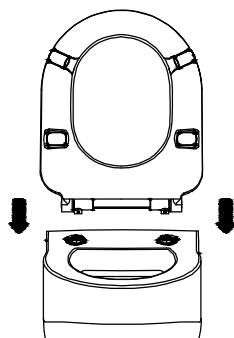


4. Align the seat ring.

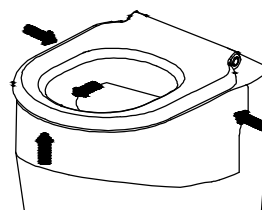

5. Gently lift entire seat ring directly upward to separate it from the hinge plates.

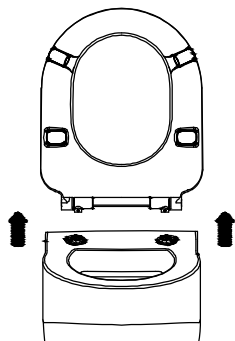


6. Tighten screws until the hinge plates are firmly fixed in place.

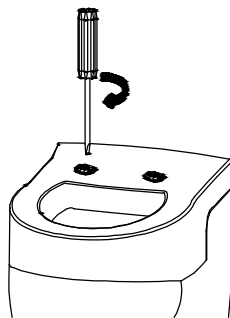

7. Place hinge plate caps onto the hinge plates.



8. Re-install seat ring back to the hinge plates and tighten it by the grub screws located in the dampers with allen key.

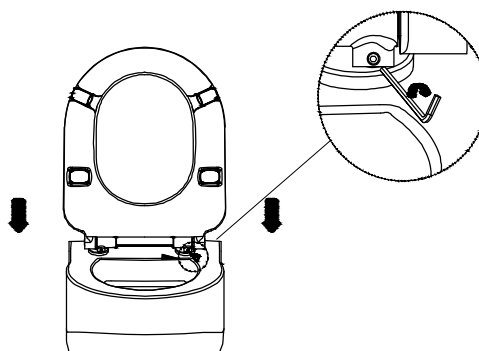

## CLEANING INSTRUCTION:

Clean the outside surface of your toilet seat with mild soap and warm water. Dry with a clean soft cloth.

Do not use any abrasive cleaners as they will scratch and dull the surface.

## CONTACT AND WARRANTY INFORMATION:

### NEW ZEALAND

#### KOHLER NZ LTD

0800 100 382

info@englefield.co.nz

englefield.co.nz

### AUSTRALIA

englefield.com

For warranty information, please visit our website.

